



Insignia NS-B4111 Battery Replacement

Prerequisite Only.

Written By: Kristin Yoshioka



Step 1 — Battery



- Unplug and remove the power cord. Turn the boombox upside down.
- Grip the sides of the case and use your thumbs to pop open the battery cover.

Step 2



- Pry out the batteries with your fingers.

To reassemble your device, follow these instructions in reverse order.