



Insignia NS-B4111 Casing Replacement

Prerequisite Only.

Written By: Kristin Yoshioka

 




TOOLS:


- [64 Bit Driver Kit](#) (1)
-

Step 1 — Casing

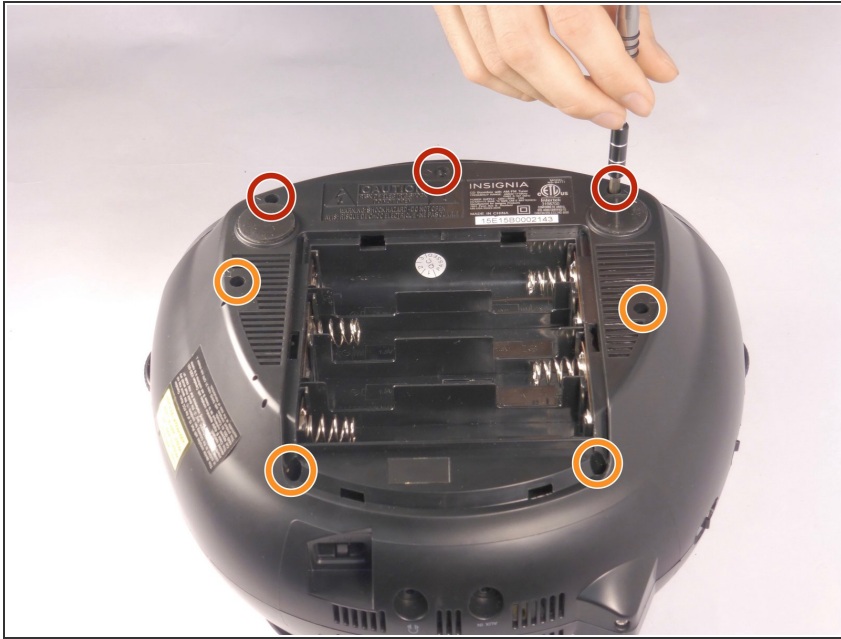

- Turn the boombox upside down again. With the Phillips PH1 or the Flathead #3 screwdriver, remove the three 14mm black screws.
- Remove the four 18mm chrome screws with the Phillips PH1 screwdriver.

 Step 2

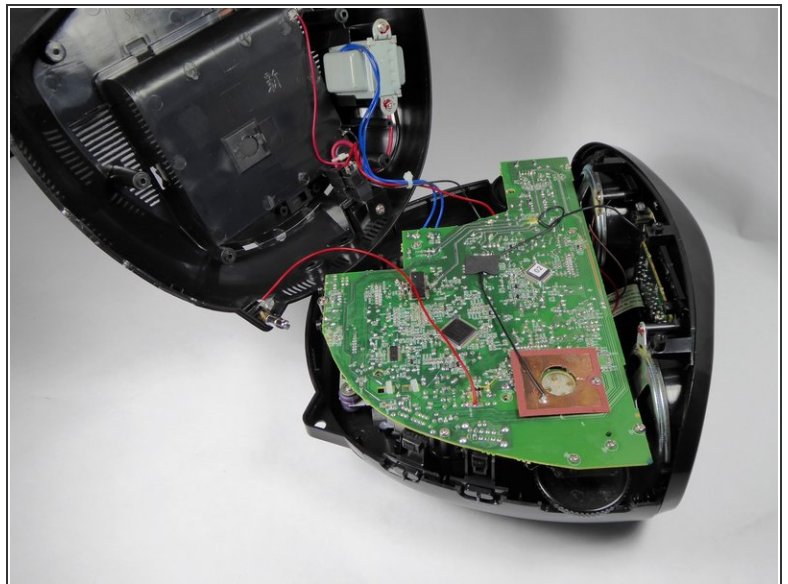

- Gently remove the bottom half of the casing from the top half of the casing.
- ⓘ The antenna base is connected to the motherboard by a red wire. This wire will prevent the two halves from separating completely.

To reassemble your device, follow these instructions in reverse order.