




Asus VivoBook Q200E-BHI3T45 Hard Drive Replacement

This guide will show you how to replace a...

Written By: Bryann Tan

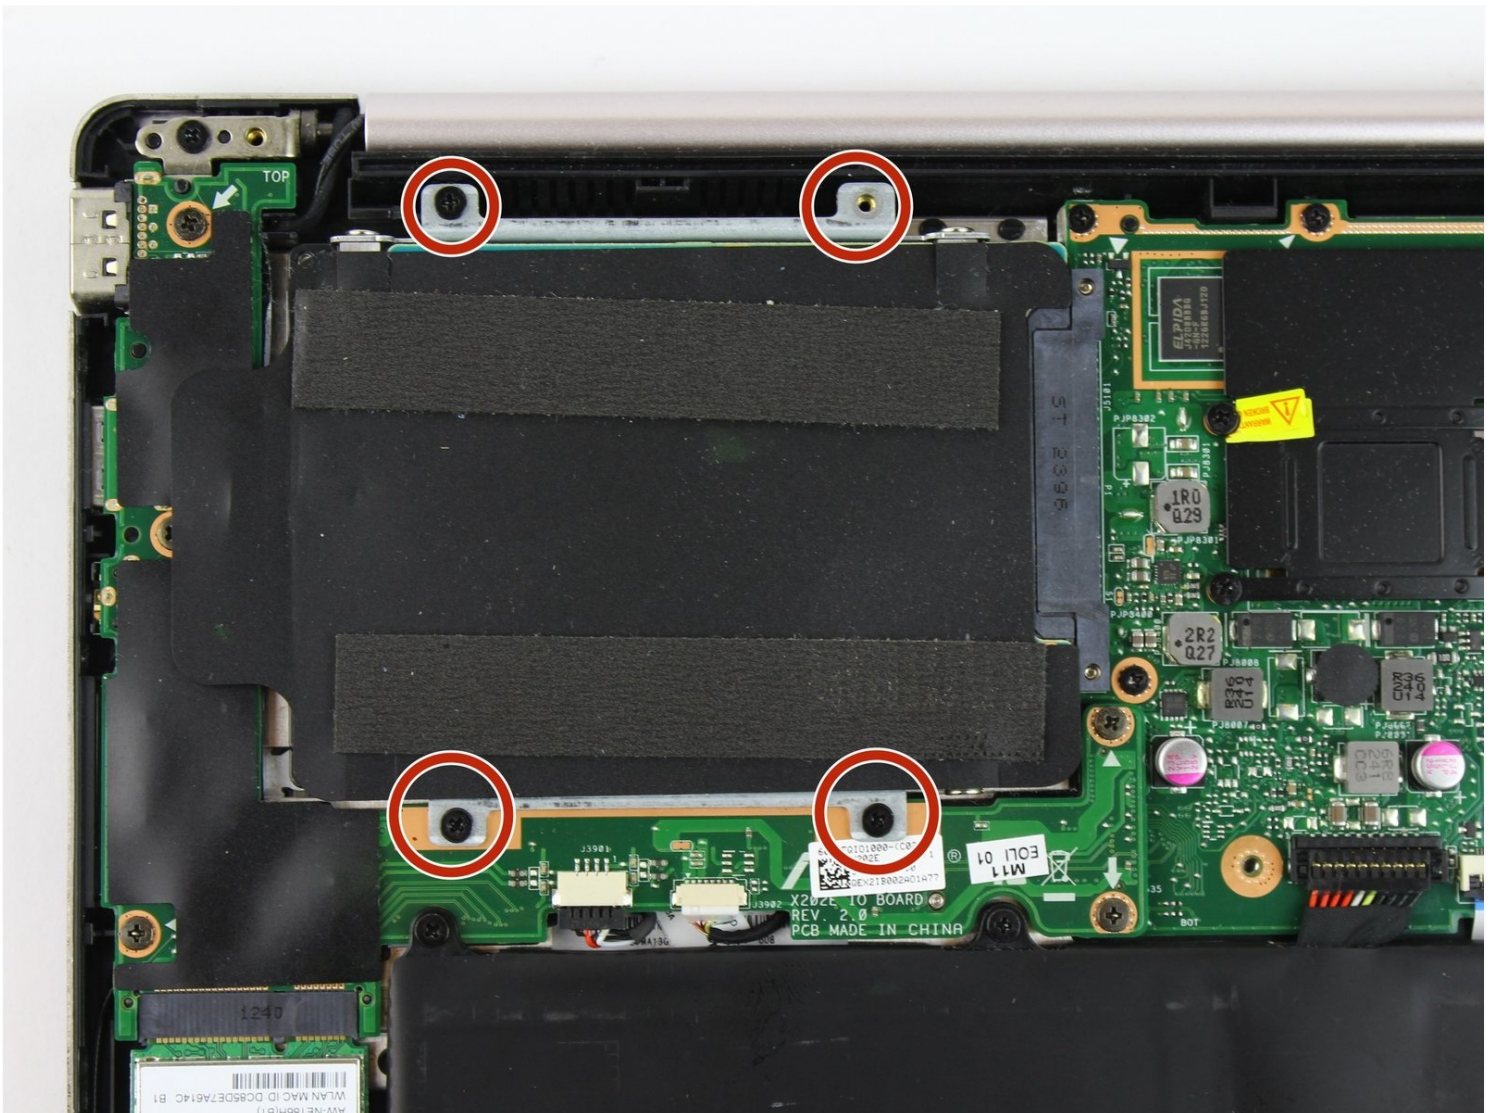

INTRODUCTION

This guide will show you how to replace a broken hard drive on the ASUS Vivobook.


TOOLS:

Phillips #0 Screwdriver (1)
iFixit Opening Tool (1)
Tweezers (1)

PARTS:

Crucial MX500 1 TB SSD (1)
Crucial MX500 250 GB SSD (1)
Crucial MX500 500 GB SSD (1)
2 TB SSD (1)

Step 1 — Battery

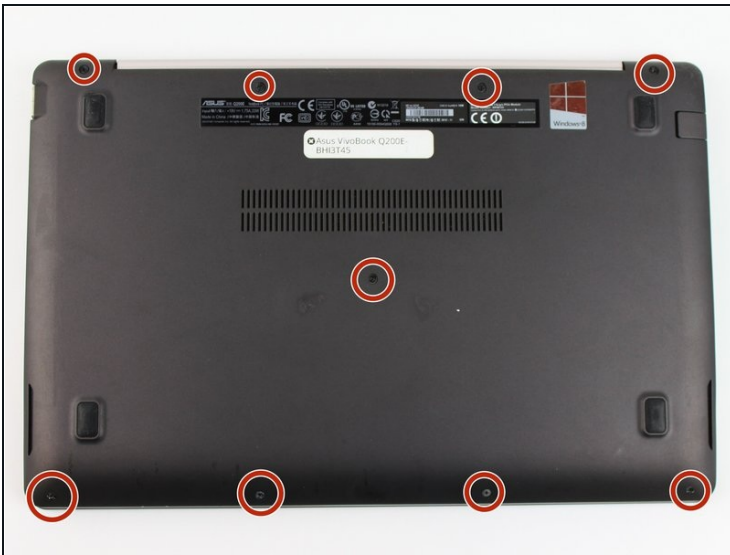


- Use a Phillips 0 screwdriver to remove nine Phillips screws from the back of the laptop (four 7mm from the top hinge, four 5mm from the bottom hinge, and one 10mm screw from the center).

Step 2





- Use a plastic opening tool to pry the back panel off.

Step 3

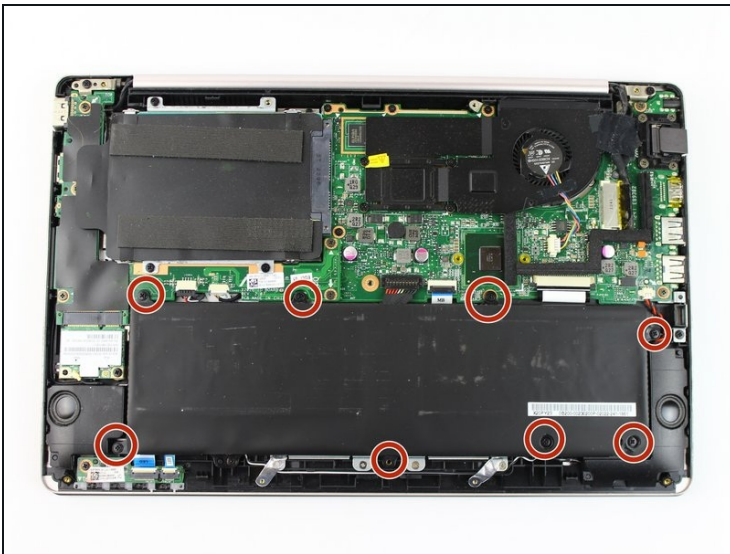


- Use a Phillips 0 screwdriver to remove the eight 5mm Phillips screws holding the battery in place.

Step 4

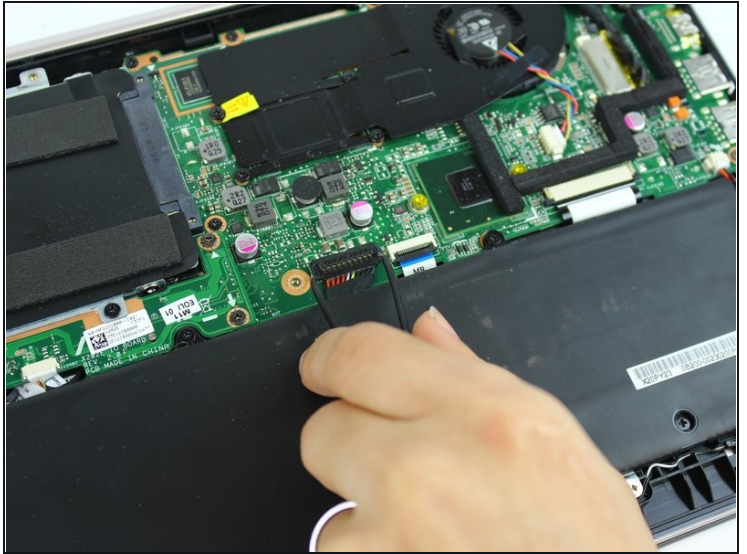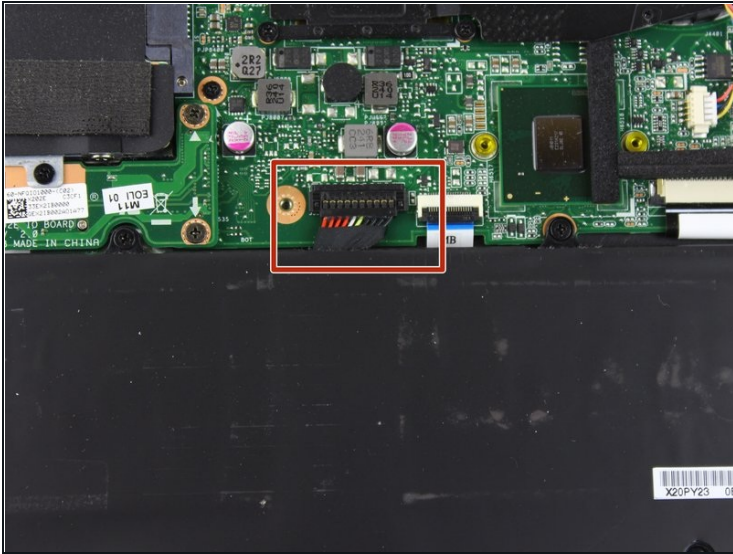



- Remove the ribbon cable with a pair of [tweezers](#).

Step 5

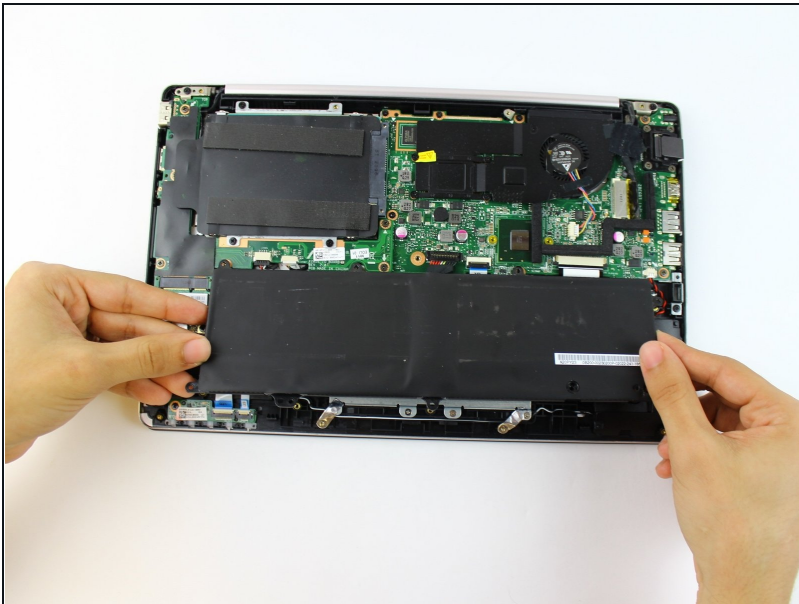

- Lift and remove the battery.

Step 6 — Hard Drive

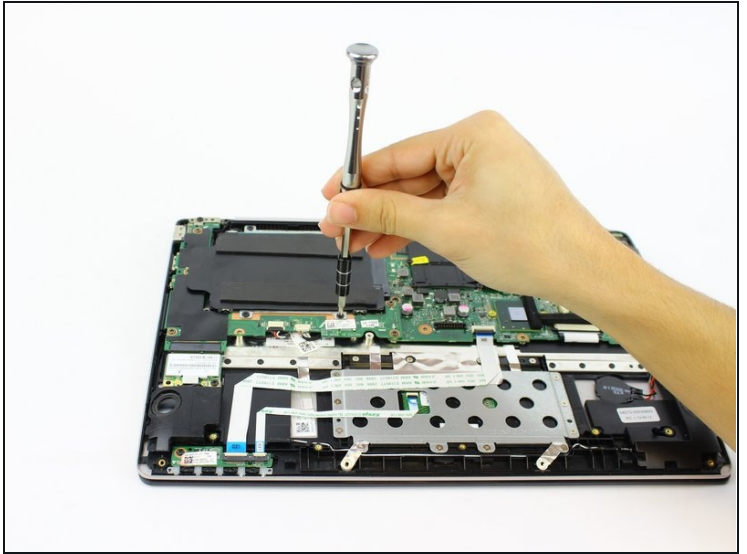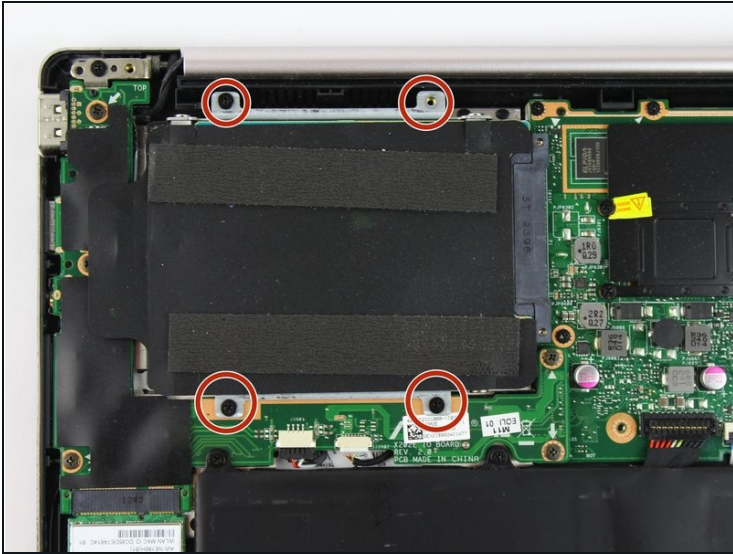




- Remove four 4mm screws using a Phillips 0 screwdriver.

Step 7



- Pull out hard drive bracket towards the edge of the laptop.

Step 8

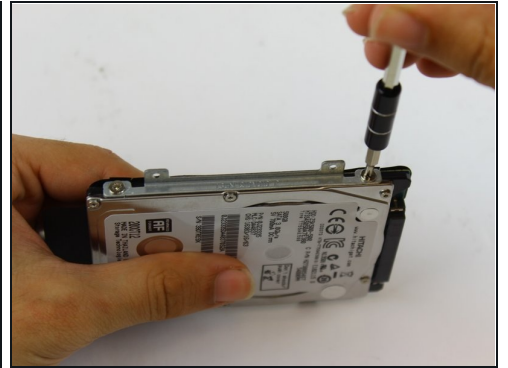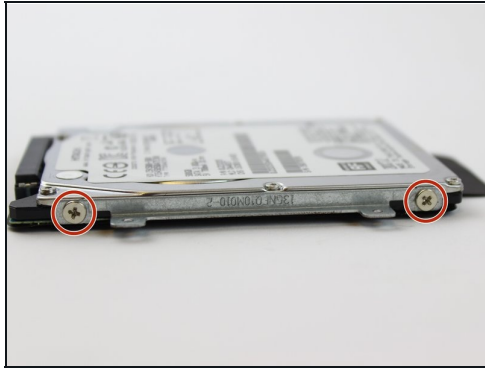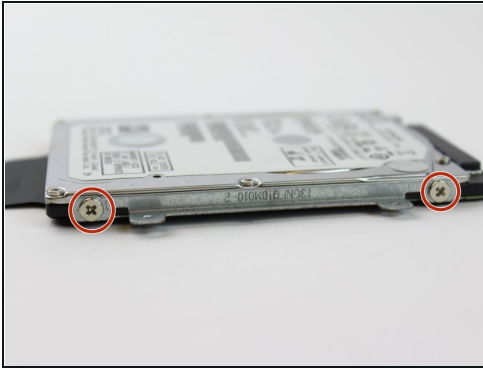

- Remove two 3mm screws using a Phillips 0 screwdriver from each sides of the hard drive bracket. The bracket should fall off after removal.

To reassemble your device, follow these instructions in reverse order.