



# Roku 3 Remote Control Buttons Replacement

This guide is for replacing the buttons on your Roku 3 remote control.

Written By: Isobelle Espiritu



---

## INTRODUCTION

If your remote control buttons are no longer working effectively, this guide will show you how to replace the buttons on your remote.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Remote Control Battery



- Flip the remote over so that the buttons are facing down and the end with the wrist strap is nearest your right hand.

## Step 2



- Press and hold the black tab above the battery compartment.
- While holding down the tab with your left hand, slide down the battery compartment cover with your right hand to remove it.

### Step 3



- Remove the batteries by placing a finger on one end of the battery and pushing downward while pulling the battery out.

### Step 4 — Remote Control Buttons



- Unscrew one 7 mm Phillips #0 screw from the center of the battery compartment.

## Step 5



- Gently pry open the remote using the plastic opening tool.

## Step 6



- Separate the top and bottom of the remote casing.
- Gently place each half of the remote onto a table so that the exteriors are face down.
- ⓘ The remote buttons, sensors, and motherboard are not attached to anything inside the remote. Take apart the remote with caution to ensure these components do not accidentally fall out.

## Step 7



- Carefully flip over the front casing side of the remote so that the buttons drop onto the table.
- ⓘ If the buttons do not drop immediately, use your fingers to peel them off the front casing of the remote.

To reassemble your device, follow these instructions in reverse order.