



# AcuRite 02032 Base Replacement

PREREQUISITE ONLY Removing four screws to detach the base to give access to the inside of the machine. Necessary step to fix and/or replace all parts (excluding batteries).

Written By: Ben Kegel



---

## INTRODUCTION

This guide will instruct how to open up the casing of the Acurite 02032 weather center. This guide is very simple to follow and only requires a screwdriver. A screwdriver with a longer extension is recommended to reach deep screws.



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Battery



- Remove the battery compartment lid by lifting upward.

## Step 2



- Pull the ribbon to eject the 2 X AA alkaline batteries.

## Step 3



- Once the batteries are removed, it is safe to proceed.

## Step 4 — Base



- Remove the four 0.8cm screws that attach the bottom panel to the device
- ⓘ An extended driver is needed to reach 3 of these screws. If you are using the 64 - bit driver kit you can extend the driver by inserting the driver PH1, (Phillips size 1) into the size 4 hexagonal adapter.



## Step 5



- Gently lift the top section of the weather center away from the base. With all the screws removed it should lift off easily.

To reassemble your device, follow these instructions in reverse order.