

Samsung Galaxy Tab 4 Motherboard Replacement

This guide will demonstrate how to disassemble...

Written By: Peter Oliver



INTRODUCTION

This guide will demonstrate how to disassemble your Samsung Galaxy Tab 4 7.0 Sprint in preparation for replacing the front-facing camera, rear-facing camera, or the vibrating mechanism.



iFixit Opening Tool (1) Tweezers (1) Phillips #00 Screwdriver (1)

Step 1 — Motherboard



- Insert the plastic opening tool into the gap between the device frame and the back panel on any side of the device.
- Slide the opening tool around the edges of the device to disconnect the back panel from the frame.




• Carefully remove the back panel from the frame of the device.

Step 3



• Using a Phillips #00 Screwdriver, remove the five 4 mm screws connecting the motherboard to the frame of the device.

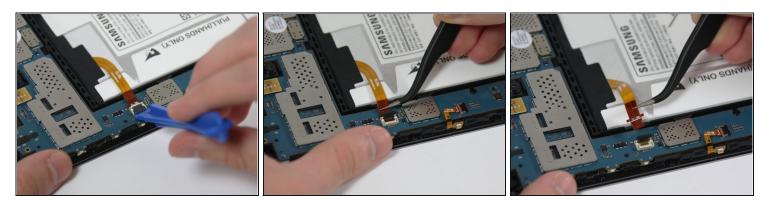

- Use the plastic opening tool to unlock the battery wire from the motherboard by flipping-up the small retaining flap.
- Use the <u>tweezers</u> to carefully remove the battery wire from the motherboard by pulling it away from the retainer flap.

Step 5



- Use the plastic opening tool to unlock the wire on the narrow section of the motherboard by flipping-up the retaining flap.
- Use the tweezers to carefully remove the wire from the motherboard by sliding it away from the retaining flap.



• Disconnect the wire near the bottom of the motherboard by placing the plastic opening tool under the edge of the connector to flip it up.

Step 7



• Disconnect the wire near the top of the motherboard by placing the plastic opening tool under the edge of the connector to flip it up.







- Gently remove the motherboard from the frame of the device by grabbing the top and bottom ends and pulling it toward you.
- ② Several plastic tabs keep the motherboard in place, so you will have to apply some force.

To reassemble your device, follow these instructions in reverse order.