



Acer One 10 S1002 145-A Key Replacement

Replace broken or damaged key on detachable keyboard.

Written By: Shannon Griffin




INTRODUCTION

Sometimes an unlabeled, broken, or missing key on your device can be replaced with new a key. This guide shows you how to replace a key with one from a manufacturer or similar device.

TOOLS:


- [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Key

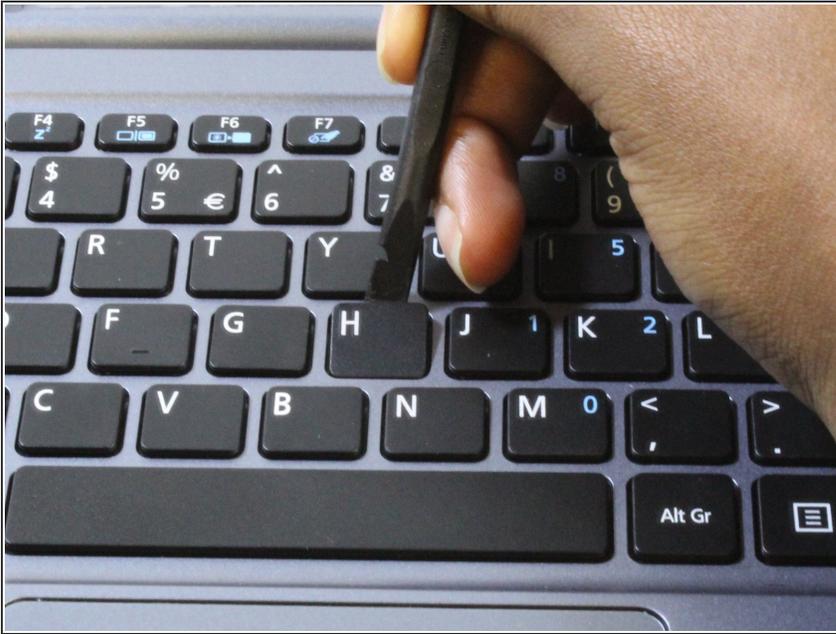

- Make sure device is powered off and disconnected from any power supply.
- Disconnect the tablet screen from the magnetic hinge where the keyboard is attached.
- Pry off the damaged key by using the nylon spudger to gently push the key upwards.

Step 2

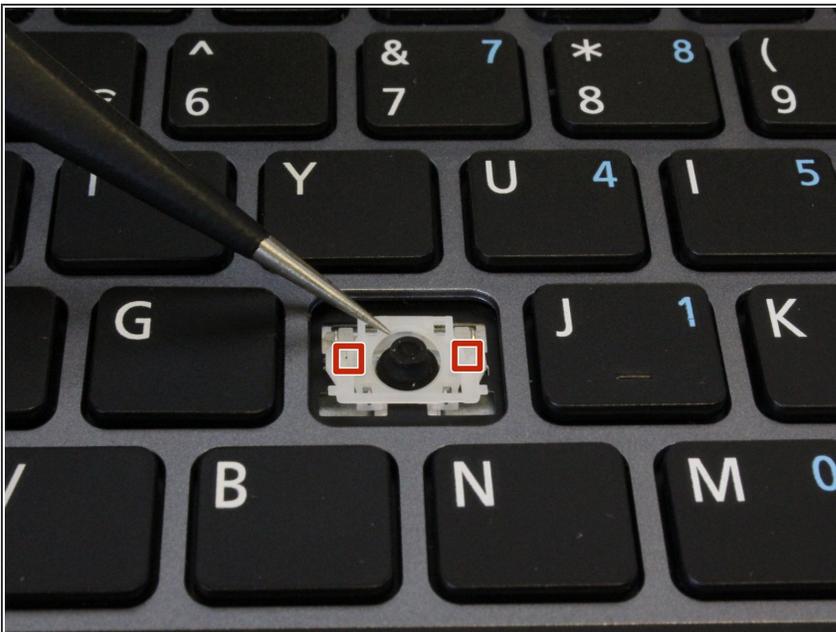

- ⚠ If the white plastic horizontal spring becomes misaligned, re-align and pop the two hinges back into place with the tweezers or your fingers.

To reassemble your device, follow these instructions in reverse order.