



Shark Rotator NV502 Suction Hose Replacement

Replacing the suction hose on the Shark Navigator NV502

Written By: Caroline Swanson



INTRODUCTION

If there is a loss of suction, an easy first check is the suction hose. Remove the suction hose and examine it for rips and breaks, replacing it if needed.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)



PARTS:


- [Shark Rotator NV502 Suction Hose](#) (1)

Step 1 — Suction Hose



- Remove the bottom part of the hose from the vacuum by pressing on the tabs on each side of the nozzle.

Step 2

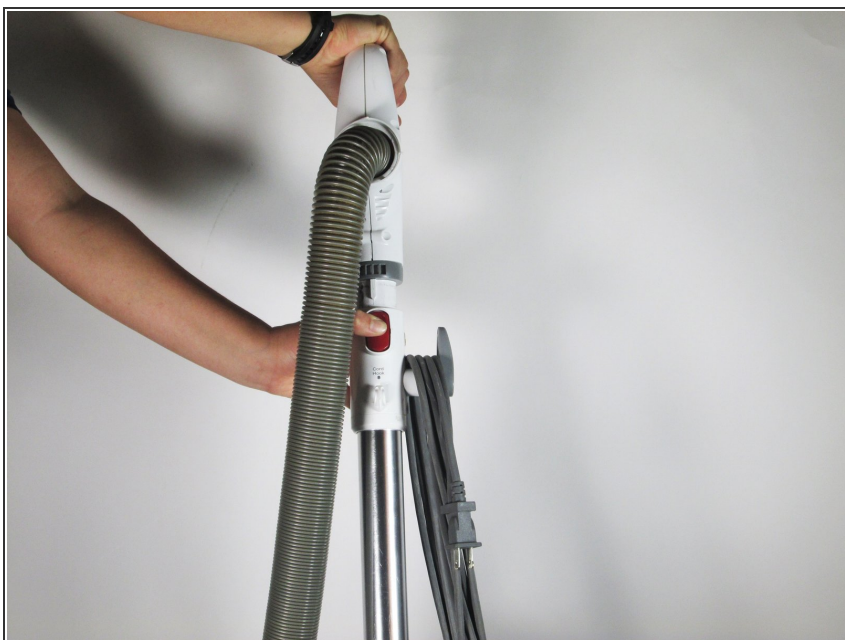

- Remove the handle from the top of the vacuum with the suction hose attached.

Step 3



- Remove the six 12 mm screws using the Phillips #2 screwdriver holding together the handle of the vacuum.

Step 4



- Remove the cover of the handle.
- Remove the suction hose from the handle.

To reassemble your device, follow these instructions in reverse order.