

# **Creative Zen Vision M Screen Replacement**

If your screen is flickering, blacked out, or cracked, this guide will assist you.

Written By: Kirstie G



#### **INTRODUCTION**

This guide demonstrates how to replace a screen. You will need a one mm Phillips head screwdriver. Keep in mind that the Creative Zen Vision was released in 2005 and discontinued shortly after that. So it may be difficult to obtain a new screen to use as a replacement.



## **TOOLS:**

- Flathead Screwdriver (1)
- 1mm phillips head screwdriver (1)
- Phillips #0 Screwdriver (1)

#### Step 1 — Opening the top





- Pop off the top plastic on the device with a flat tool like a flathead screwdriver.
- Unscrew and remove the two exposed Phillips head screws.

## Step 2 — Opening the device





- Work your way around the recess of the device with a flat tool like a flathead screwdriver.
- Don't try attempt to open it from the recess between the buttons and the device.

#### Step 3 — Disconnecting the battery








- Disconnect the wire from the bottom device.
- Handle with care as the wires tend to disconnect easily.

#### Step 4 — Disconnecting the hard drive




- In the top right corner, pull the black foam square off to separate the hard drive from the screen.
- Handle with care as the hard drive also comes off easily.

#### Step 5 — Unscrewing from the mother board

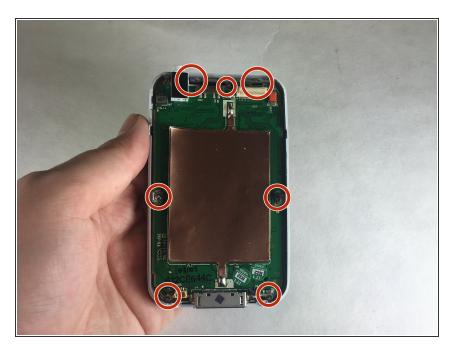

- Unscrew the seven screws placed around the mother board.
- You will need a one millimeter Phillips head screwdriver.
- The screws are small, so keep them safely.

## Step 6 — Disconnecting the screen from the motherboard

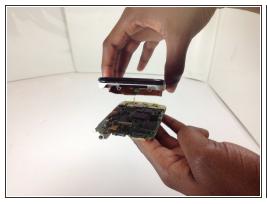





- Flip your device upside down so that the motherboard will loosen.
- Detach the connector from the motherboard.

#### Step 7 — Removing the screen





- Tilt the screen diagonally. Separate the screen and motherboard from the device frame.
- Lift the light gray flap to detach the screen from the motherboard.

## Step 8 — Seperating the digital display





Separate the clear screen frame from the digital display.

To reassemble your device, follow these instructions in reverse order.