



# Coby Kyros MID7012 Battery Replacement

This guide is to replace the battery in your Coby Kyros MID7012. Be careful not to scratch the screen or crack the faceplate when opening the tablet. Use extreme caution when removing the battery, it could have electricity stored within it.

Written By: Daniel Ulrich





## TOOLS:

- [Metal Spudger](#) (1)
  - [Heavy-Duty Spudger](#) (1)
  - [Soldering Iron](#) (1)
-

## Step 1 — Battery



- Wedge the metal spudger in between the faceplate and the body of the tablet.

## Step 2






- Carefully pry the faceplate away from the body of the tablet.

### Step 3



- Carefully lift the screen and set it face down on a soft surface to not scratch it.

### Step 4

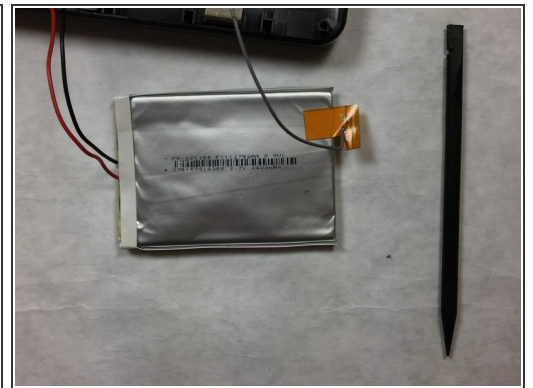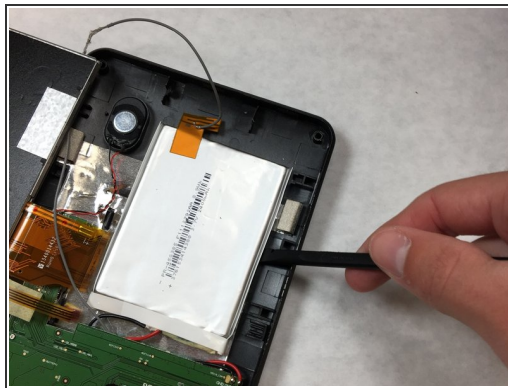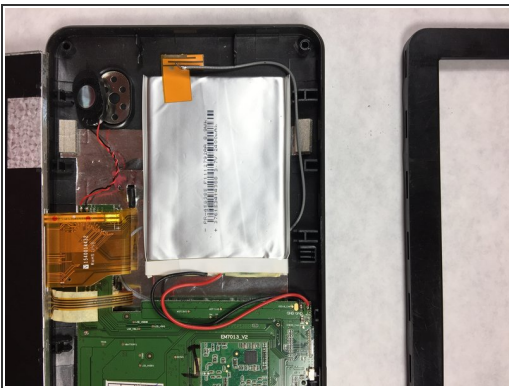

- Carefully pry the battery away from the body of the tablet using the plastic spudger.

## Step 5



- Using a soldering iron heat up the location where the wire meets the motherboard. Remove the red wire first, then the black wire.
- Clip the grey wire about an inch from the ribbon using a sharp object.
- Here are some tips on how to [Solder](#).

To reassemble your device, follow these instructions in reverse order.