



# AcuRite 02032 Wind Cup Assembly Replacement

A guided to relace the entire Acurite Wind Cup Assembly with a new part bought online.

Written By: Ben Kegel





## TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [JIS Driver Set](#) (1)
-

## Step 1 — Battery



- Remove the battery compartment lid by lifting upward.

## Step 2



- Pull the ribbon to eject the 2 X AA alkaline batteries.

## Step 3



- Once the batteries are removed, it is safe to proceed.

## Step 4 — Base




- Remove the four 0.8cm screws that attach the bottom panel to the device
- ⓘ An extended driver is needed to reach 3 of these screws. If you are using the 64 - bit driver kit you can extend the driver by inserting the driver PH1, (Phillips size 1) into the size 4 hexagonal adapter.

## Step 5



- Gently lift the top section of the weather center away from the base. With all the screws removed it should lift off easily.

## Step 6 — Wind Cup Assembly

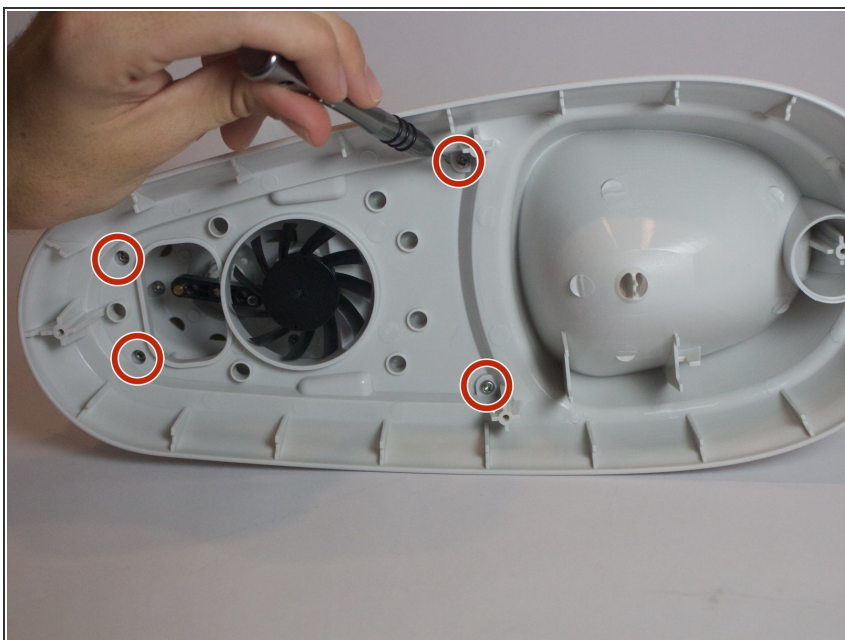

- Remove the four 0.8cm screws inside the case located near the fan using the J1 screw bit.

## Step 7



- With all four screws removed, the wind cup assembly should lift straight up off the middle section.

⚠ Set down the bottom half of the weather center careful. There are two small pegs that will break with the slightest amount of pressure.

## Step 8



- Replace the old wind cup assembly with the new assembly that was purchased.

To reassemble your device, follow these instructions in reverse order.