



# Vizio VTAB1008 Digitizer (Touchscreen) Replacement

This guide will show how to replace a faulty, or a cracked digitizer (also known as a touchscreen) with a new working component.

Written By: Gilberto Ambriz



# INTRODUCTION



Hello! This guide will show you how to replace the digitizer on your Vizio VTAB1008.



## TOOLS:


- [iFixit Opening Tool](#) (1)
  - [Tweezers](#) (1)
  - [JIS Driver Set](#) (1)
-

## Step 1 — Vizio VTAB1008 Back Cover Removal

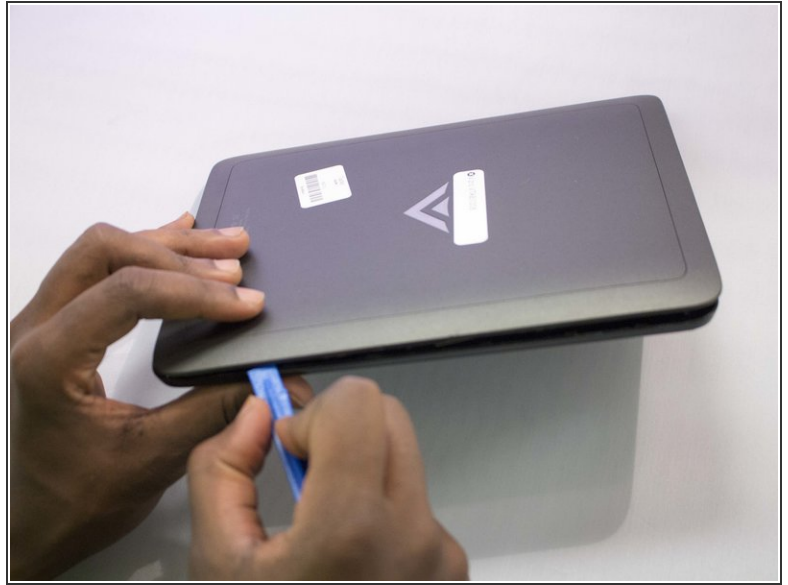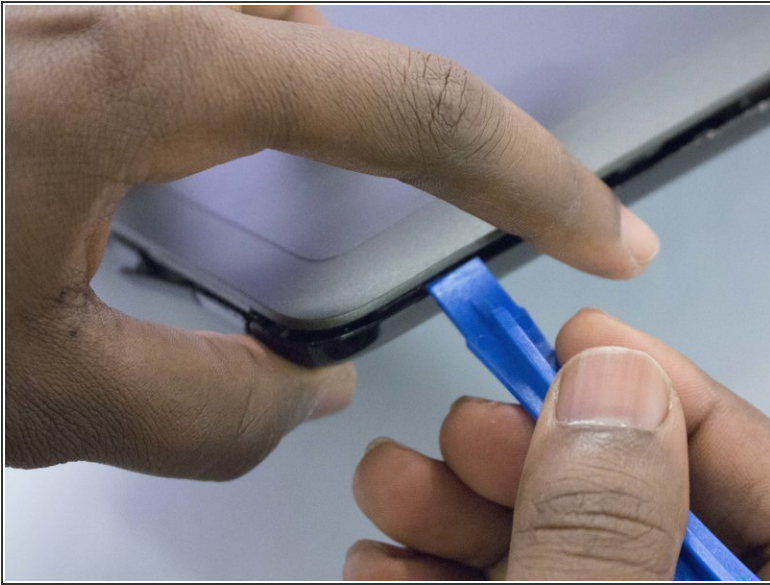




- Carefully slide the heavy duty opening tool between the gap on the side of the device with no buttons.
- ⓘ Do not insert the opening tool too far into the tablet as this can damage connectors close to edges of the cover.
- ⓘ The angled tip of the opening tool can be wedged into the device by pressing on the back of the opening tool with the thumb. Move the opening tool in a sliding motion to ensure all tabs separate.
- Corner tabs may require a more forceful prying tool. If needed, carefully insert the metal prying tool into corners to separate the tabs.

## Step 2

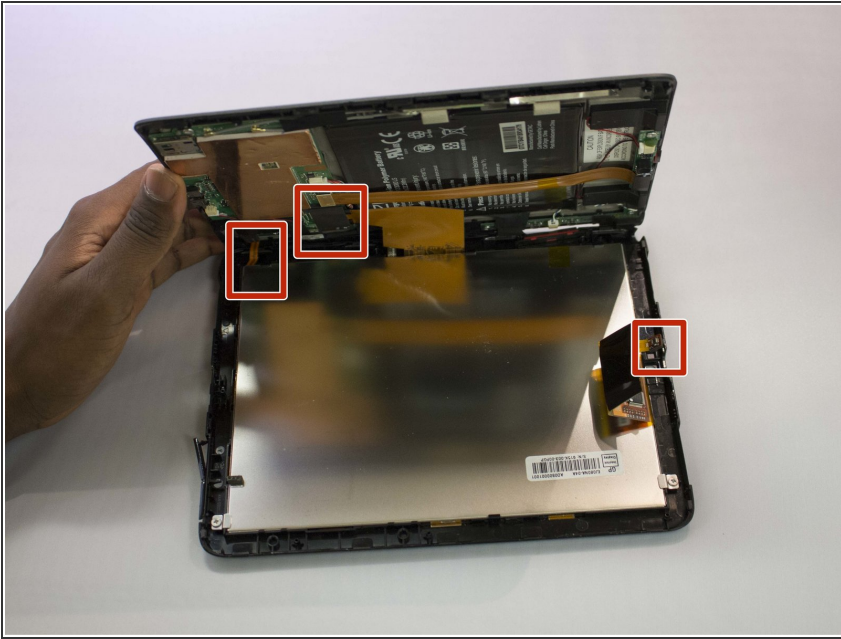


- Look into the tablet for loose connectors.
- ❗ There are three loose connectors: one for the screen, one for the digitizer, and one for the motherboard. They are held in place by the pressure of the backing and screen assemblies.
- Flip the backing from the button-less side over, being careful not to separate the ribbon connector from the display screen.

## Step 3 — Digitizer/Touch Screen

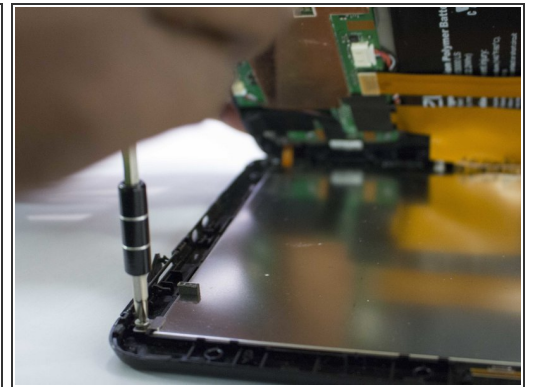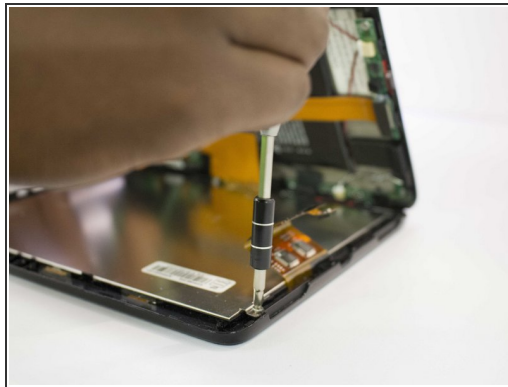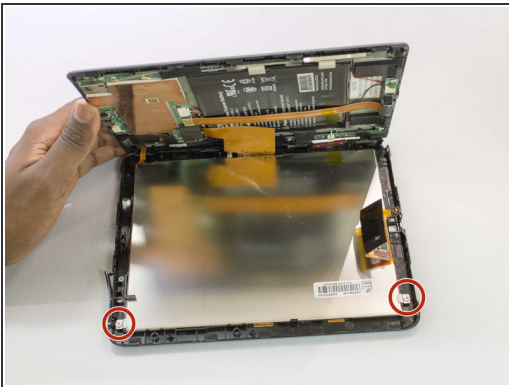

- Remove the two screws present using the J1 Screw bit.
- ❗ The screw has a head size of 4.3 mm and is 3 mm tall.


## Step 4

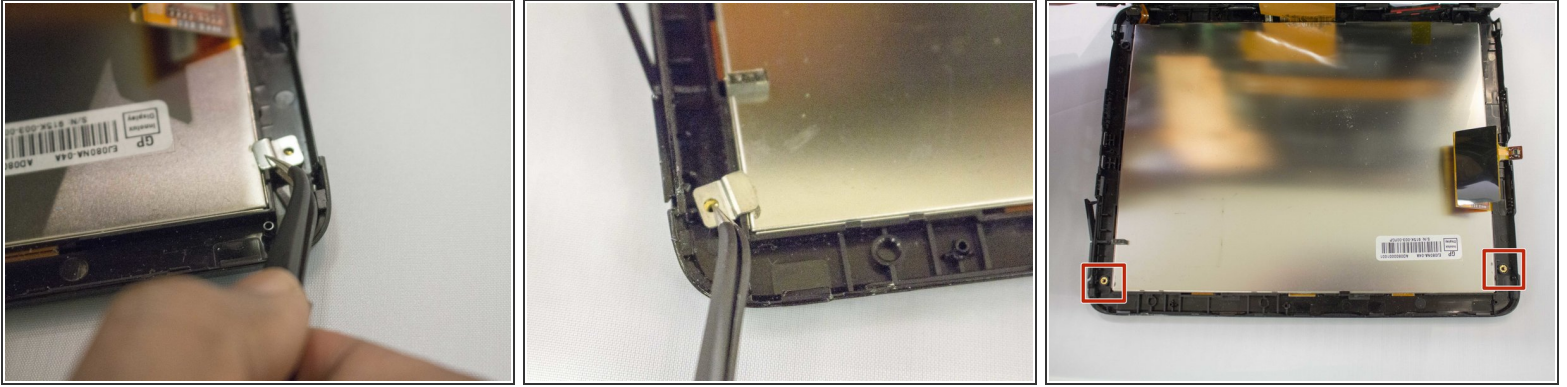

- Remove the two brackets accompanying screws by lifting them up and away from the screen.

**i** Brackets are 8.5 mm by 6.55 mm.


## Step 5

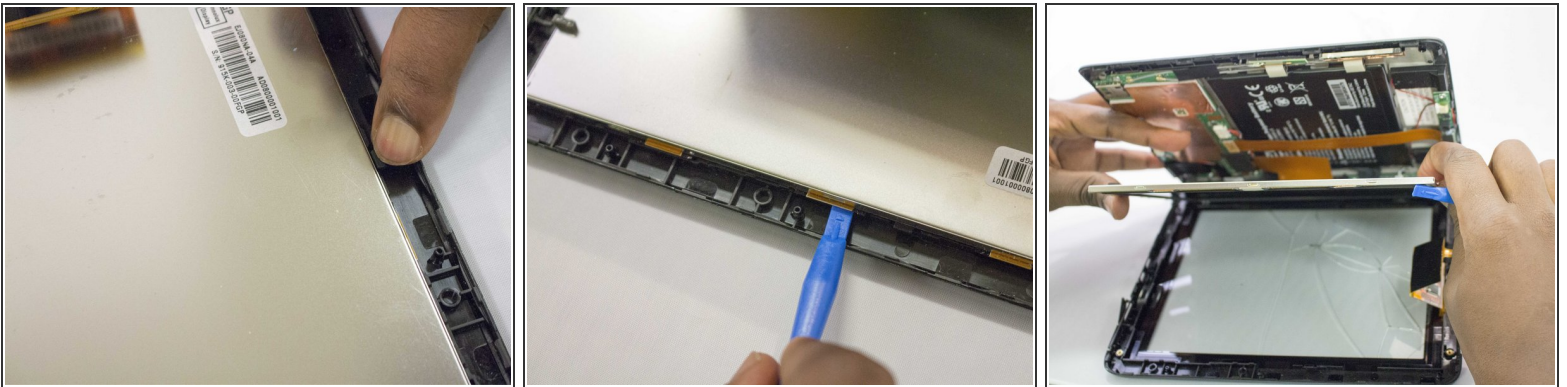

- Separate the screen digitizer from the display screen, noting the placement of the quick disconnect ribbon cable.

**i** Use a spudger if necessary to assist in the separation.

## Step 6

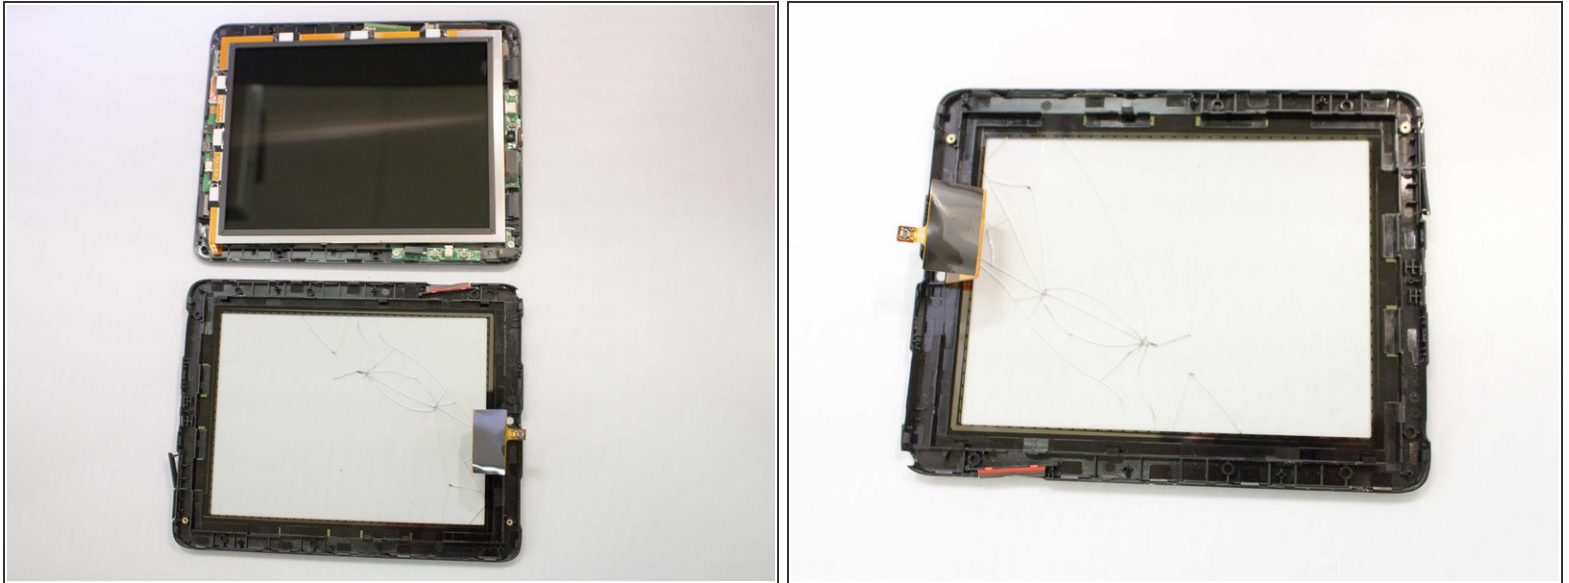

- The digitizer should now be able to be freely removed.

To reassemble your device, follow these instructions in reverse order.