




Belkin NetCam HD Microphone Replacement

This guide will show you the steps in replacing the microphone in your Belkin NetCam HD+.

Written By: Destinie DiazVerdejo

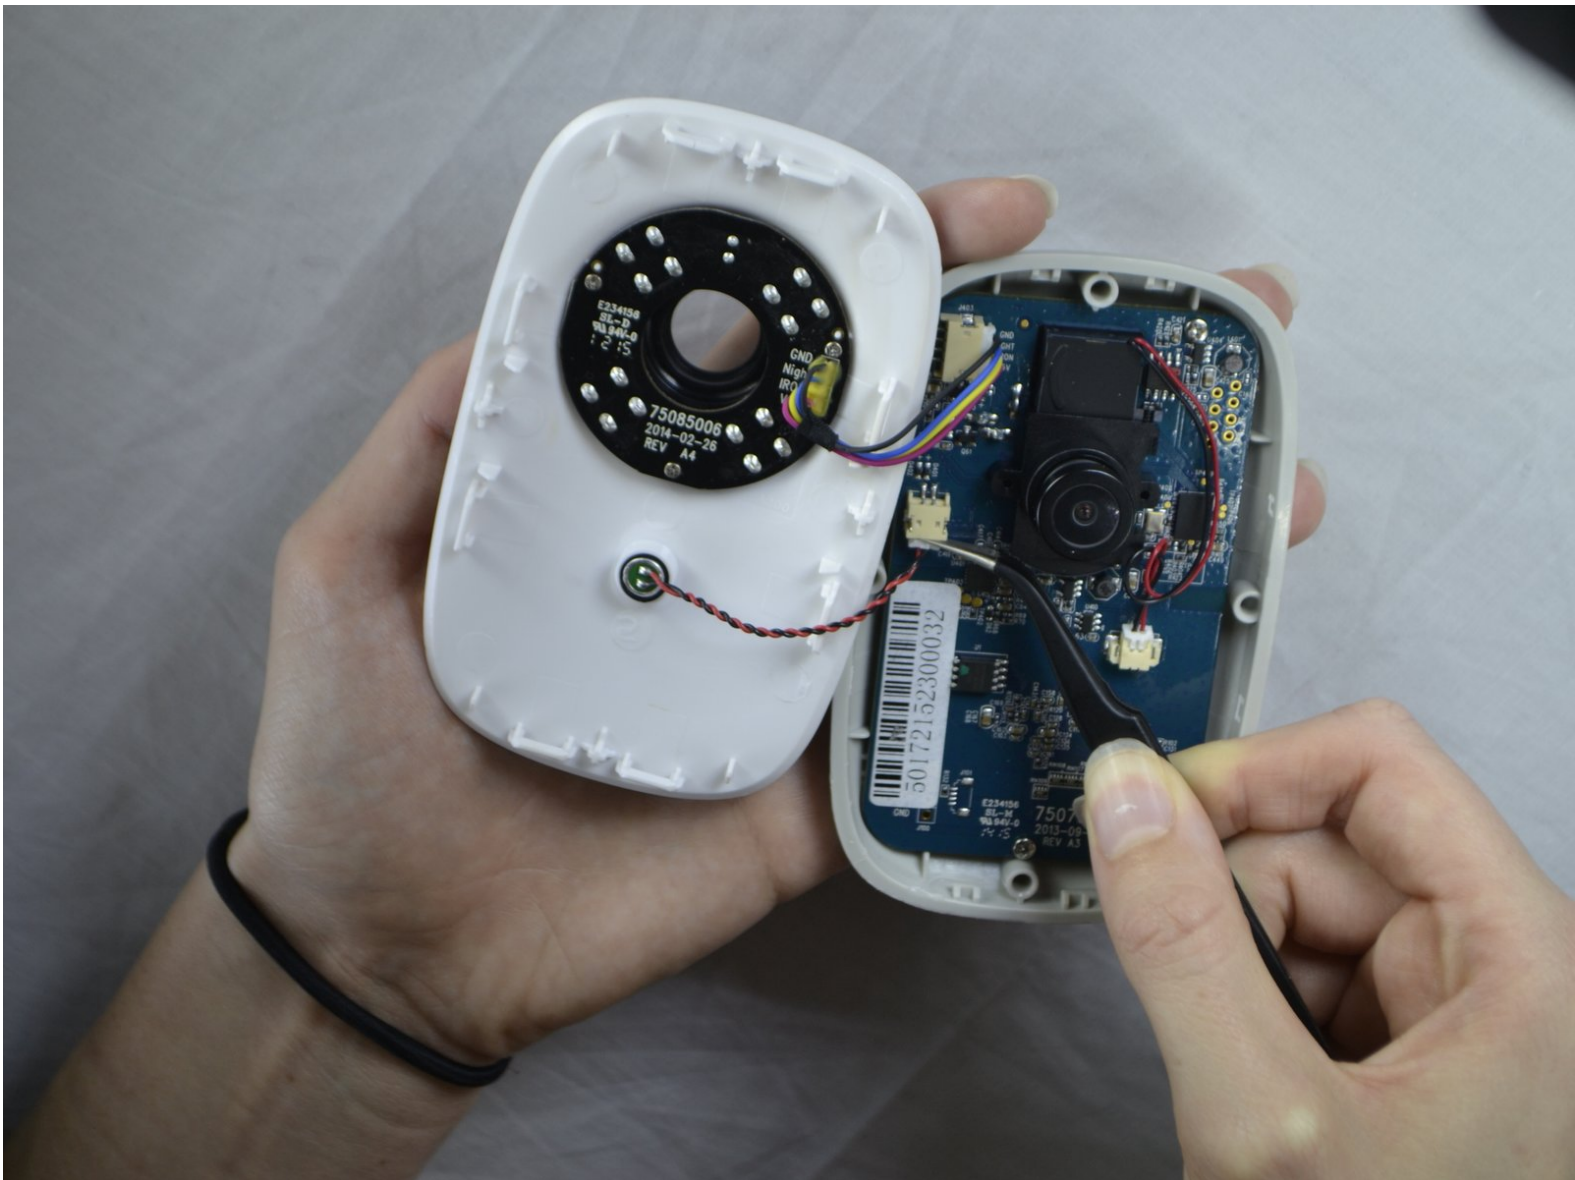

INTRODUCTION

If your connection is good between the camera and cellular device, but you can not hear the person you are communicating with through your phone. This means that the mic most likely needs to be replaced.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Case




- Use a wrench to loosen up the stand from the back in order to hold the NetCam more comfortably.

Step 2



- Work a plastic opening tool into the seam and pry the face plate away from the back panel.



Step 3

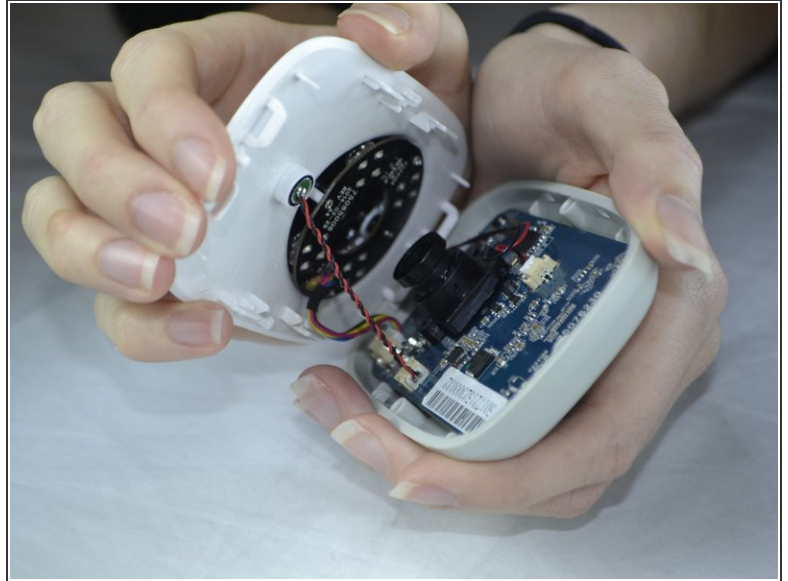

- Use pressure to separate the covers.


⚠ When pulling the device apart, separate from the bottom up in order to avoid pulling the wiring at the top apart.

Step 4 — Microphone

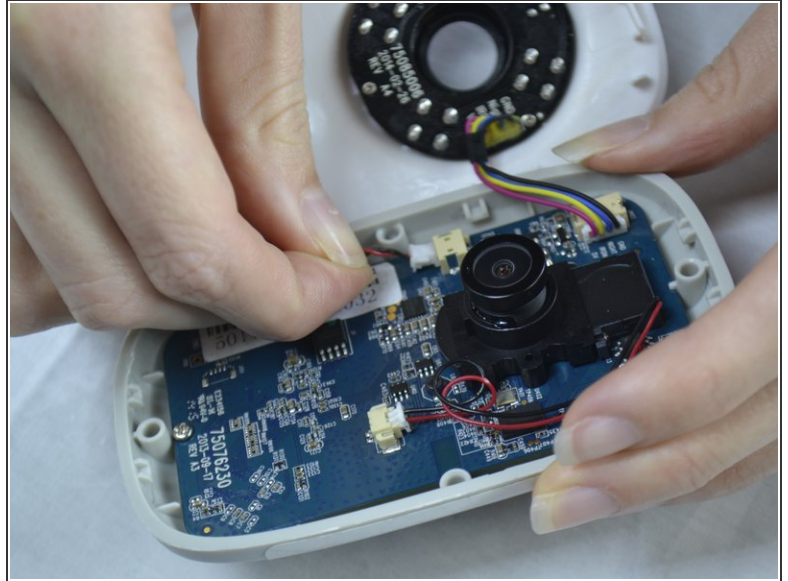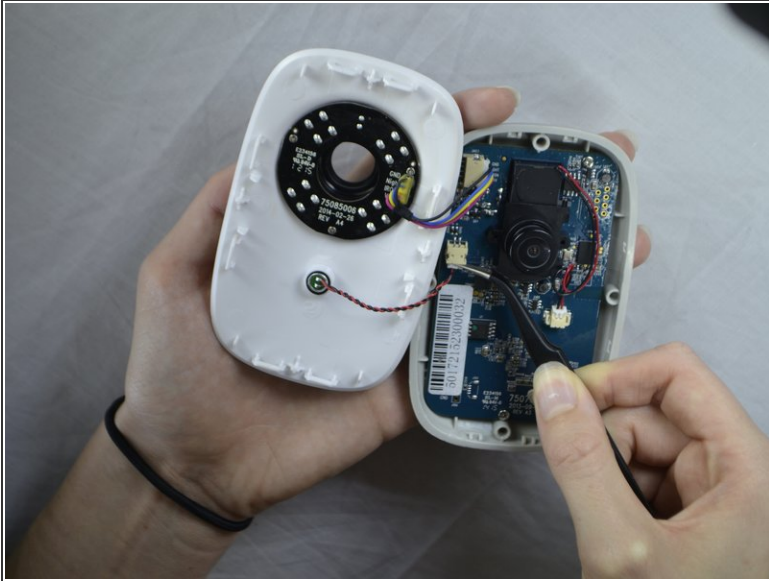

- Use tweezers to gently pull out the white attachment from the port.
- Use your fingers to pull out the white attachment from the tan port on the front of the board a little.

Step 5

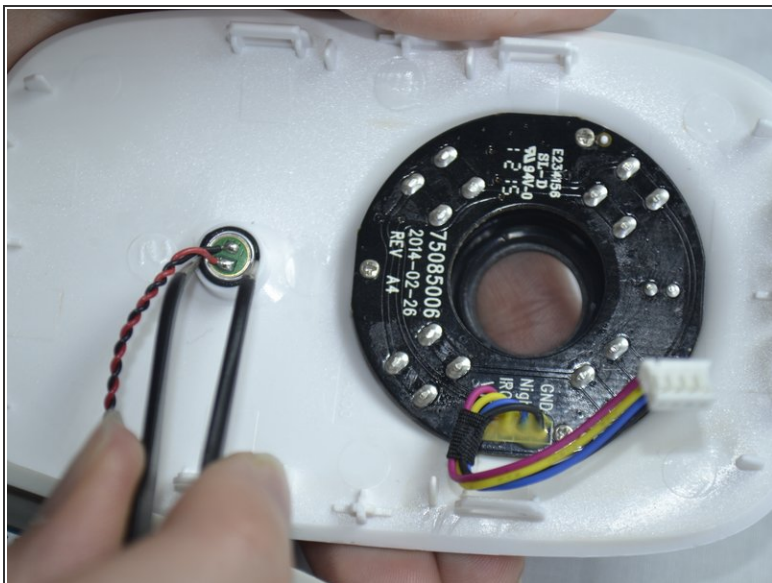

- Use a pair of tweezers to wedge between the mic and the rubber guard to remove the mic from the front cover.
- ⓘ If the rubber guard comes off with the mic just remove the guard from mic and place back on the front cover.

To reassemble your device, follow these instructions in reverse order.