



Ricoh Shotmaster 130Z Battery Replacement

How to correctly change the batteries of the Ricoh Shotmaster 130Z.

Written By: tcalvin12



INTRODUCTION

How to correctly change the batteries of the Ricoh Shotmaster 130Z.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [2 AA Batteries](#) (1)

Step 1 — Battery



- First, make sure that the camera is turned off. The dial must line up the word "off" with the white tally mark.

Step 2



- You can find the battery compartment on the side of the camera. Search for the arrow and the abbreviation "BATT"
- Stick your finger nail (or a blue opening tool if you wish) in the notch and flip open the door to expose the battery compartment.

Step 3



- The yellow latch holds down an extra cover for the batteries
- Push on it in to open the compartment
- Insert batteries according to the charges marked on the inside part of the cover

To reassemble your device, follow these instructions in reverse order.