



Dell Inspiron 11z-1121 Battery Replacement

The battery on the Dell Inspiron 11z-1121 is a 6 cell "smart" lithium ion battery. Replace the battery if it is not holding its charge.

Written By: Cassidy Chen



INTRODUCTION

This guide will teach you how to appropriately remove and replace the main battery. Ensure that the laptop is unplugged and powered off before proceeding to the following instructions. Before using the new battery, make sure to charge it to 100%.

Step 1 — Battery



- Slide the latches outward to release the battery.
 - Pull the battery outward to remove.
- i** The latches should lock in place, allowing for easy removal.
- !** The battery must be removed for safety reasons when replacing other components of the laptop.

To reassemble your device, follow these instructions in reverse order.