



Coby Kyros MID7012 Speaker Replacement

Guide to repair a bad speaker.

Written By: Daniel Ulrich



INTRODUCTION

Be careful not to crack the screen or the faceplate when removing from the tablet.



TOOLS:

- [Metal Spudger](#) (1)
- [Soldering Iron](#) (1)



PARTS:

- [Speaker](#) (1)

Step 1 — Speaker



- Wedge the metal spudger in between the faceplate and the body of the tablet.
- Carefully pry the faceplate away from the body of the tablet.

Step 2



- Carefully lift the screen and set it face down on a soft surface to not scratch it.

Step 3



- Lift the speaker out of the speaker housing.

Step 4



- Remove the positive and negative speaker wires by heating up the solder on the motherboard.
- Here are some tips on how to [Solder](#).

To reassemble your device, follow these instructions in reverse order.