



# Garmin Dezl 760LMT Speaker Replacement

Replace your Garmin's fuzzy, distorted, broken, or old speaker to restore proper audio functionality to the GPS.

Written By: Ryan Williams



---

## INTRODUCTION

This guide will show you how to properly remove the speaker from your Garmin without damaging the other components.

---



### TOOLS:

- [T6 Torx Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
  - [Metal Probe](#) (1)
-

## Step 1 — Back Panel



- Using a Torx T6 Screwdriver, remove the ten 7mm screws from the back panel.

## Step 2



- Using a metal spudger, pry the device apart.

☑ To recombine them, line up the two halves of the device and press them together.




## Step 3



- Turn the device over, laying it on its back with the screen facing upwards.
- Lift the front panel away from the silver part of the back panel.



**⚠** Make sure not to rip the ribbon cable that is connected to the screen and the motherboard.

## Step 4 — Speaker

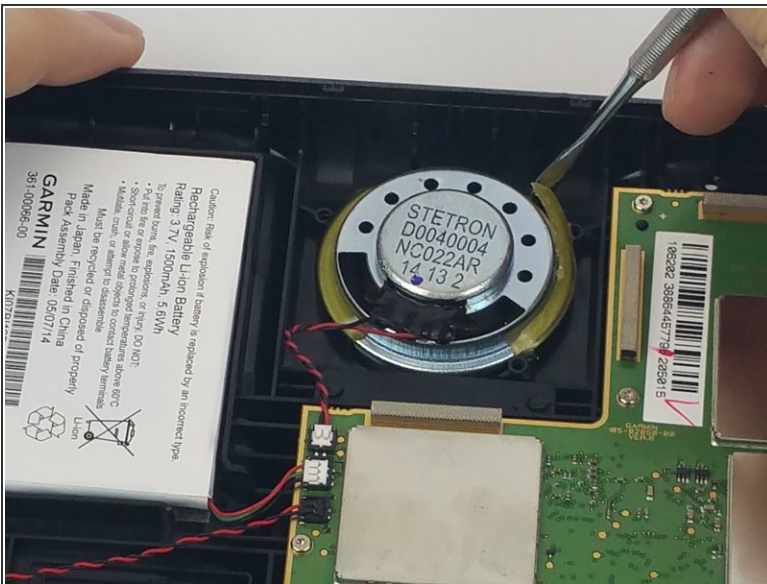

- Using the sharp end of the metal probe, scrape away the wax around the base of the speaker.
- Slide the metal probe underneath the speaker and pry upwards.
- ☑ During reassembly, use electrical tape to hold the speaker into place.

## Step 5

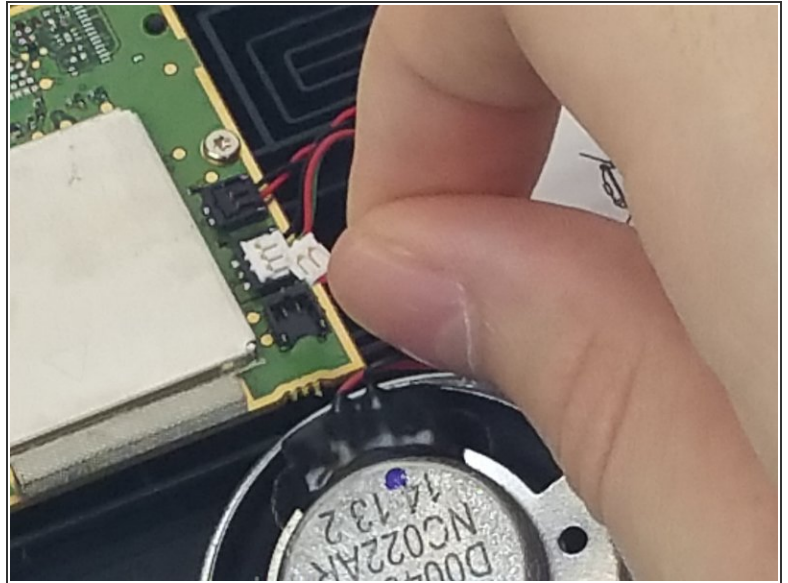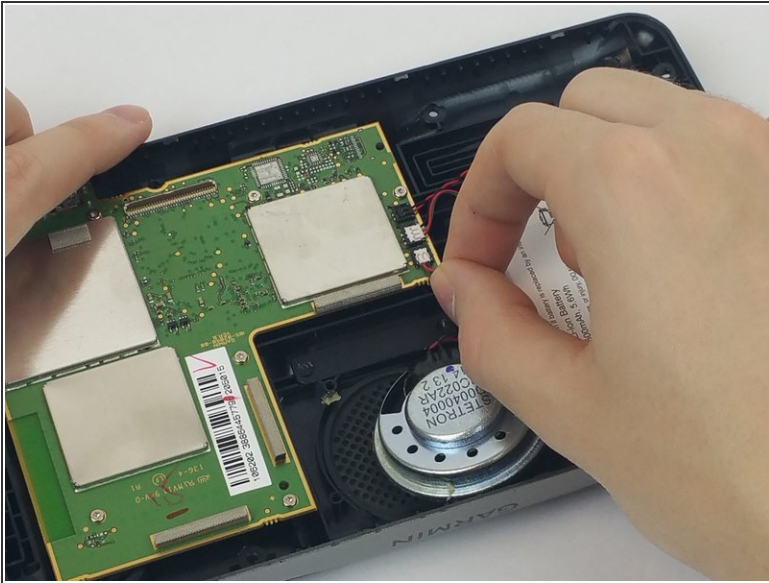

- Grasp the speaker wire near the motherboard and lift upward to detach the connector.

To reassemble your device, follow these instructions in reverse order.