



Sony Cyber-shot DSC-HX9V Battery Replacement

This guide is for battery removal or replacement for a Sony Cyber-shot DSC-HX9V camera.

Written By: Kris



INTRODUCTION

This guide will help the user remove the camera battery if it failed in operation. It is also a prerequisite guide for replacement of internal parts of the camera. Ensure the camera is powered off prior to battery removal.

Step 1 — Battery



- ① Ensure the camera is powered off prior to removal of the battery. The LCD screen will have no information displayed if the camera is properly turned off.
- Place the camera upside down with the top sitting on a flat surface.
- Using your fingers, slide the door lock to the unlock position.

Step 2



- Open the battery compartment door.
 - Remove the battery from the compartment by turning the camera upside down and allow it to slide out. Be sure to catch the battery as it slides out.
 - If you are replacing internal camera parts, stop here. If you are replacing the old battery, continue with step 2.
- i** Sony recommends the use of an approved battery for maximum performance. The recommended battery model number is NP-FG1.
- Insert the new battery into the compartment matching the positive battery lead to the positive terminal and the negative battery lead to the negative terminal on the camera.
 - Close and lock the battery door and power the camera up. Ensure to check the battery charge levels and that all functions of the camera work properly.

To reassemble your device, follow these instructions in reverse order.