



Acer Iconia Tab 8 A1-840 Buttons Replacement

Replace the volume and power buttons

Written By: taylerdurtschi



INTRODUCTION

The volume and power button are assembled to the inside panel of the device. Both buttons will need to be replaced as they are combined into one piece.



TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel



- Power off the device
- Remove any cables that might be connected to your device
- Make sure the device is placed on a flat surface with the display screen facing up

Step 2




- Wedge the plastic opening tool in between the display screen and back panel
- ⚠ Do not apply too much pressure in order to avoid cracking the screen

Step 3



- Carefully separate the display from the back panel

Step 4 — Buttons

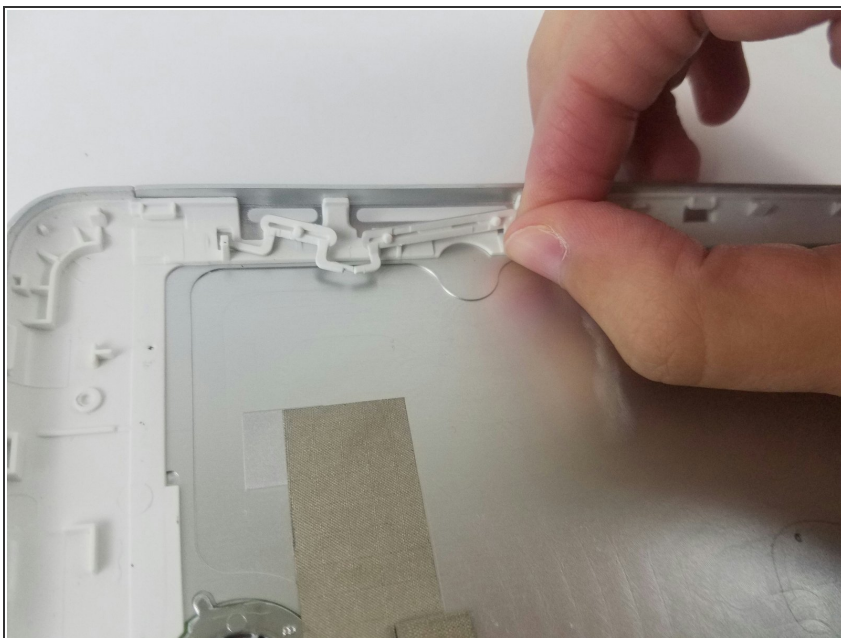

- Remove the buttons from the back panel using your fingers.

To reassemble your device, follow these instructions in reverse order.