



# Acer Iconia Tab 8 A1-840 Front Camera Replacement

This simple guide will assist you in the replacement of the defective front facing camera on your tablet.

Written By: Claire Posadas



---

## INTRODUCTION

In order to replace the camera you'll have to first remove the back cover. The camera is one of the easiest components to replace once the cover is removed.



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Heavy-Duty Spudger](#) (1)
  - [Precision Tweezers Set](#) (1)
-

## Step 1 — Back Panel



- Power off the device
- Remove any cables that might be connected to your device
- Make sure the device is placed on a flat surface with the display screen facing up

## Step 2



- Wedge the plastic opening tool in between the display screen and back panel
- ⚠ Do not apply too much pressure in order to avoid cracking the screen

## Step 3



- Carefully separate the display from the back panel

## Step 4 — Front Camera



- Use the spudger to lift the the black flap.

## Step 5



- Use the ESD safe precision tweezers to pull the connector out and carefully remove the camera.

To reassemble your device, follow these instructions in reverse order.