



Mad Catz Rock Band 4 Wireless Fender Disassembly

This is the disassembly of the whole guitar to reveal internal components.

Written By: Catherine Lintner



INTRODUCTION

(Disclaimer: Remove batteries before proceeding)

TOOLS:


- [JIS Driver Set](#) (1)
-

Step 1 — Outer Casing



- Flip the guitar over so it is back side up. The battery compartment should be facing up.
- Use a size J1 head screwdriver to remove the ten 5 mm short screws.
- Use a J1 screwdriver to remove the four 5 mm long screws on the back of the device.

Step 2

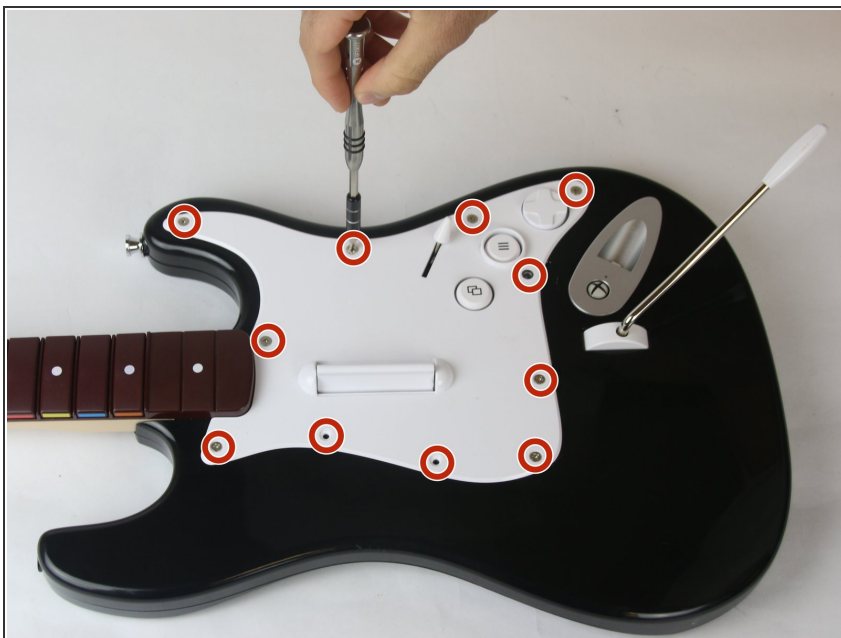

- Turn the device over so the front of the guitar is facing you.
- Using a size J1 philips head screwdriver, remove the eleven 5 mm silver screws (circled in red) around the white panel.

Step 3



- Gently lift the white panel and twist 90 degrees clockwise.
- Using a size J1 head screwdriver, remove the two 5 mm black screws from underneath the white panel. You should now be able to pull the guitar apart.

To reassemble your device, follow these instructions in reverse order.