




# Hasbro Bop-It Micro Series Buttons Replacement

This guide will show you how to replace the buttons inside the device that provide functionality to the game features.

Written By: Glenn Haag

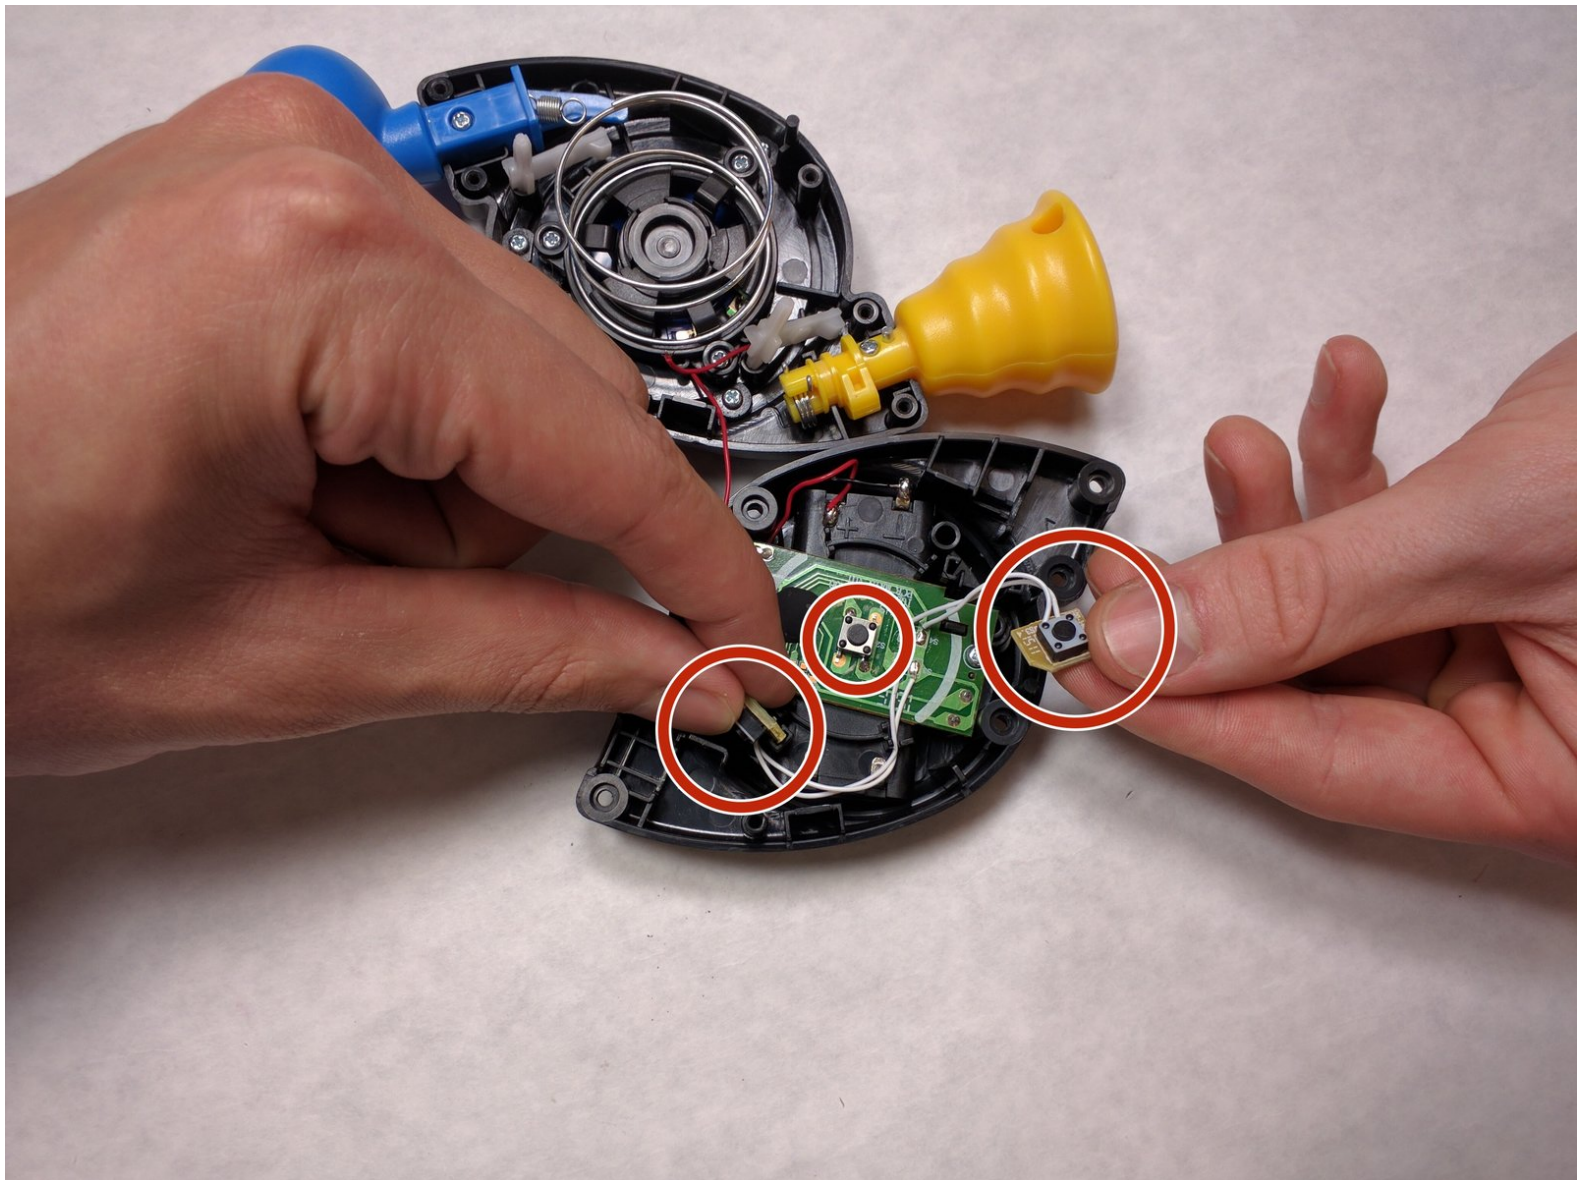

# INTRODUCTION

If the game is turned on but the Bop-It button(s) does not work, this is because the button inside the device that provides functionality may be broken. To effectively replace them see this step-by-step guide.



## TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [Soldering Iron](#) (1)
-

## Step 1 — Back Case



- Loosen the two captive 8 mm screws in the back cover using a Phillips #0 screwdriver.


## Step 2

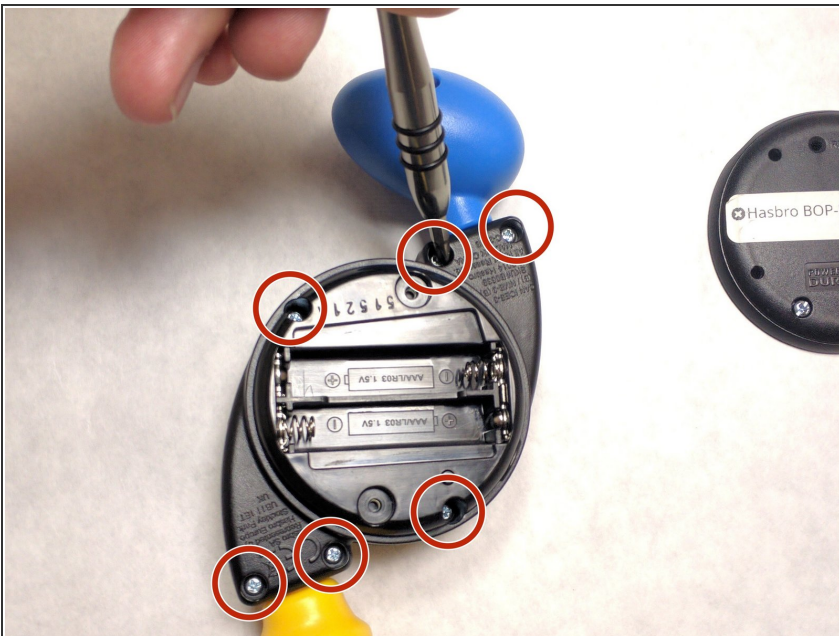

- Remove the six 6 mm screws from the back cover using a Phillips #0 screwdriver.
- When removing the final screw, hold the assembly together. There is a spring inside the device which will pop the assembly apart when all the screws are removed.




## Step 3

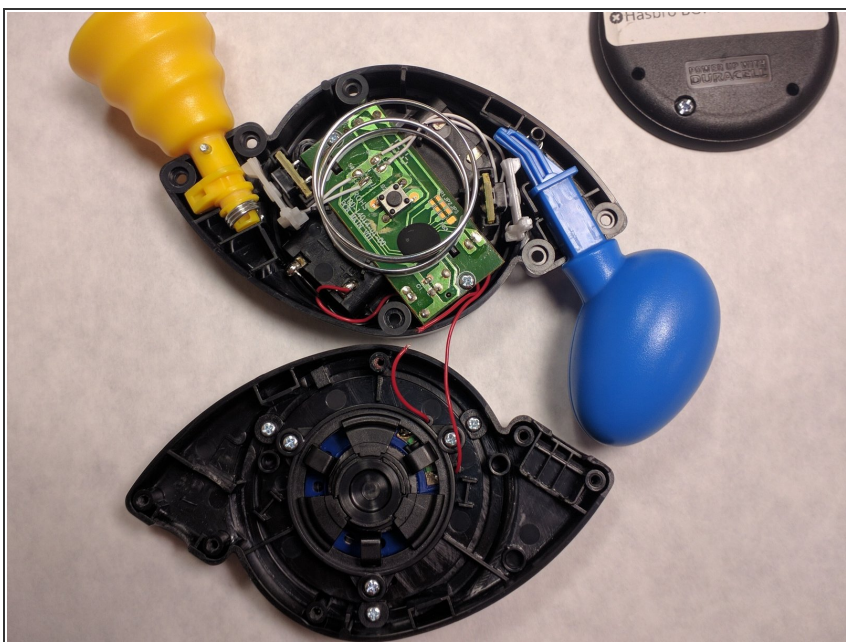

- Carefully separate the two sections, leaving them connected by the wires.


## Step 4 — Buttons

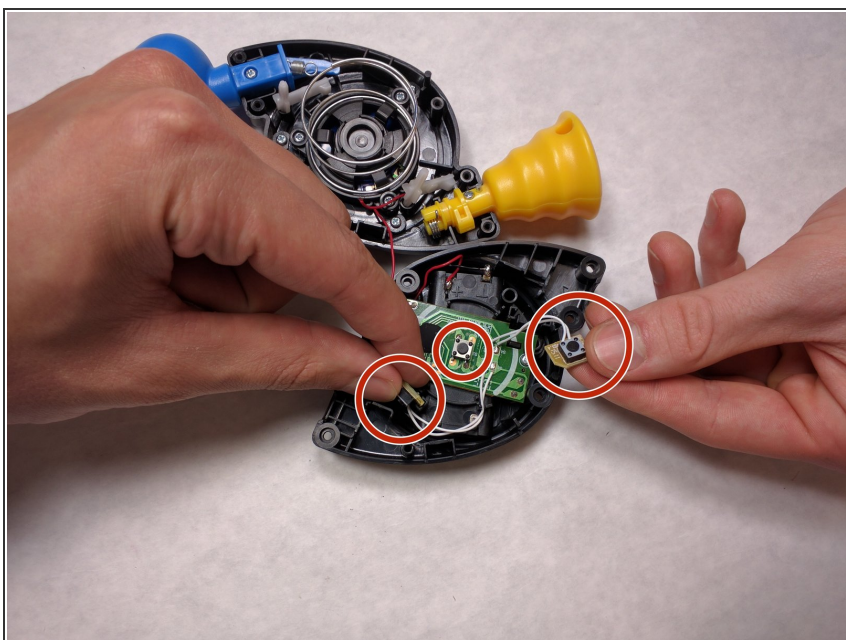

- Remove the buttons by de-soldering them from the wires they are attached to or from the mother

board. Refer to the soldering guide [here](#).

## Step 5

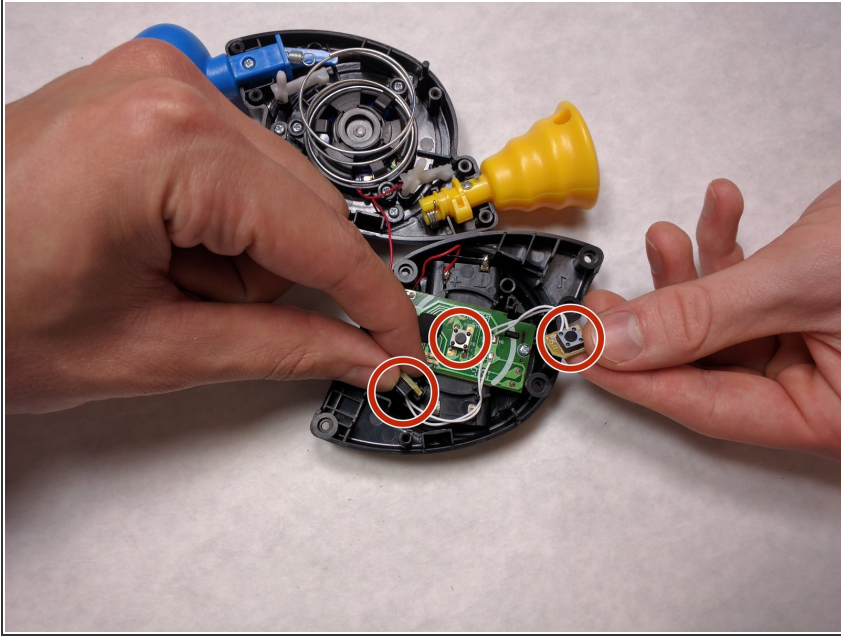

- After removing the buttons, solder new, operational buttons back into place.

To reassemble your device, follow these instructions in reverse order.