



Dell Latitude E5410 keyboard Replacement

Although many people will discard a laptop...

Written By: Megan Perrizo



INTRODUCTION

Although many people will discard a laptop without a working keyboard system, it is possible to replace at home. Keyboards are vital to being able to operate and type on a computer. A keyboard which needs to be replaced may have one or more key which is sticking or otherwise ineffective. This guide will show you how to replace a Dell Latitude E5410 keyboard in four simple steps.

TOOLS:

[JIS Driver Set](#) (1)
[iFixit Opening Tool](#) (1)

PARTS:


[Dell Latitude E5410 Keyboard](#) (1)

Step 1 — Dell Latitude E5410 keyboard




- Position laptop so that the LCD screen is aligned directly flat and parallel to the keyboard section of the laptop.

Step 2

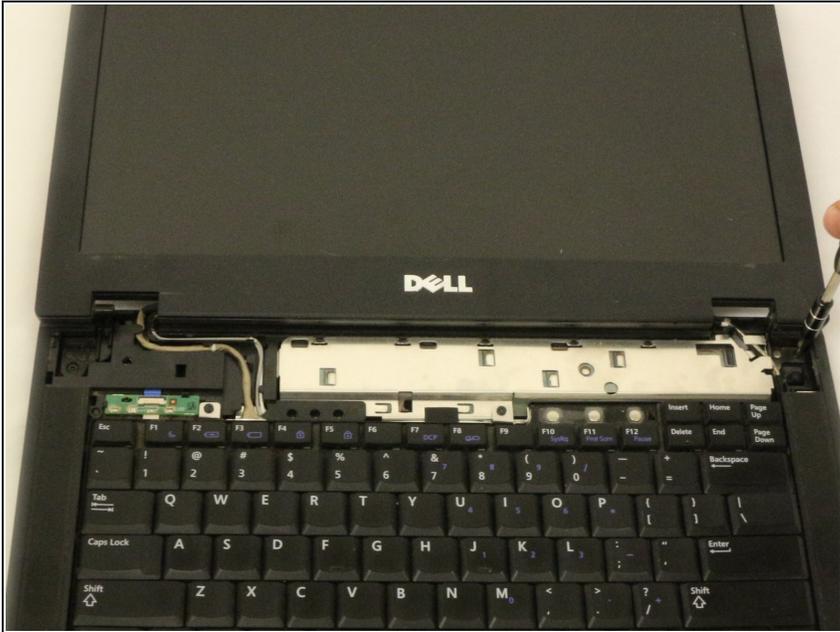


- Use the iFix it Opening Tool to remove the flat section located directly above the keyboard, as seen in picture.

Step 3

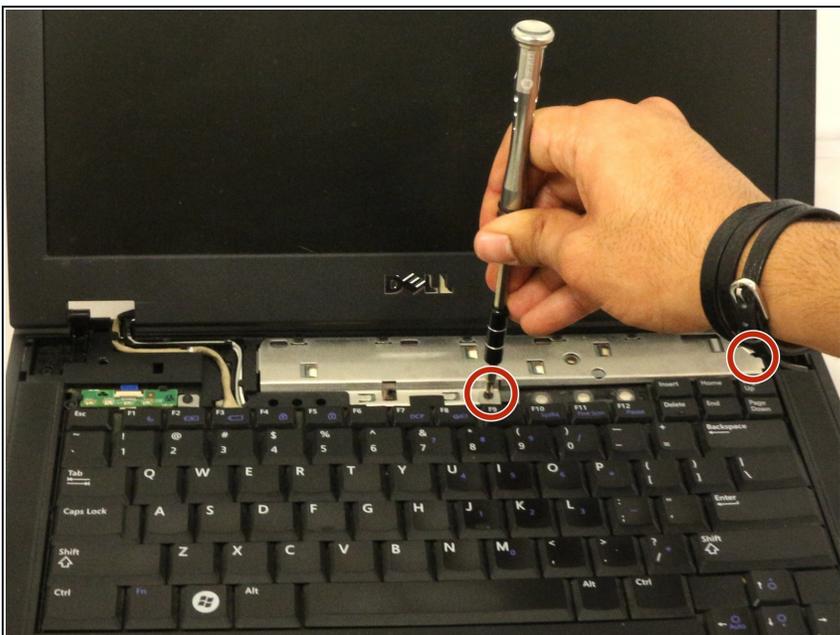

- Locate two internal screws (pictured) under removed section.
- Use the Phillips screwdriver to remove both screws.
- ⓘ The screw in the middle is 3.85mm and the screw on the left is 8.66mm.

Step 4

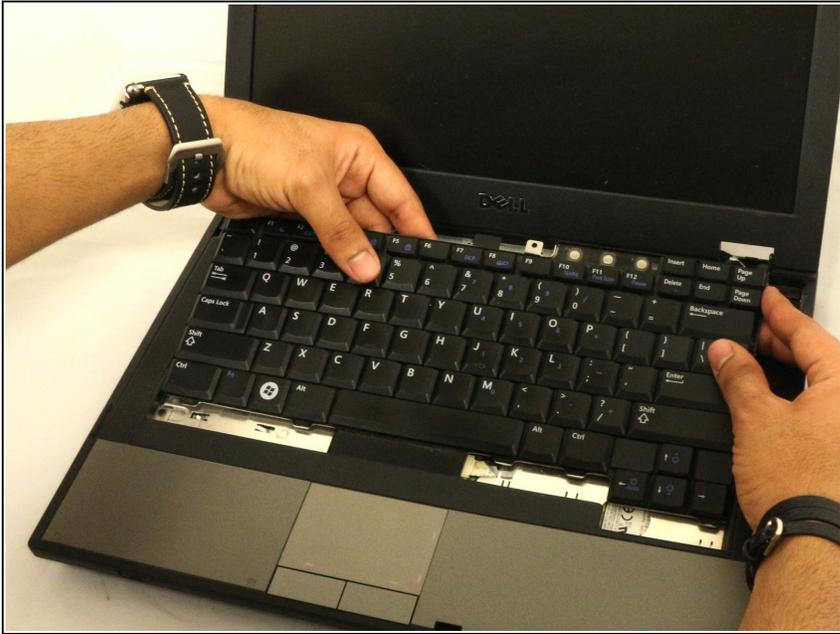

- Firmly grip the upper section of the keyboard.
- Pull on the keyboard in an upwards motion.
- The keyboard should be successfully removed.

To reassemble your device, follow these instructions in reverse order.