



Nikon Coolpix S9700 Battery Replacement

Replace the battery in your S9700 for longer time to take pictures and videos.

Written By: Matt Staubus



INTRODUCTION

You may need a new battery if you have noticed your S9700 needs charging more often, if your S9700 keeps turning off for no apparent reason, or a variety of other issues. Removing the battery is very simple and does not require a lot of knowledge of the camera itself. With a new battery installed, you can be a photographer with confidence.

Step 1 — Battery



- Press the ON/OFF button to power off the S9700.

⚠ Not doing so can damage the S9700 or cause electric shock.

Step 2



- Place the S9700 upside down
- Place your finger on the battery compartment cover and gently push toward the front of the S9700.
- The cover will open up by itself.

Step 3



- Push the yellow tab inside the battery compartment in the direction of the arrow. This will allow the battery to spring up.

Step 4



- Grab the battery and pull out.

To reassemble your device, follow these instructions in reverse order.