



# Nikon Coolpix L830 LCD Monitor Replacement

Replacing a broken or corrupted LCD monitor to allow access to take photos on Nikon Coolpix L830.

Written By: Blake Johnson



## INTRODUCTION


If the LCD monitor on your Nikon Coolpix L830 is corrupted or completely blank, replacement is necessary. Following these steps will allow you to replace the broken screen with a new one to allow complete monitor functionality to return.



### TOOLS:


- [Phillips #000 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — LCD Monitor

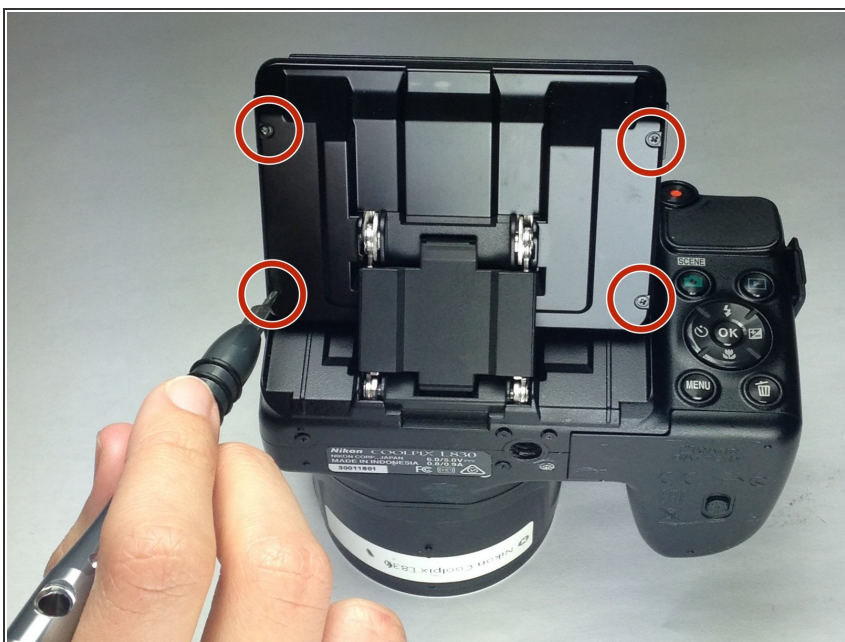

- Use a Phillips head P000 screwdriver to remove the four 3.0 mm Phillips screws on the back of the monitor.

## Step 2

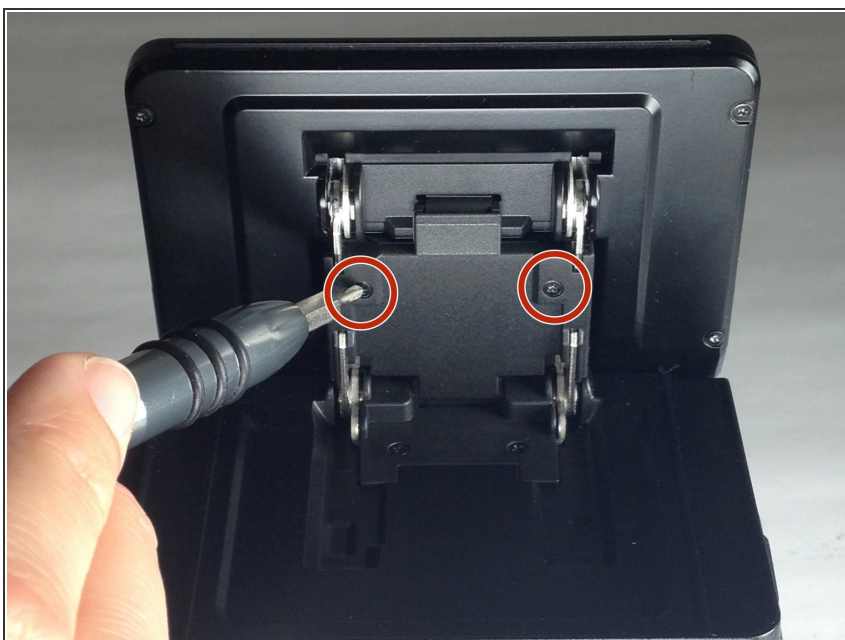

- Use a Phillips head P000 screwdriver to remove the two 3.0 mm Phillips screws on the hinge cover.

## Step 3



- Remove the top hinge cover.
- ⓘ The top hinge cover contains screw holes.
- Remove the bottom hinge cover.
- ⓘ The bottom hinge cover contains no screw holes.




## Step 4



- Remove the back cover of the LCD monitor with your hands or a plastic opening tool.
- ❗ The cover will slide down the hinge, but it will not be completely removed.

## Step 5

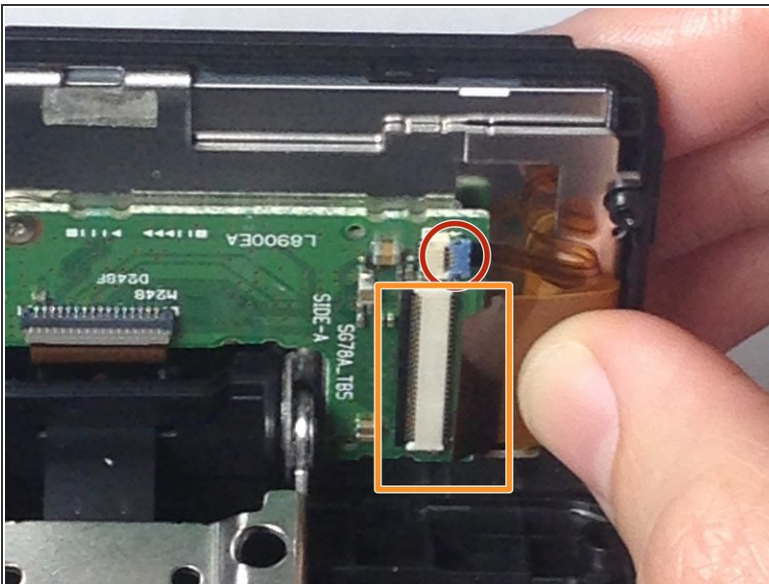


- Use your thumb to gently pull the small flex ribbon wire connector from its socket.
- Use your thumb to gently pull the wide flex ribbon wire connector from its socket.

## Step 6



- Use a plastic opening tool to remove the front cover of the LCD monitor, allowing the monitor to be completely released.

## Step 7

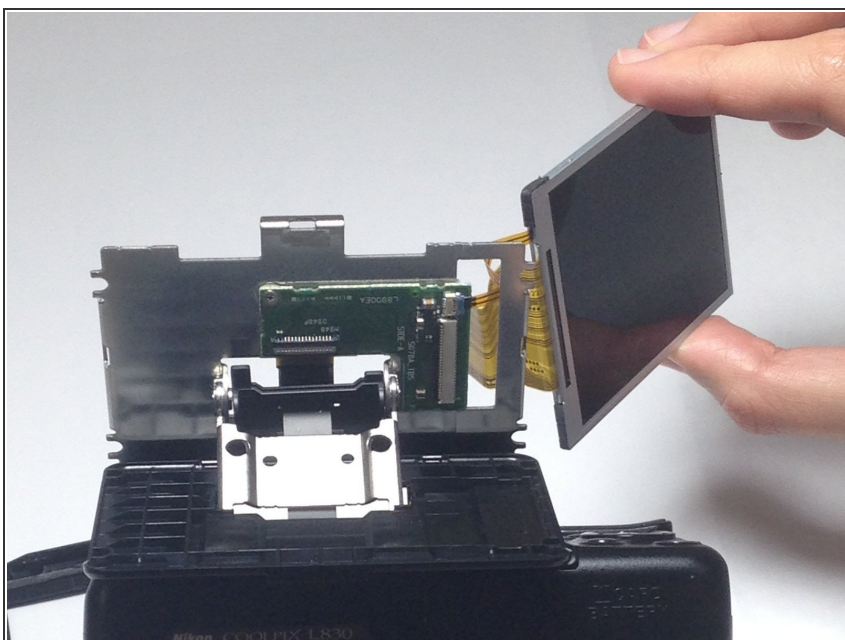

- Gently remove the old, damaged LCD monitor.

To reassemble your device, follow these instructions in reverse order.