



HP ProBook 4540s Battery Replacement

This guide will help you replace the battery on your HP ProBook 4540s.

Written By: Amber Schindler



INTRODUCTION

Replacing the battery is a very simple process and doesn't require any tools to remove. For other replacement guides however, it is imperative to remove the battery before other components to reduce the risk of shock.

Step 1 — Battery



- ⚠ Make sure the computer is shut off and the power cord is unplugged from the AC outlet.
- Slide the two release latches on either side of the battery.
- Gently tilt the battery upward and remove it from its socket.

To reassemble your device, follow these instructions in reverse order.