



Black and Decker PS1800 Chuck Replacement

This guide will show you how to replace a broken chuck for the Black and Decker PS1800.

Written By: David Nawl



INTRODUCTION

This guide will show you how to replace the Black and Decker PS1800's chuck.

TOOLS:


- [Allen Wrench](#) (1)
 - [T20 Torx Screwdriver](#) (1)
-

Step 1 — Chuck



- Using the T20 Torx Security screwdriver, take out the 2.3 mm screw inside the chuck.

Step 2

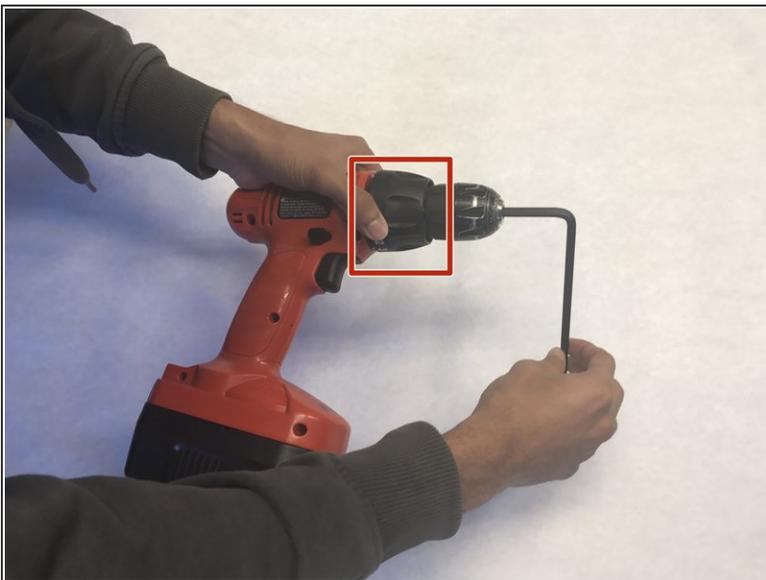

- Set the drill to 'drill mode' and tighten the chuck with the Allen wrench in it.
- ⓘ 'Drill mode' is represented by the drill bit symbol
- Use the Allen wrench to unscrew the chuck by rotating it counter clockwise.

Step 3



- Remove the chuck completely by unscrewing it in a counter clockwise direction.

To reassemble your device, follow these instructions in reverse order.