




Leader Impression i10A-LE Microphone Replacement

Removing and replacing the microphone for the...

Written By: riley seyffert

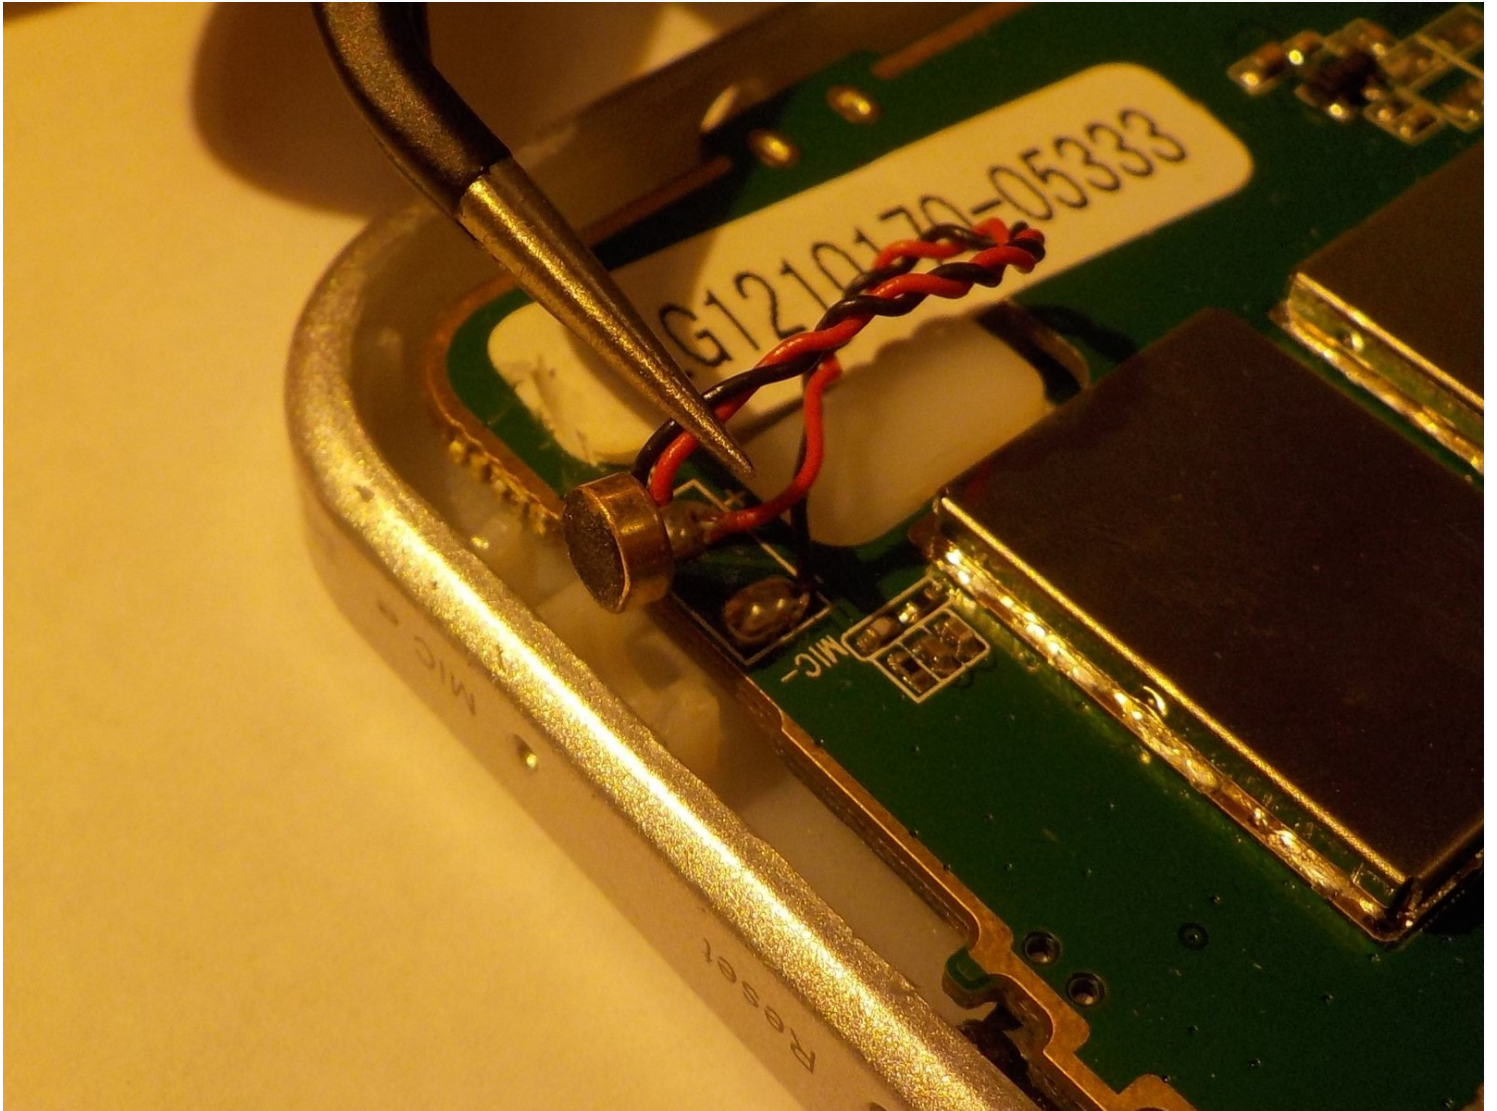


INTRODUCTION

Removing and replacing the microphone for the Leader Impression i10A-LE.

TOOLS:


[Tweezers](#) (1)
[iFixit Opening Tool](#) (1)
[Soldering Iron](#) (1)

Step 1 — Microphone

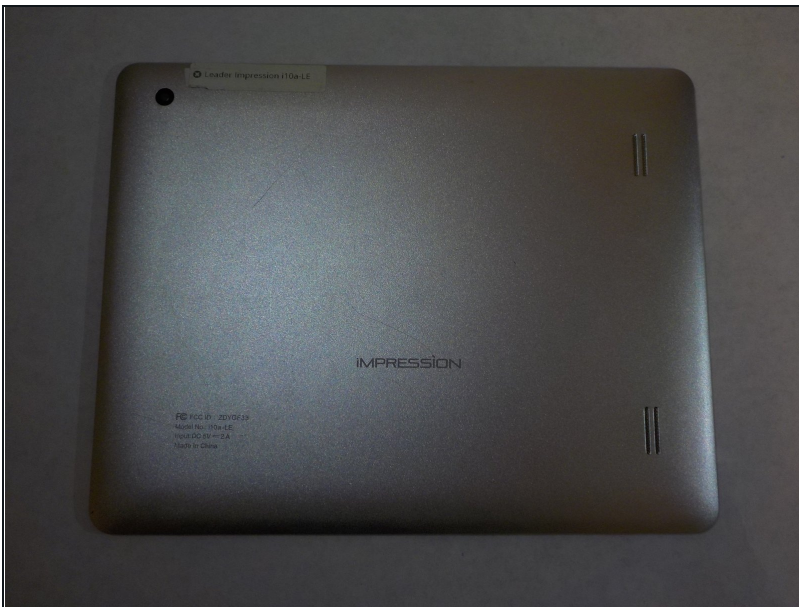


- Orient your Leader Impression i10A-LE with the word "Impression" closest to you and the camera in the top left corner.

Step 2

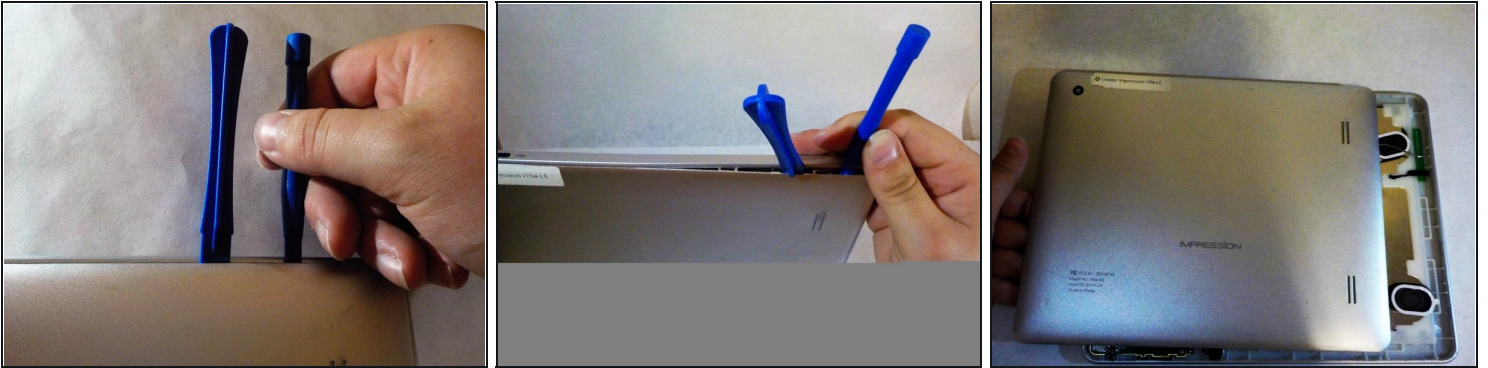

- Pry the back off by using plastic opening tools.
- Using the plastic tools slide the flat end into the device.
- Gently pry the back piece until you hear a popping noise.
- Once the back is loose, remove it from the device and set aside.

Step 3

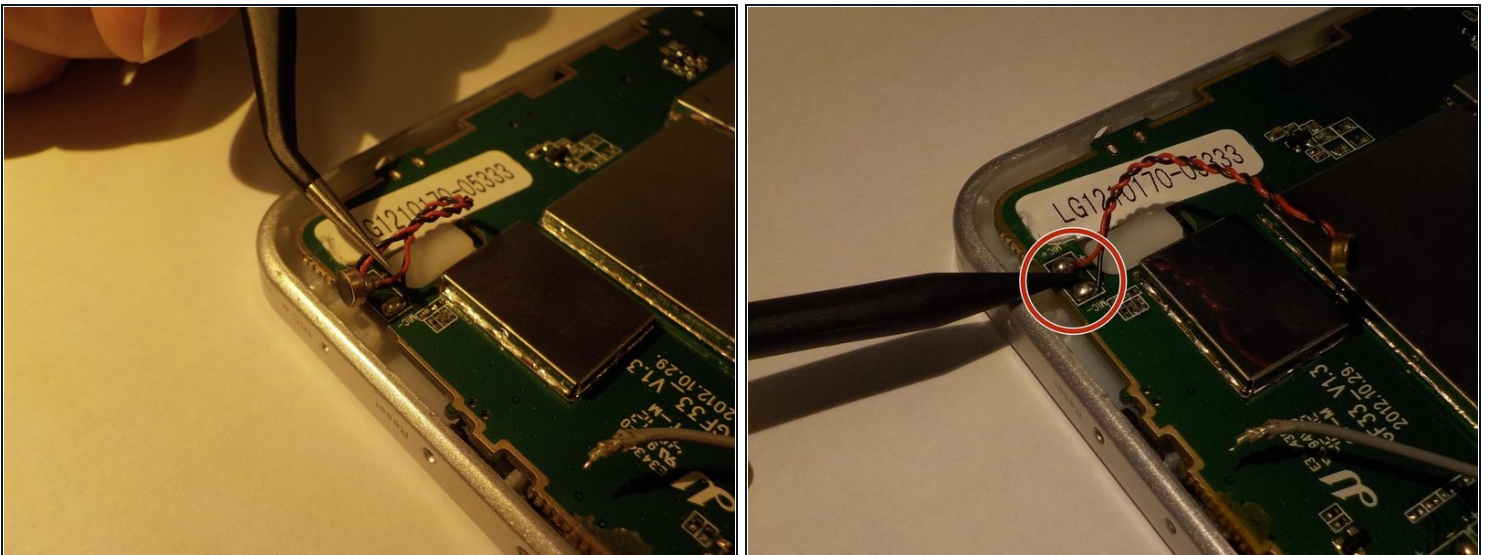

⚠ Disconnect the positive and negative battery leads.

- Remove the microphone from plastic housing with the [tweezers](#).
- Desolder the positive (red) and negative (black) power leads.

To reassemble your device, follow these instructions in reverse order.