

Dell Inspiron 11z-1121 Fan Replacement

This guide will show you how to access the fan so you can clean or replace it if you notice your laptop is running hot.

Written By: Cassidy Chen




INTRODUCTION

The fan in a laptop is responsible for keeping the the laptop cool so that it can properly function. Without the fan the laptop can overheat or run slowly.

TOOLS:

- iFixit Opening Tools (1)
- Phillips #1 Screwdriver (1)

Step 1 — Battery

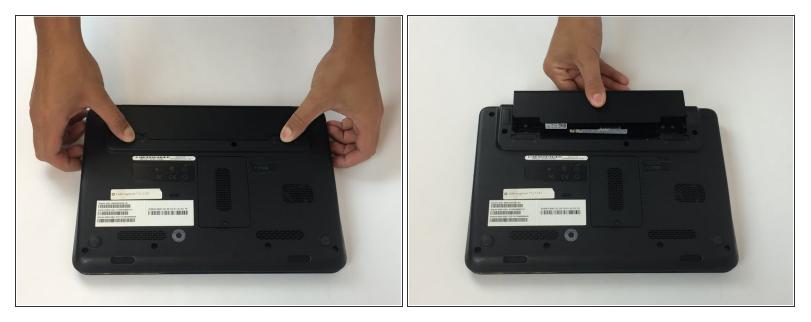


- Slide the latches outward to release the battery.
- Pull the battery outward to remove.
- (i) The latches should lock in place, allowing for easy removal.
- The battery must be removed for safety reasons when replacing other components of the laptop.


Step 2 — Keyboard



 Unscrew three black 1mm screws using the PH1 Phillips-head screwdriver on the bottom of the laptop around the battery.

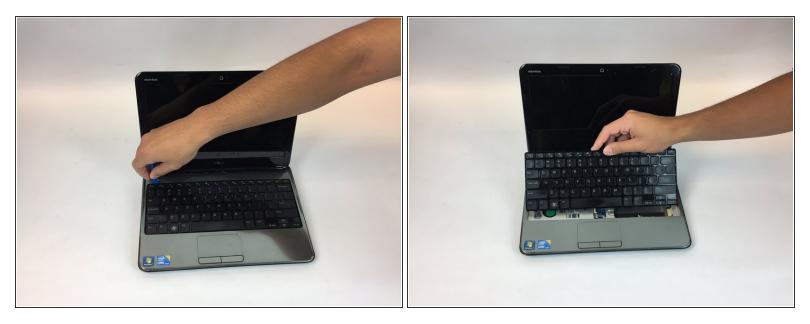

- Flip the laptop over and open it to expose the keyboard.
- Use a plastic opening tool to pry up the keyboard, starting in the upper corner and working your way around.
- Once the keyboard is pried up, do not remove the keyboard. There is still a ribbon attaching the keyboard to the laptop.

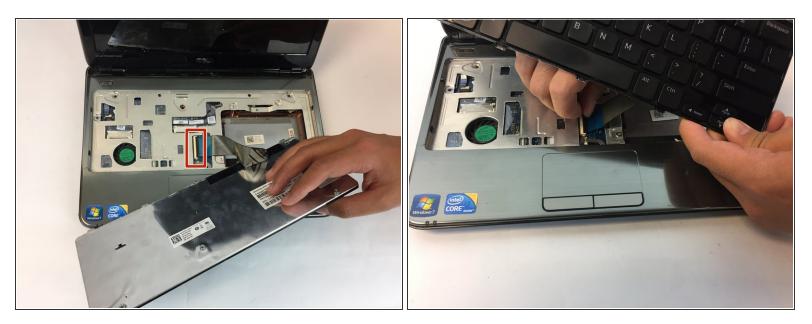


- Lift the keyboard to expose the ribbon attaching the keyboard to the laptop.
- Flip up the black retaining flap on the ZIF connector and then pull the ribbon cable away.
- Remove the keyboard from the laptop.

Step 5 — Fan



• Start by prying the outer casing of the laptop using the plastic opening tool. Start from the bottom and work your way around the edges.

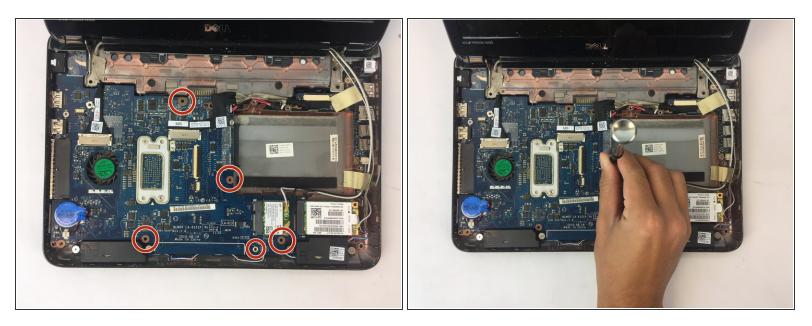

- Remove the outer casing to expose the motherboard.
- Remove five .75 mm screws using a PH1 screwdriver.
- (i) Make sure to keep track of your screws.

Step 7



- Remove wireless wide area network (WWAN) card by sliding it out of position.
- (i) Make sure the wires attached to the WWAN card are not detached when doing this step.



- Unscrew the two 0.9 mm screws that are holding down the screen.
- Lift the screen up and towards yourself to detach the screen from the laptop.

Step 9



 Lay the screen down and pry the left corner of the plastic casing that is located behind the screen.



- While holding screen, remove the motherboard by wiggling it around and pulling outwards.
- In this step you are trying to pull the motherboard out from the VGA socket it is attached to in the back left corner of the laptop.

Step 11



- Unscrew the two black 0.5 mm screws holding the fan in place.
- Remove the fan by gently lifting the component upwards.

To reassemble your device, follow these instructions in reverse order.