


Flip Video Ultra USB connector Replacement

This guide will walk you through how to remove...

Written By: Nathaniel Ruf

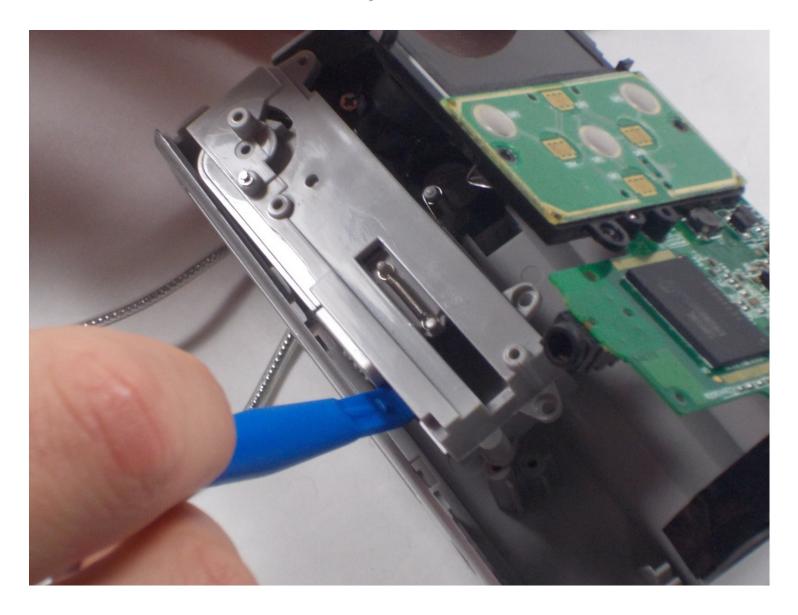

INTRODUCTION

This guide will walk you through how to remove and replace the USB connector should your device be broken or malfunctioning.


TOOLS:

Phillips #1 Screwdriver (1) iFixit Opening Tool (1)

${\bf Step~1-USB~connector}$




 Unlock the battery cover by sliding the switch to the unlock position.

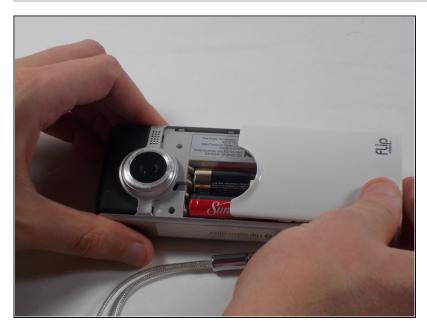

• Remove the battery cover by sliding it down the camera.

Step 3

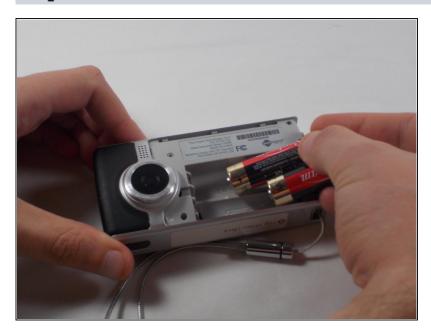

• Remove the batteries.



- Slide the black upper casing off from the device.
- i This is a bit hard to get off, so don't be afraid to use a bit of force. There is no lock.

Step 5





• Remove the six 1mm screws from front of the camera with the Phillips Head screwdriver.




 Remove the top casing from the bottom to reveal the inner circuit board.

Step 7





- (i) When removing the back panel, the rubber buttons will become loose and likely fall off the board. This is normal and can easily placed back on the board once finished.
- Remove the six 1mm screws with the 1 Phillips head screwdriver.

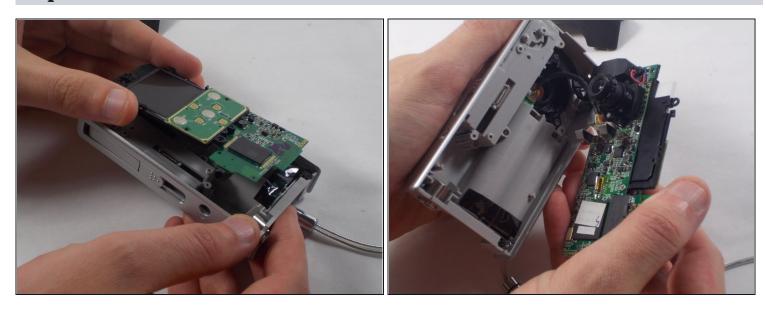



Gently separate the circuit board from the casing.

Step 9




 Remove the three 1mm screws from the USB connector and back casing with the Phillips Head screwdriver.

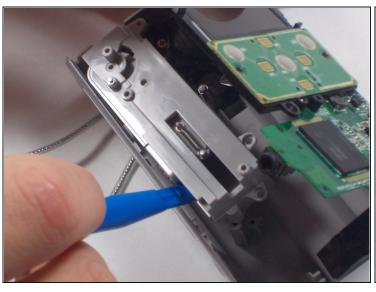

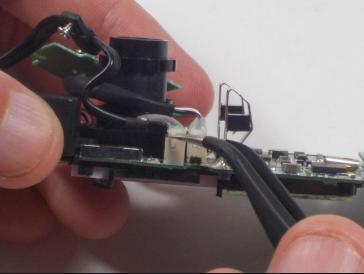

- Gently lift the usb connector using the Plastic opening tool.
- Using tweezers, remove the cord from the motherboard by gently lifting the connector.
- (i) The connector will be easier to remove if you wiggle the tweezers while lifting.

Step 11

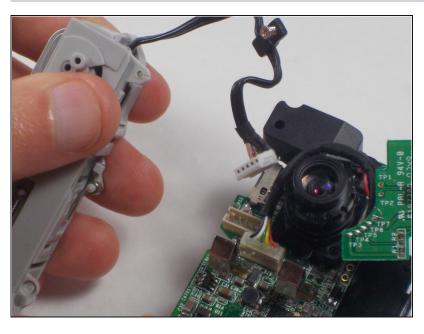

• Fully remove the USB connector and replace it with the new USB connector.

To reassemble your device, follow these instructions in reverse order.