


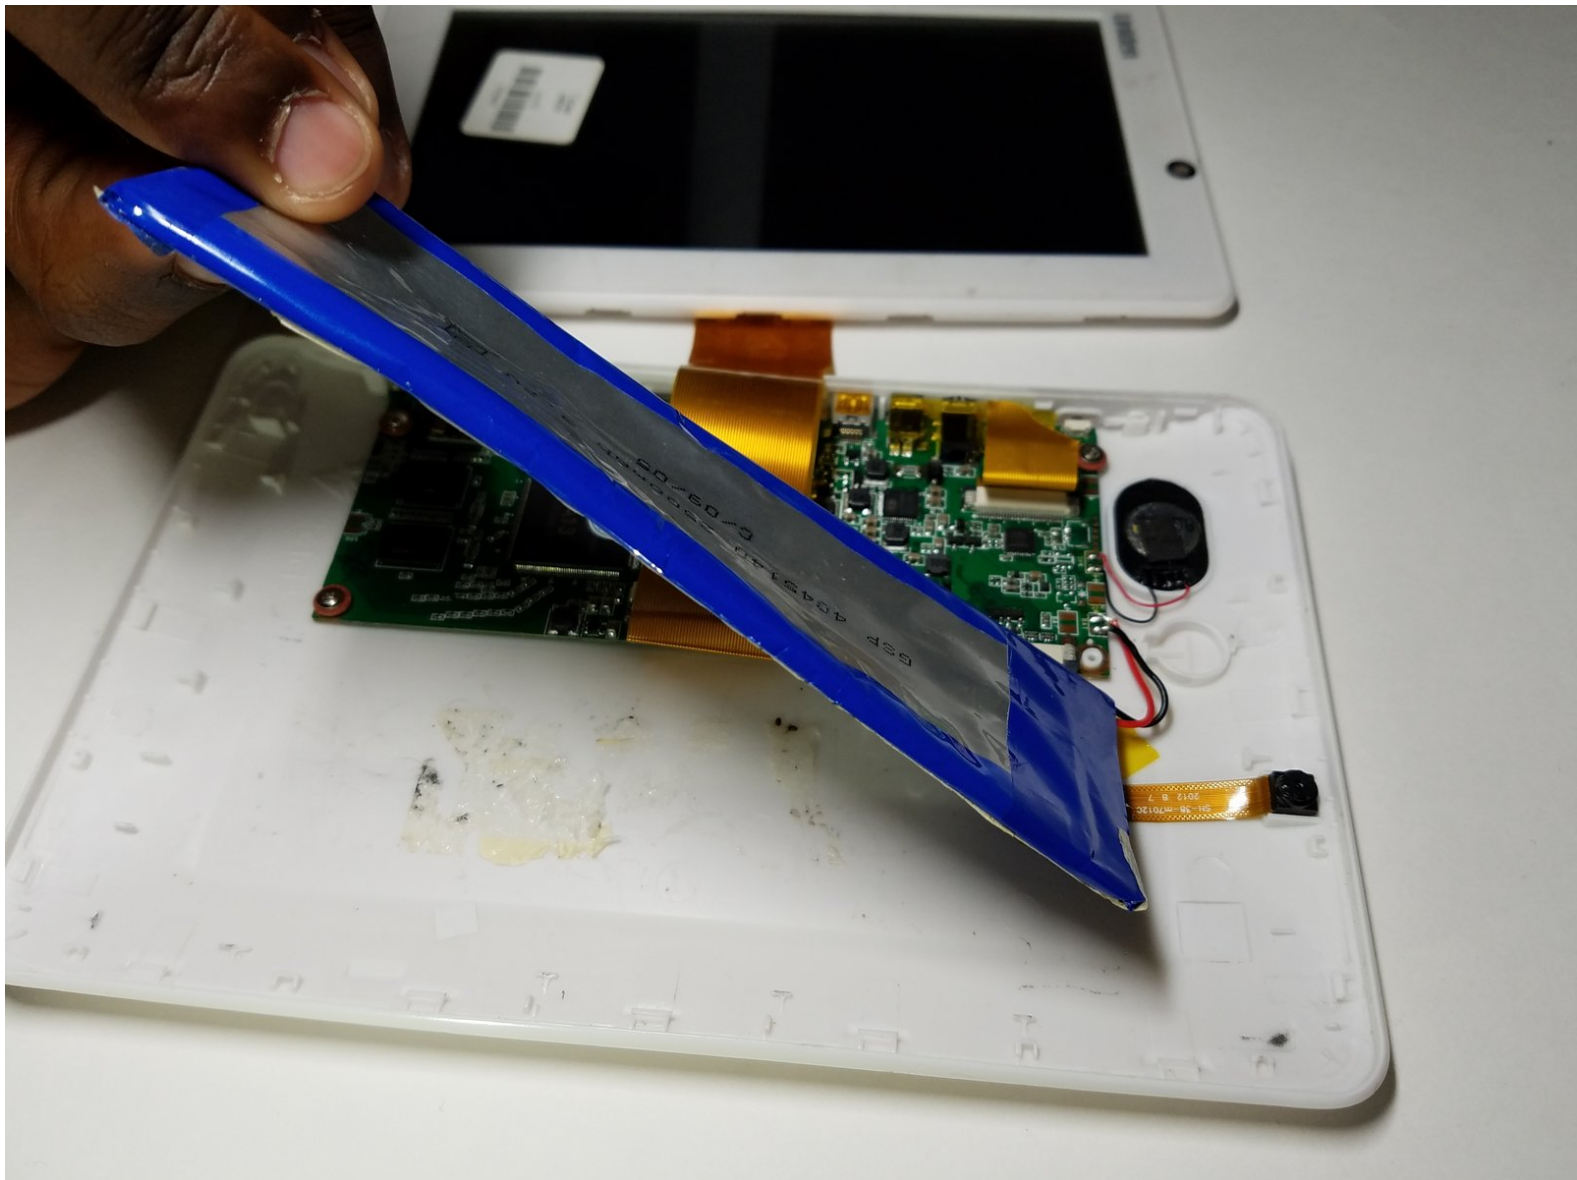

Uniden UTAB71 Battery Replacement

This guide will show how to replace the battery of a Uniden UTAB71

Written By: Ryan Jewell





INTRODUCTION

Replacing the battery on this tablet is a fairly simple process. This guide will explain the process step-by-step.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Plastic Cards](#) (1)
 - [Solder](#) (1)
 - [Soldering Iron](#) (1)
 - [iOpener](#) (1)
-

Step 1 — Battery

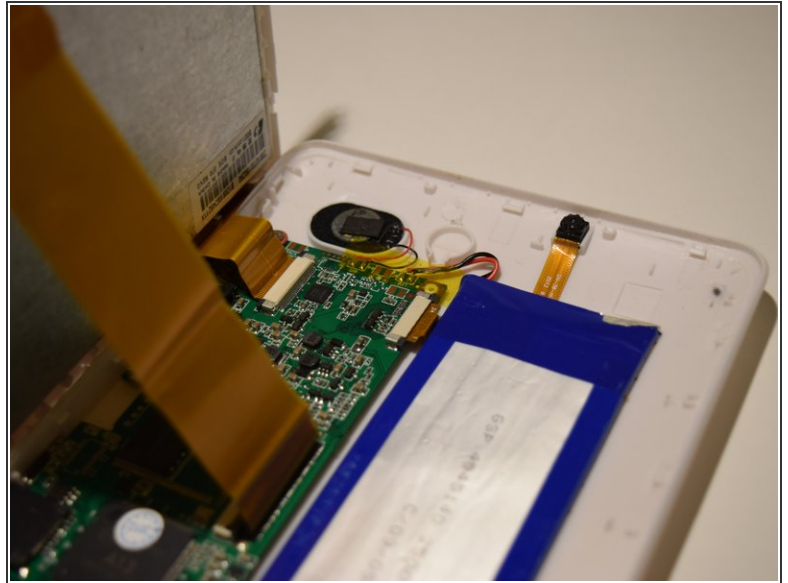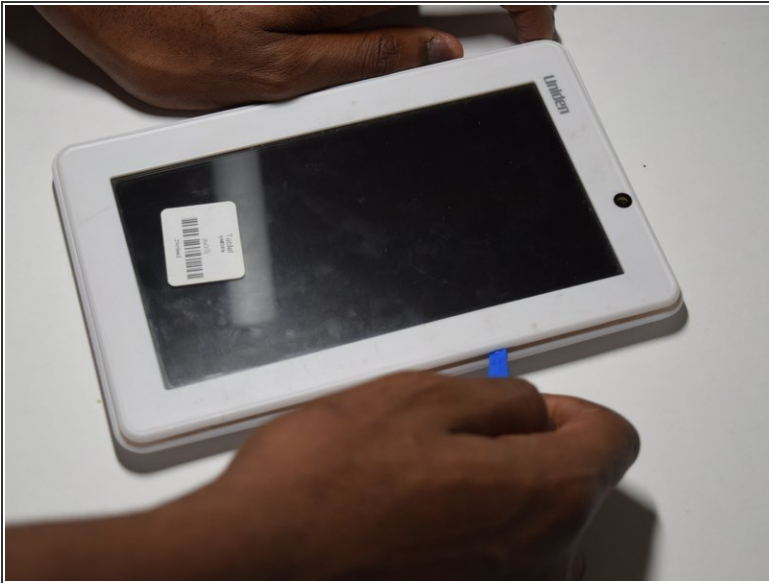


- Use a plastic opening tool to undo the clips that attach the two halves of the tablet.
- ⓘ Be gentle with the pry tool and work your way around the edges of the tablet slowly.
- ⚠ Make sure the tablet is powered off before prying open.
- ⚠ There are two power ribbons connecting the screen to the back of the tablet. Make sure not to put too much stress on them.

Step 2

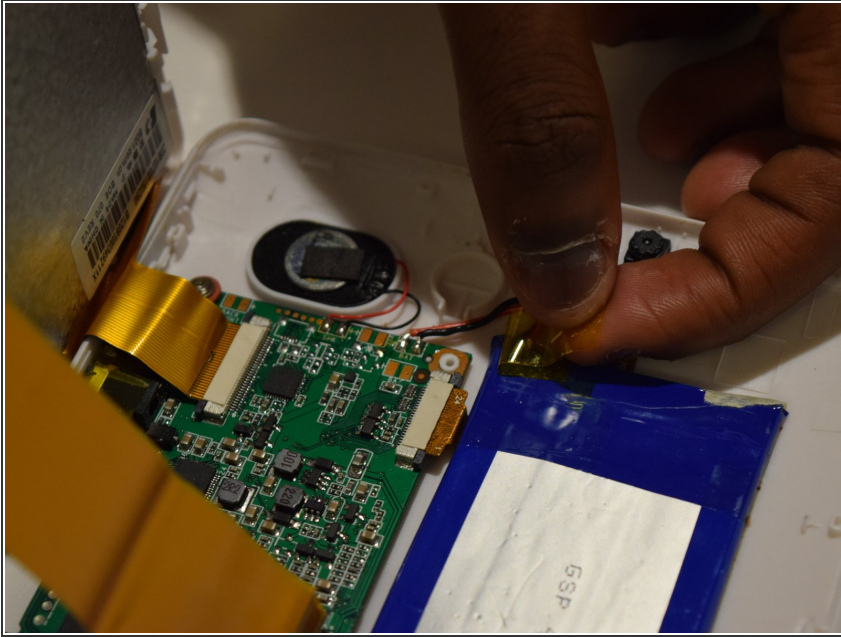

- Lift off the tape that holds the speaker wires to the battery
- ☑ Leave the tape off to the side

Step 3

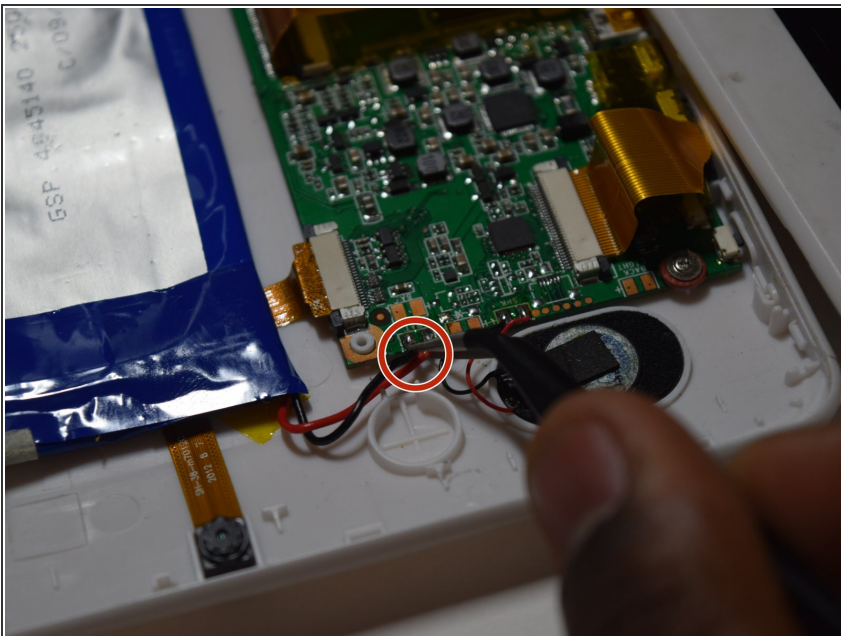

- Use a soldering tool to disconnect the two wires (red and black) that connect the battery to the motherboard
- ☑ Note the placement of each colored wire in the motherboard
- ⓘ If you have no experience in soldering, please follow this [guide](#)

Step 4



- Use a credit card to lift the battery off the back of the tablet
- ⚠ Do not put any pressure on the motherboard or any other internal components.
- ⓘ The battery attached to the back panel with adhesive. You may need to use a heated [iOpener](#) to loosen the adhesive and remove the battery.

To reassemble your device, follow these instructions in reverse order.