



# Dell Inspiron Mini 10 Palm Rest Replacement

Steps on how to replace the plastic palm rest on the Dell Inspiron Mini 10.

Written By: Bariso Shuba



---

## INTRODUCTION

This guide will show you how to remove the palm rest. This may be necessary in order to clean beneath the palm rest or to access the touchpad.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- ⚠ To prevent injury and loss of data, ensure the device is turned off.
- Slide the release latches out toward the edges to unlock the battery.

## Step 2



- Remove the battery by pulling it up and out.




## Step 3 — Palm Rest



- Using a prying tool, gently pry the palm rest off of the palm rest bracket. Start prying from one side and slowly work your way around.

⚠ Carefully remove the palm rest from the computer base since it is still connected by a cable and to avoid damage to the palm rest.

## Step 4

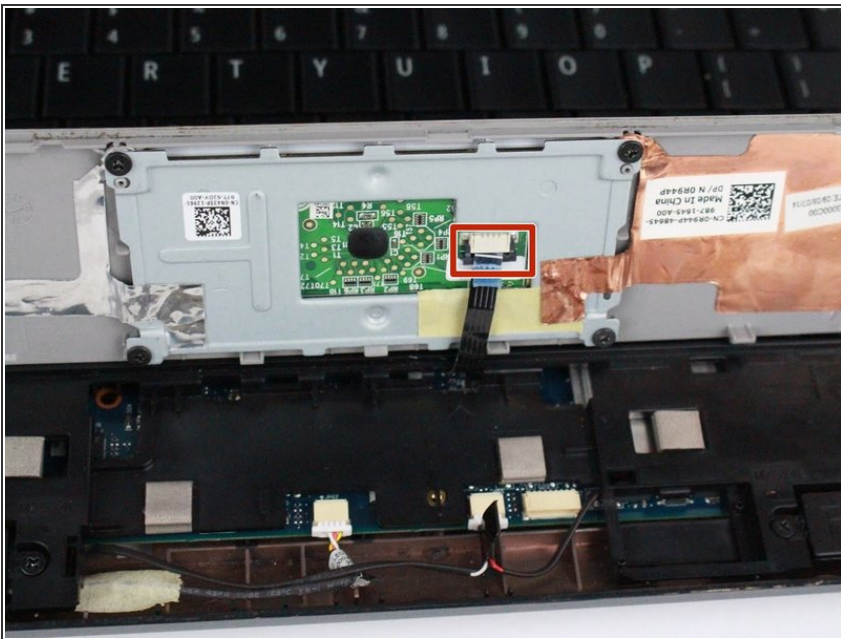

- Gently pull the touchpad cable off the palm rest bracket.
- Lift the rest of the palm rest off the computer base.

To reassemble your device, follow these instructions in reverse order.