



Acer Aspire 5334-2581 RAM Replacement

The Acer Aspire 5334 RAM is an easy component to remove.

Written By: gilson teixeira



INTRODUCTION


This guide is simple and it will show how to replace RAM on your Acer Aspire 5334-2581. RAM usually helps boost the computer speed and functionality.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery

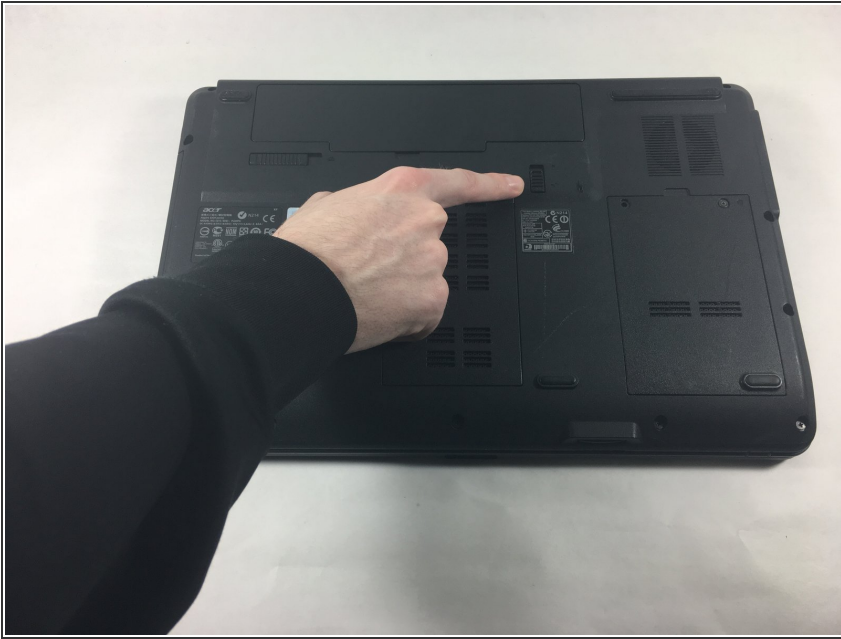


- Please make sure your device is unplugged . Turn it over slowly, and place it on a flat surface.

Step 2




- This latch holds your battery in place, it should always be locked. Make sure to unlock this piece.
- ⚠ Do not break this latch, otherwise your battery will not hold in place.

Step 3

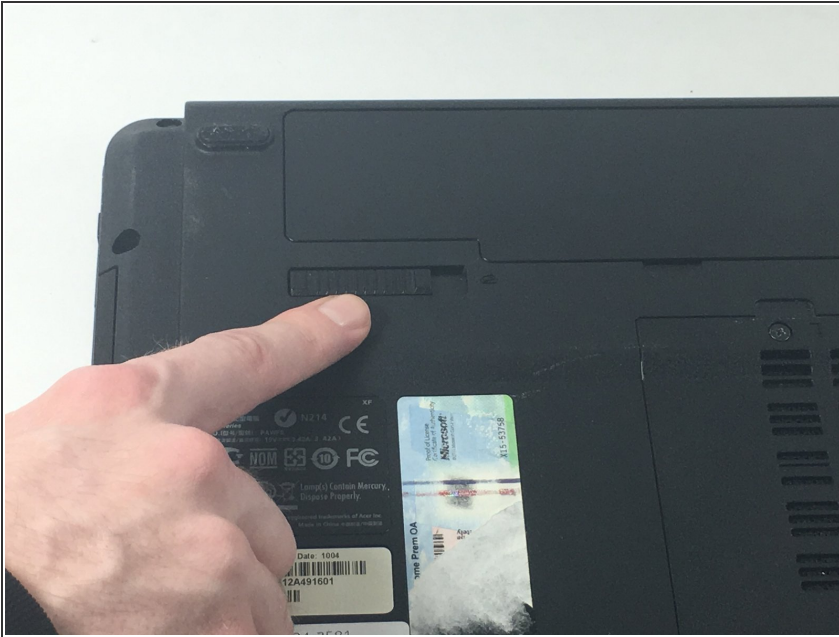


- Locate the eject latch and push it so the battery can come out.
- The battery will lift up once you have pushed the latch.
- ☑ You DO NOT need to adjust the latch when replacing the new battery, because it just snaps in place.

Step 4

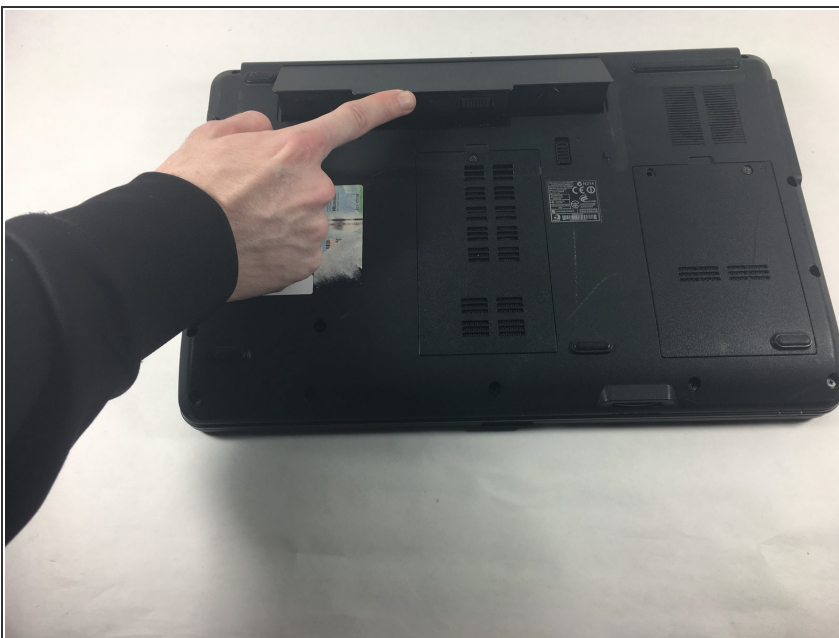

- Lift the battery up, and it should just come right off. You should see the label with the part number.

Step 5 — RAM

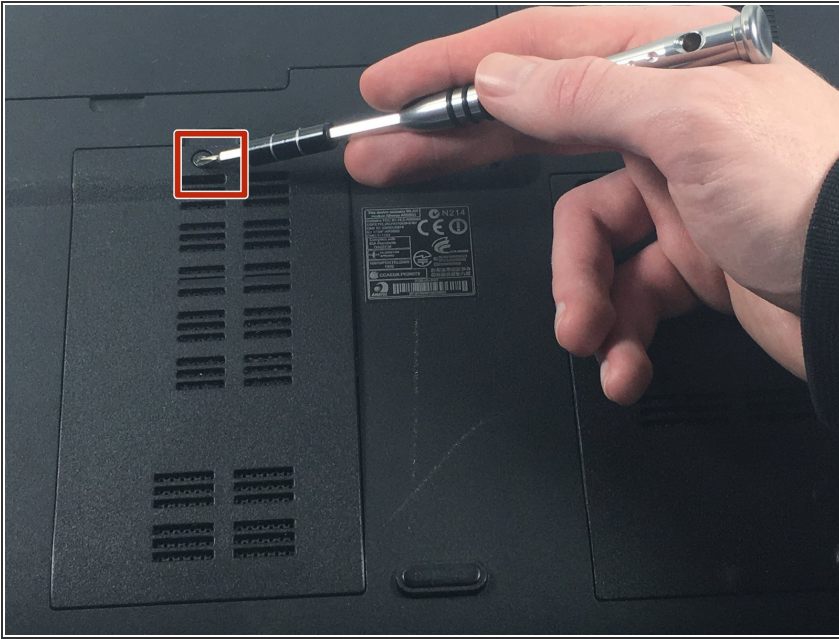

- Remove the phillips screw
- then take away the cover

Step 6



- Push the marked claws to the side in order to make the RAM free.
 - To remove the RAM just pull it in the shown direction.
- ⚠ Take extra care when removing the RAM, you do not want to damage the placeholder for the RAM.

To reassemble your device, follow these instructions in reverse order.