



HP Compaq C700 Battery Replacement

This guide shows the steps of removing a battery from the HP Compaq C700 laptop.


Written By: Taylor Johansen



INTRODUCTION

From this guide, you will learn how to locate and safely remove a battery from a HP Compaq C700 laptop.

Step 1 — Battery

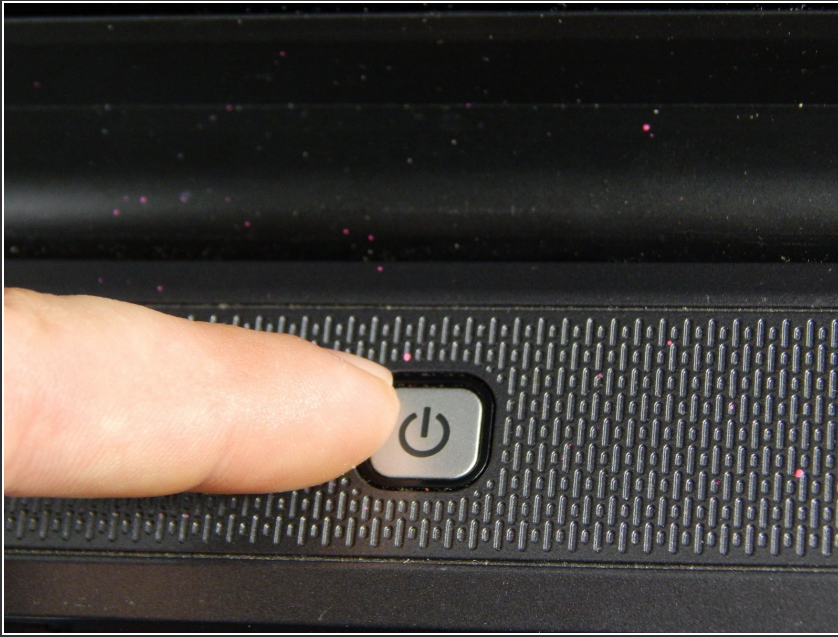

- ⚠ It is advised to work on the device only when it is powered off so as to avoid electrocution risks.
- Turn off computer by pressing and holding the power button.

Step 2



- On the underside of the laptop, locate the sliding lock that keeps the battery in place.
- Using your finger, slide the battery lock to the left to unlock the battery. Once the battery is unlocked, it is free to be removed.

To reassemble your device, follow these instructions in reverse order.