


# **Dell Streak 7 Battery Replacement**

Replace the battery.

Written By: Jair Garcia Varela

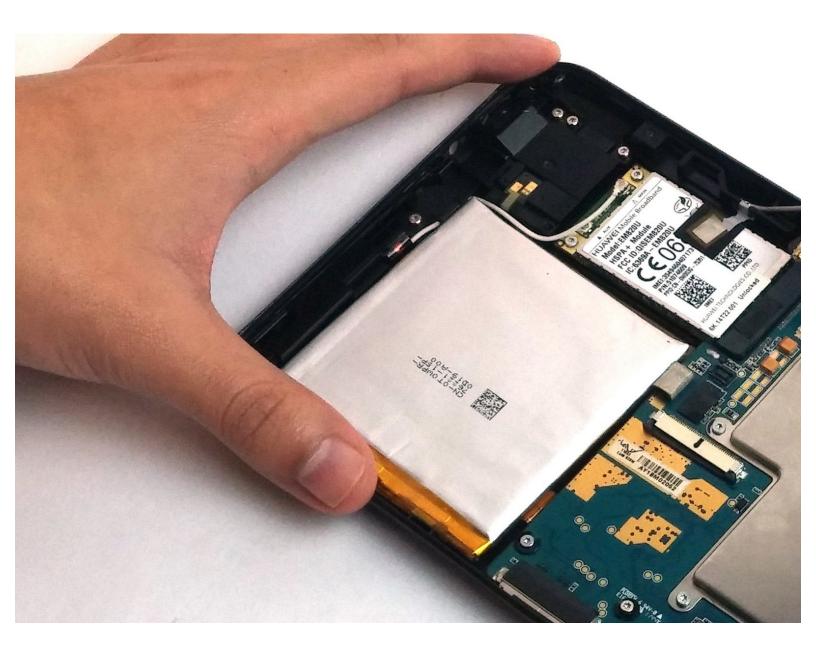

#### **INTRODUCTION**

Use this guide to replace the battery in the Dell Streak 7. This guide will show the steps required to replace the battery in the tablet.



#### TOOLS:


- Tweezers (1)
- T5 Torx Screwdriver (1)
- Heavy-Duty Spudger (1)
- iOpener (1)

#### Step 1 — Front Panel Assembly




- Insert the spudger under the capacitive button panel, and slide the spudger all the way around.
- You will want to heat up the screen edges with the iOpener to help facilitate removal.

#### Step 2

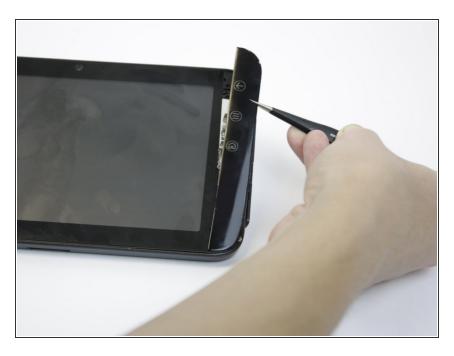

 Remove the button cover by lifting the cover away from the tablet.

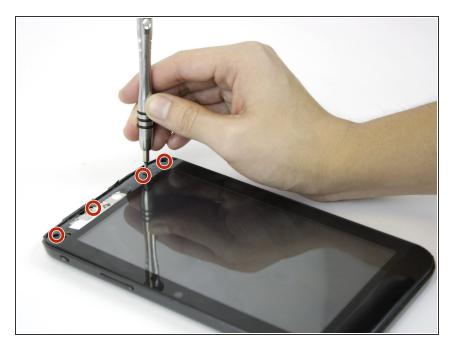

 Using the Torx screwdriver, remove the 4mm screws.

# Step 4



 With the Torx screwdriver, remove the two 5mm screws.





- Using the spudger, insert it under the black side panel. Slide the spudger all the way around until the cover piece comes off.
- With the Torx screwdriver, remove the two 4mm screws.

# Step 6



 Use the spudger to go along the edges of the device and pop out the latches securing the display to the case.







- (i) Ribbon cables are very sensitive and prone to breaking
- Disconnect the ribbon cables by unlocking the connector and pulling the cable out slowly.
- Make sure all the cables are unplugged before opening the device completely. Failure to do so might lead to broken or torn cables.

#### Step 8 — Headphone Jack



- Using the spudger, disconnect the ribbon cable by lifting up on the connector.
- (i) Ribbon cables are fragile and easily broken.

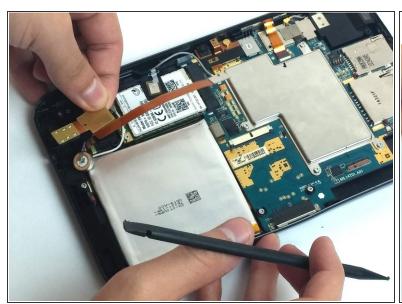

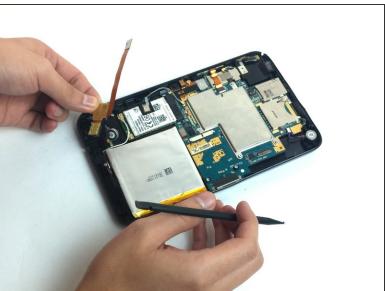


Pull the headphone jack up, away from the case.

# Step 10 — GSM Module





With the spudger, disconnect the antenna cable located on the module.

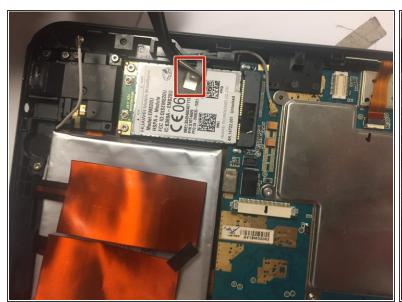



Using tweezers, remove the tape connected to the GSM module.

# Step 12





Remove the two 3mm screws securing the GSM module. Use the Torx screwdriver.



 Disconnect the GSM module by lifting the module up, out of the case.


#### Step 14 — Motherboard







• Using the spudger, disconnect the front camera by lifting up on the connector.

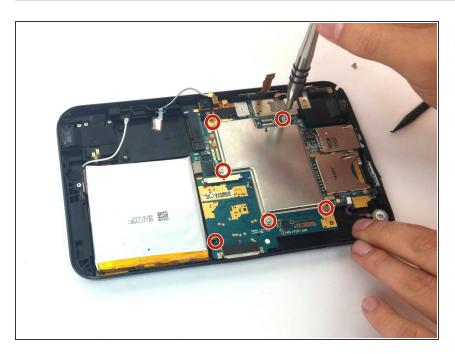


 Using the Torx screwdriver, remove the six 3mm screws.

# Step 16





Lift up the metal cover.

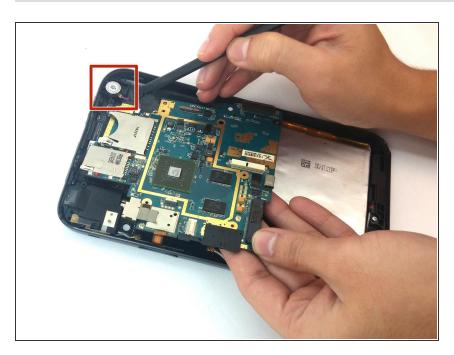


 Use the spudger to lift the vibration motor out of the case.


# Step 18



 Pull out the motherboard and the battery.

#### Step 19 — Battery

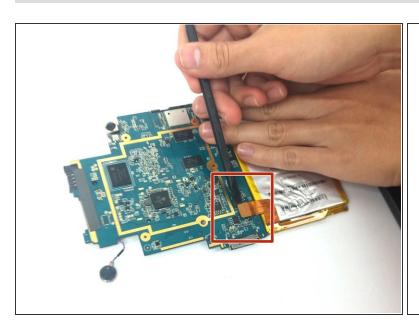

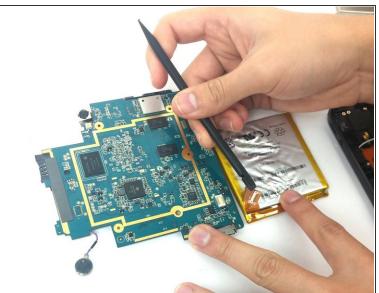

• Use the spudger to lift up and detach the cable connecting the battery to the motherboard.

To reassemble your device, follow these instructions in reverse order.