



DeWalt DW997 Trigger Replacement

This guide will help the user replace the trigger pack if it becomes corroded or simply stops working.

Written By: Vanessa Duran





INTRODUCTION

This guide will show you how to replace the trigger pack. This is necessary if the battery is charged but the drill will not start or if the battery is fine but the drill will not spin.

TOOLS:


- [T15 Torx Screwdriver](#) (1)
 - [T10 Torx Security Bit Screwdriver](#) (1)
-

Step 1 — Trigger

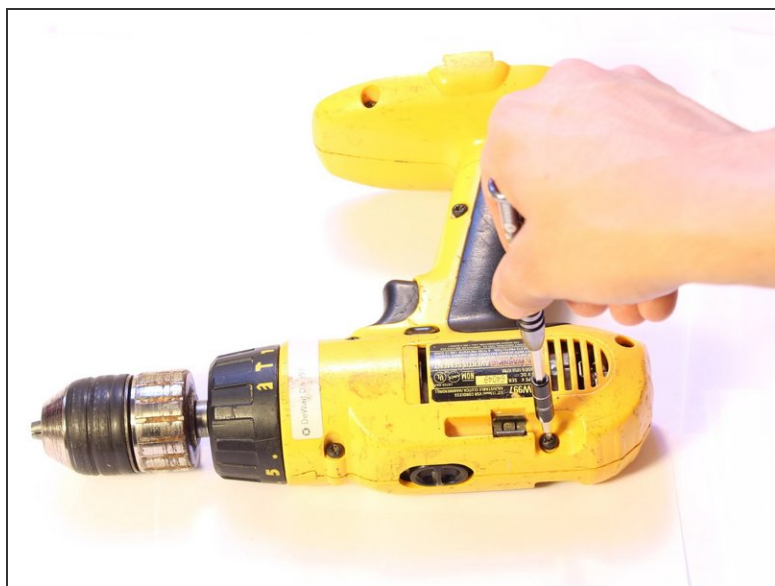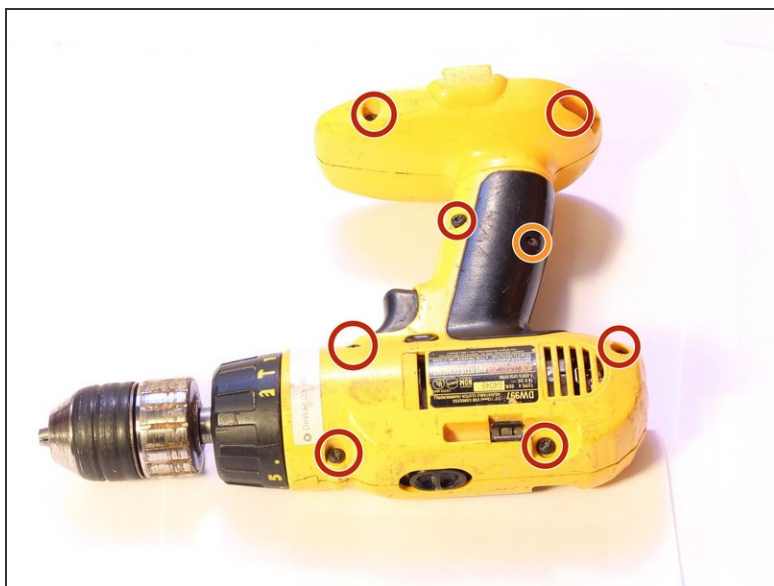


- First remove the seven 21mm screws using a Torx T15 screw bit.
 - Then use a Torx T10 screw bit to remove the remaining 18mm screw.
 - After removing all of the screws, lift the cover off.
- ⚠ Do not attempt to pry the covers apart; doing so can cause the covers to crack.

Step 2

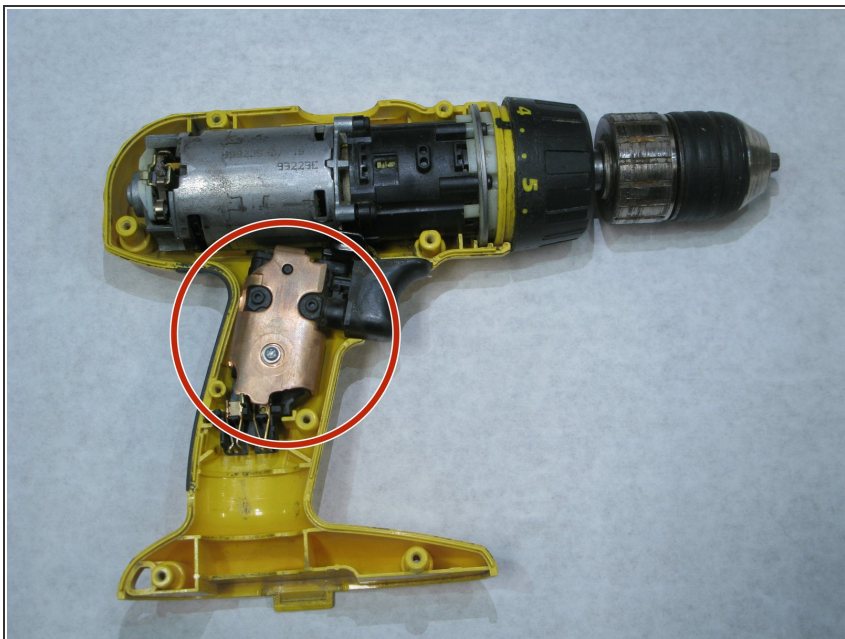

- Carefully remove the trigger pack by lifting the pack straight up.

Step 3

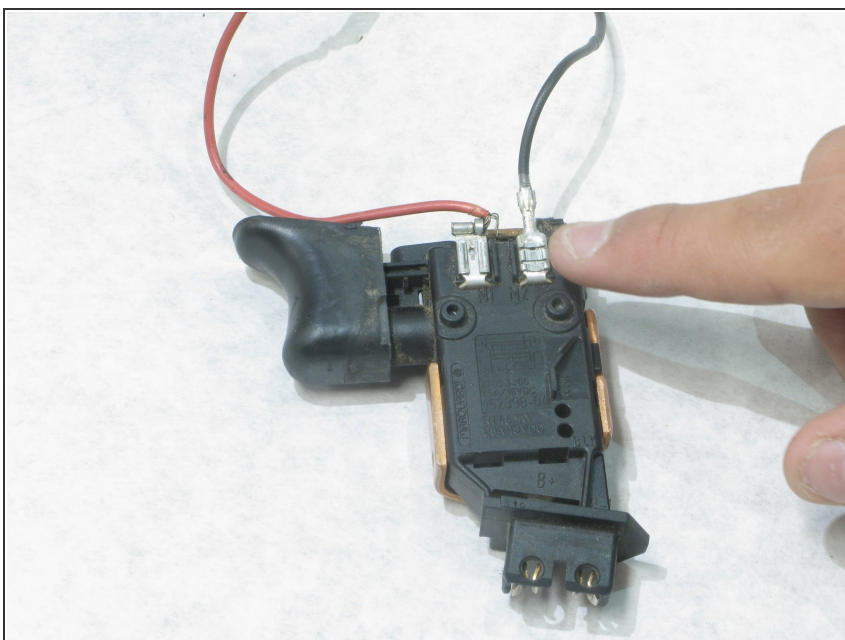

- The final step is to pull the wires off of the trigger by pulling the wire heads.
- ⚠ Be careful while taking off the wires as they can tear.

To reassemble your device, follow these instructions in reverse order.