




Belkin NetCam HD Plus Front Casing Replacement

This guide shows how to replace the front casing on the Belkin NetCam HD+.

Written By: Destinie DiazVerdejo

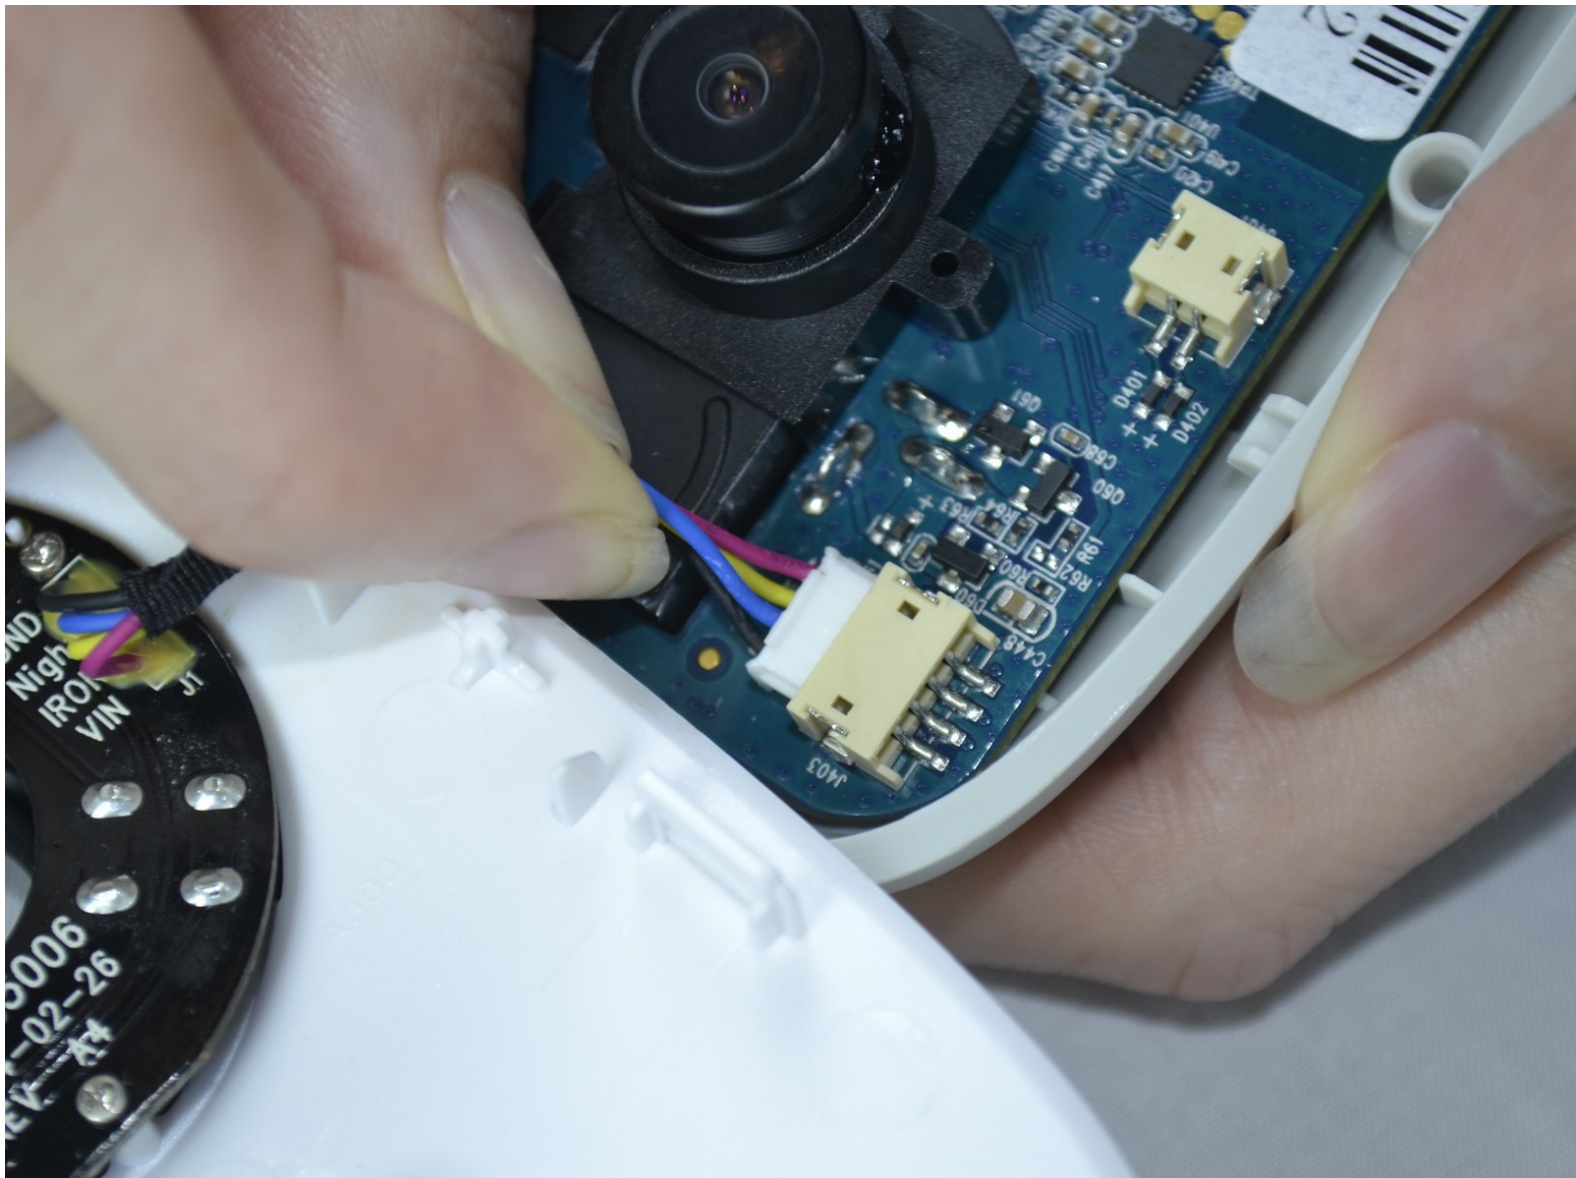

INTRODUCTION

This guide will walk you through how to replace the front casing on the NetCam.

TOOLS:

- [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Case




- Use a wrench to loosen up the stand from the back in order to hold the NetCam more comfortably.

Step 2



- Work a plastic opening tool into the seam and pry the face plate away from the back panel.



Step 3

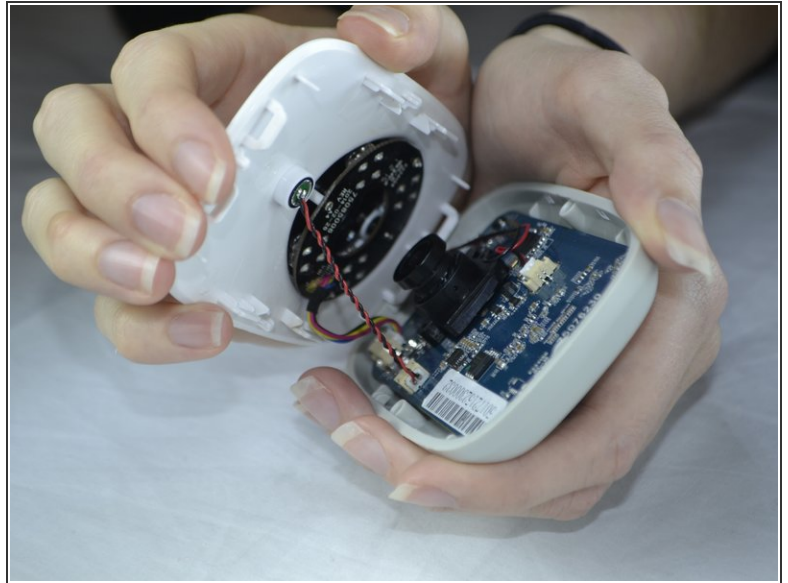

- Use pressure to separate the covers.



⚠ When pulling the device apart, separate from the bottom up in order to avoid pulling the wiring at the top apart.

Step 4 — Microphone

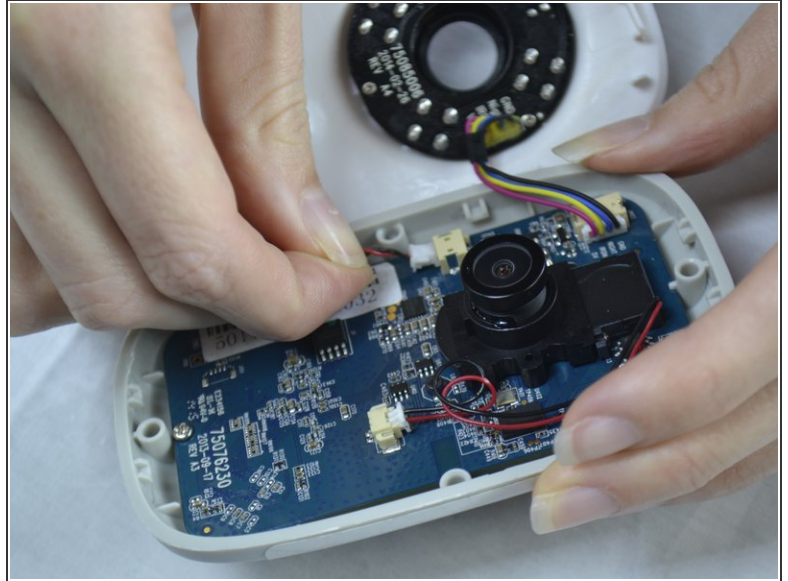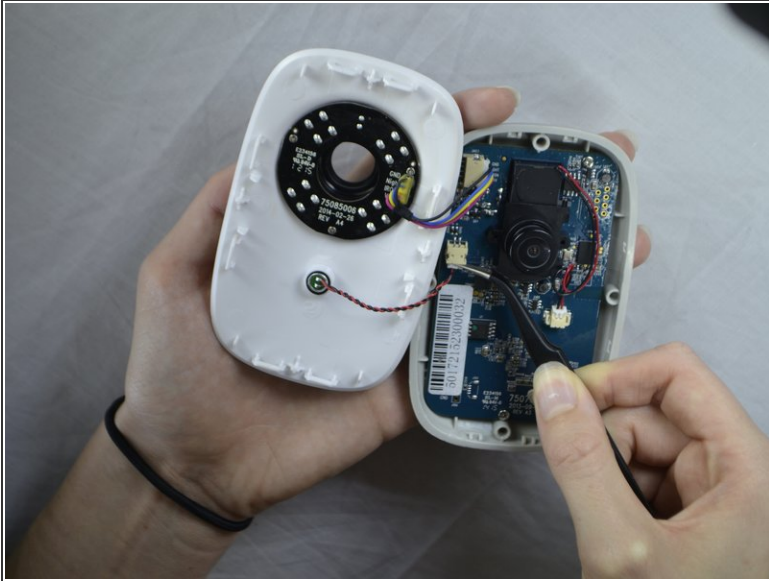


- Use tweezers to gently pull out the white attachment from the port.
- Use your fingers to pull out the white attachment from the tan port on the front of the board a little.

Step 5

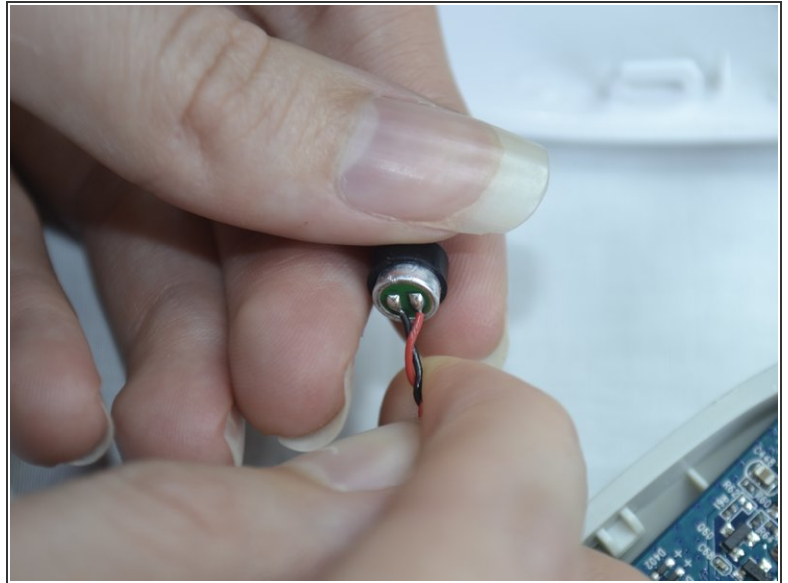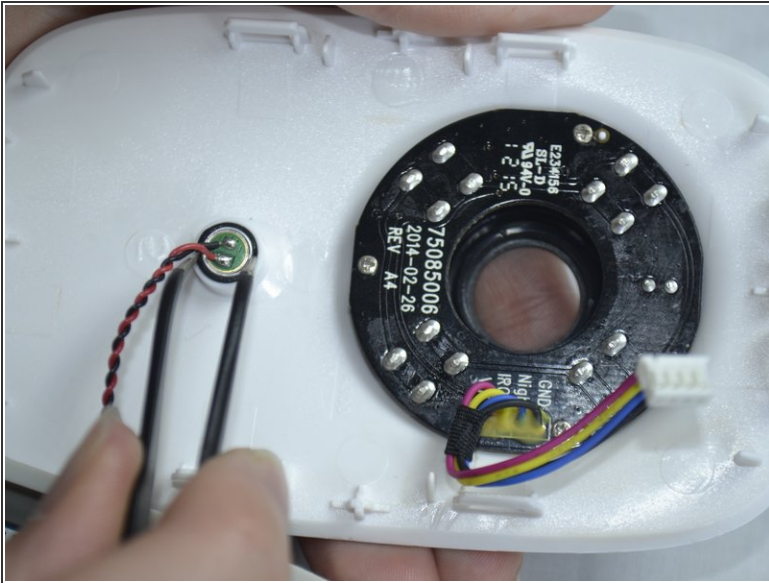

- Use a pair of tweezers to wedge between the mic and the rubber guard to remove the mic from the front cover.
- ⓘ If the rubber guard comes off with the mic just remove the guard from mic and place back on the front cover.

Step 6 — Front Casing

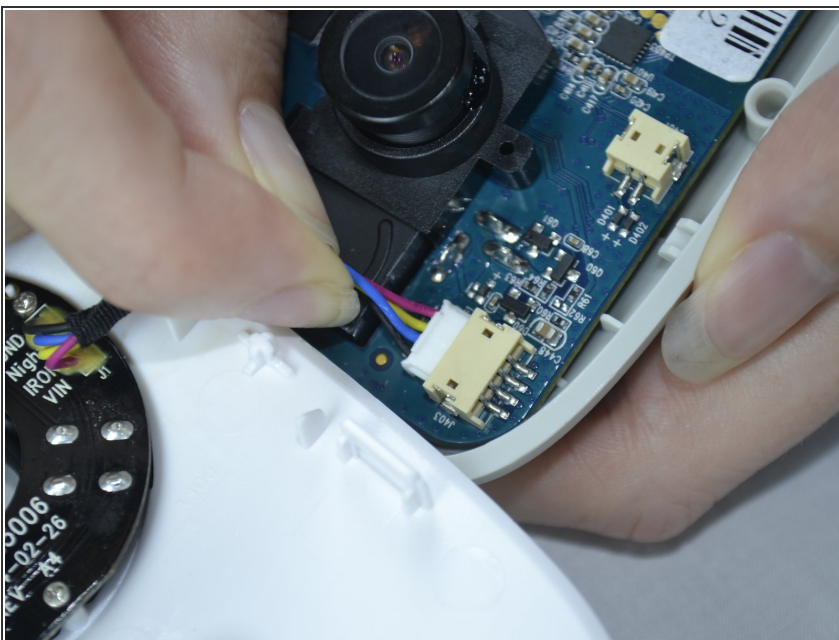

- Carefully use your fingers to gently pull out the white attachment from the tan colored part.

To reassemble your device, follow these instructions in reverse order.