



HP Omni 10 Audio Board Replacement

How to remove and replace the audio board from the tablet.

Written By: Alex Miller



INTRODUCTION


Using a spudger and a 00 Phillips head screwdriver, this guide will show how to remove an audio board from an HP Omni 10 tablet in roughly 3 to 4 minutes.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Audio Board

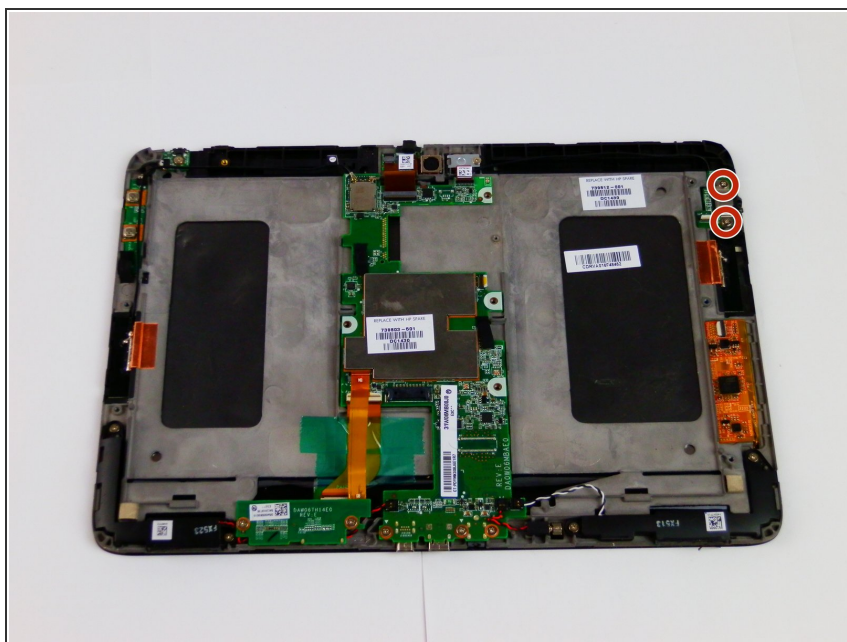



- Unscrew the two 3.3 mm screws with a 00 Phillips head screwdriver.

Step 2

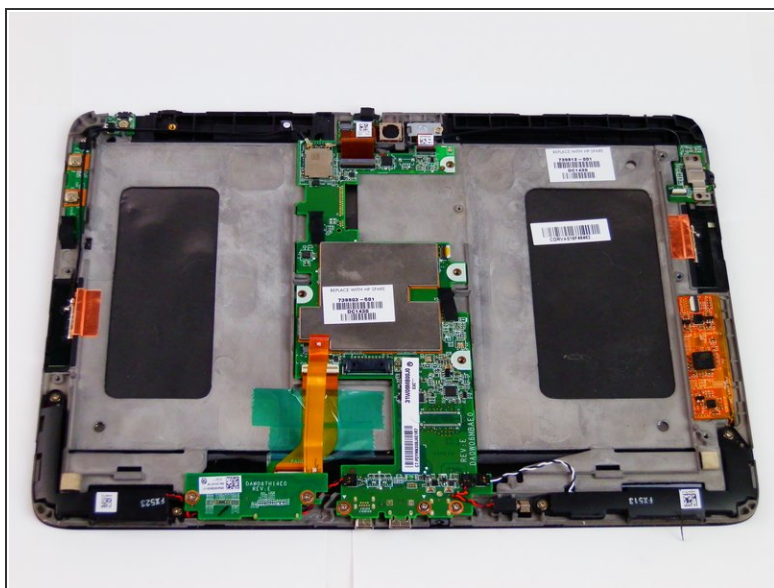

- Remove the metal plate from the audio board.

Step 3

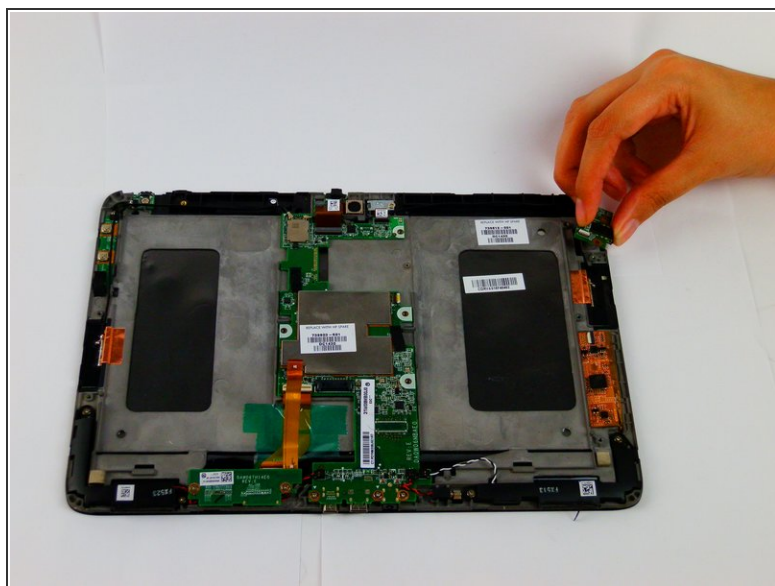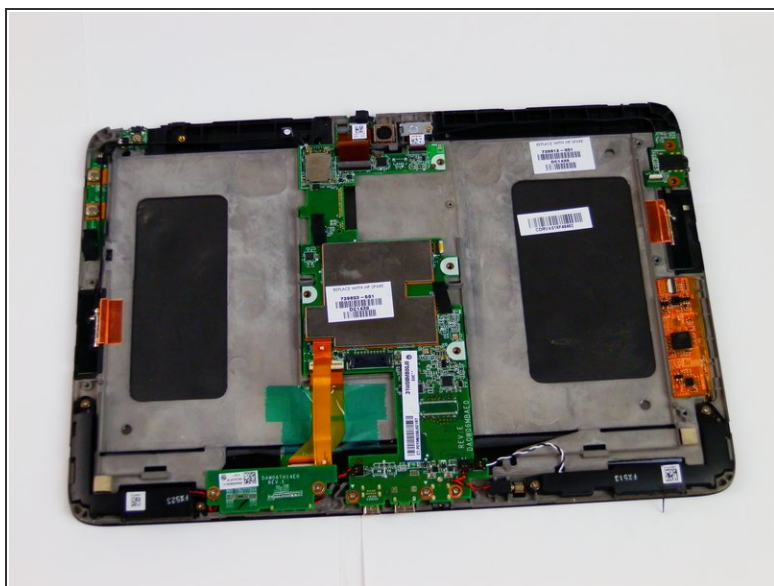

- Remove the audio board from the device.

To reassemble your device, follow these instructions in reverse order.