



Ricoh Shotmaster 130Z Film Replacement

How to replace the 35 mm film roll in the Ricoh Shotmaster 130Z.

Written By: anna carolina von einem



INTRODUCTION

How to replace the 35 mm film roll in the Ricoh Shotmaster 130Z.

Step 1 — Film




- Push the switch that says "open" on the side of the camera to gain access to the film compartment

Step 2



- Unroll part of the film and put the roll on the right side unrolling clockwise

Step 3

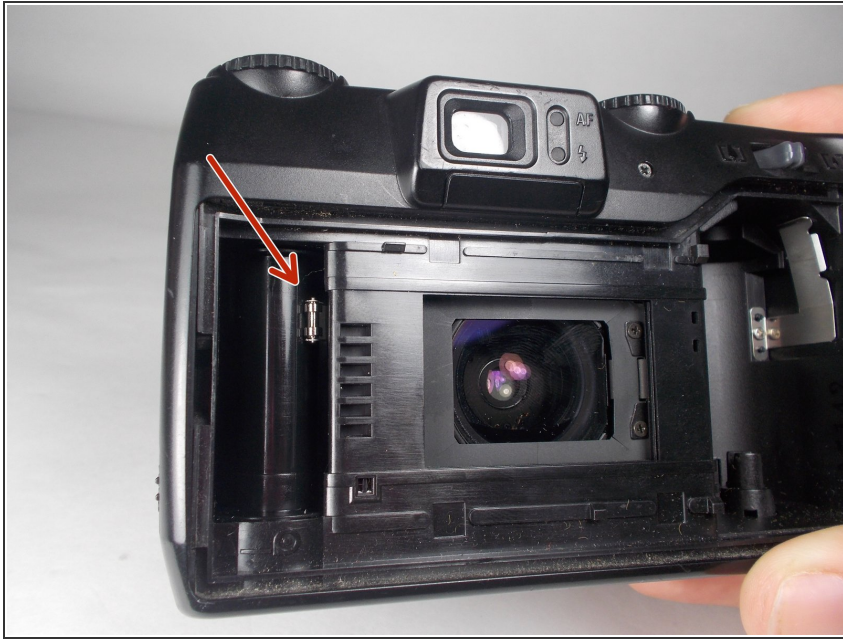

- Then, insert the unrolled part of the film into the slot on the left part of the compartment making sure the silver lever is securing the film.

To reassemble your device, follow these instructions in reverse order.