

# **Garmin Dezl 770LMT Screen Replacement**

Written By: Aleem Waris



## TOOLS:

Spudger (1) T6 Torx Screwdriver. (1) T5 Torx Screwdriver (1)

#### Step 1 — Back Panel Removal



• Turn the device screen down and using the screwdriver remove all eight screws from the back plate.

### Step 2



 Place a nylon spudger in the seam between the front and back panel and carefully lift around the edge of the device.

#### Step 3



• Use the spudger to pry apart the screen from all around the device.

▲ Gently lift the screen so not to disconnect the ribbon attaching the screen to the motherboard.

#### Step 4 — Screen



- After you've removed the back cover, you will see a copper colored ribbon connected to a grey hinge.
- Carefully remove the hinge from the cord using a spudger and the ribbon will come out.
- The regular black nylon spudger should be used whenever possible, especially around sensitive internal components.
- A Make sure to wear an <u>anti-static wrist strap</u> when handling the motherboard.

#### Step 5



• Now you have the screen, which is enclosed by another cover. Remove the eight screws that hold it in place.

## Step 6



 Once the screws have been taken out, use a spudger to carefully remove the cover.
With this cover removed, the screen is now completely exposed.

To reassemble your device, follow these instructions in reverse order.