


# **Asus K53E-BBR3 Optical Drive Replacement**

This guide will instruct you on how to properly...

Written By: Jacob O'Donnell

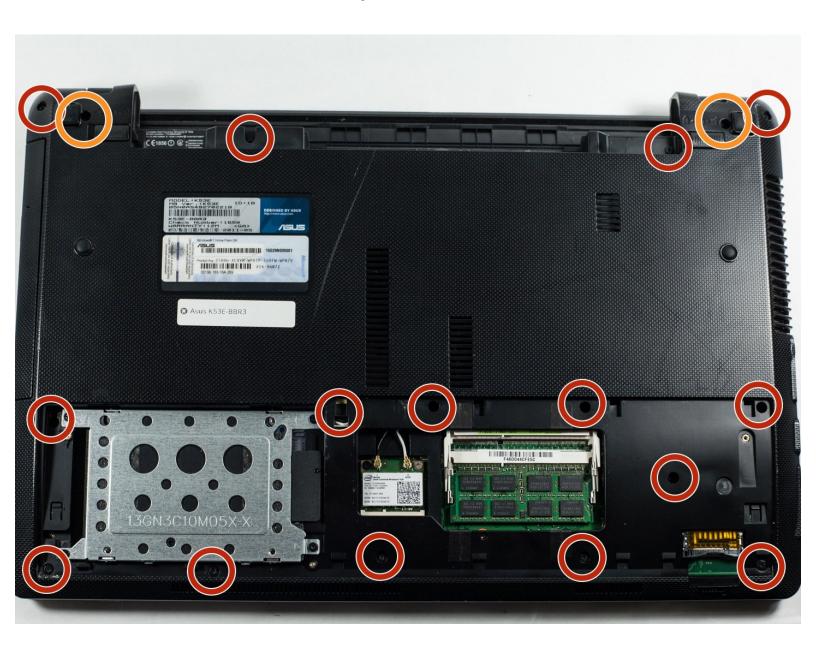

### **INTRODUCTION**

This guide will instruct you on how to properly remove the optical drive.



## **TOOLS:**

- Spudger (1)
- iFixit Opening Tool (1)
- Phillips #1 Screwdriver (1)

#### Step 1 — Battery







- Place your laptop face down in front of you.
- Slide the button in the top right corner to the right so that the orange marker is showing.
- Press the spring loaded latch to release the battery from the computer.

#### Step 2 — Back Panel



Unscrew two 5mm Phillips #1 screws.



 Pull down and lift up on the back panel to remove it.

#### Step 4 — Keyboard







- There is a ribbon connector underneath the keyboard. When lifting up the keyboard be gentle and carefully it up.
- Insert the spudger into the indent near the "ESC" key.
- Firmly wiggle the spudger across the keyboard in between the space until you can remove the keyboard.



 Gently pull the ribbon cable to the right and out of its port.


#### Step 6 — Optical Drive







- On the back of the laptop unscrew the eighteen 5mm Phillips #1 screws.
- Unscrew the two 5mm Phillips #1 screws.
- (i) The screws highlighted in orange are slightly thicker than those in red, however they are the same length and head type.

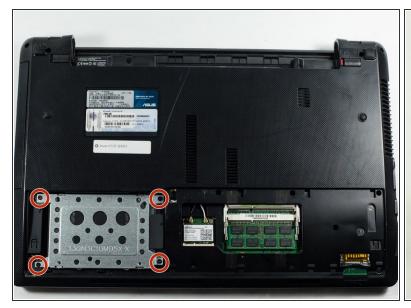




- Unscrew the four highlighted 5mm Phillips #1 screws, and remove the hard drive.
- Unscrew the 3mm Phillips #1 screw.

## Step 8



 Flip the laptop over and remove the seven 5mm Phillips #1 screws.



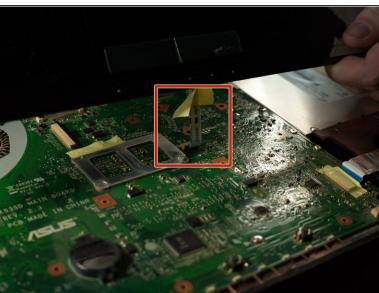

- There is a ribbon connector that is connecting the two halves of the laptop. So when opening the two plastic pieces be careful not to damage the cable.
- Using the plastic opening tool, firmly pry apart the two sections of plastic.
- Firmly shimmy the opening tool around the laptop prying the two sections of plastic apart.
- Disconnect the highlighted ribbon cable, by pulling up on the black tab and gently pulling the cable out of its port.





- Unscrew the three 3mm Phillips #0 screws.
- Slide the optical drive to the right.
- Remove the optical drive.

To reassemble your device, follow these instructions in reverse order.