



Toshiba Satellite C855D-S5303 RAM Replacement

If your laptop is freezing, glitching, or running slow your Ram may be defective.

Written By: Courtney Burns



INTRODUCTION

This guide will show you how to remove your laptops RAM. This process requires a small Phillips Head screwdriver and your hands. There will be several small screws removed, so be sure you have a place to store them as you work to keep from losing any.

TOOLS:


- [Small Phillips Head Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — RAM




- Using a small Phillip's head screwdriver, unscrew the single 7 mm screw (5 mm head) on the L-shaped panel on the backside of the laptop.
 - Once the screw is removed, pry the panel upwards by gripping the groove pictured.
- ⚠ Be gentle while lifting the panel. You do not want to break it by applying too much force.

Step 2

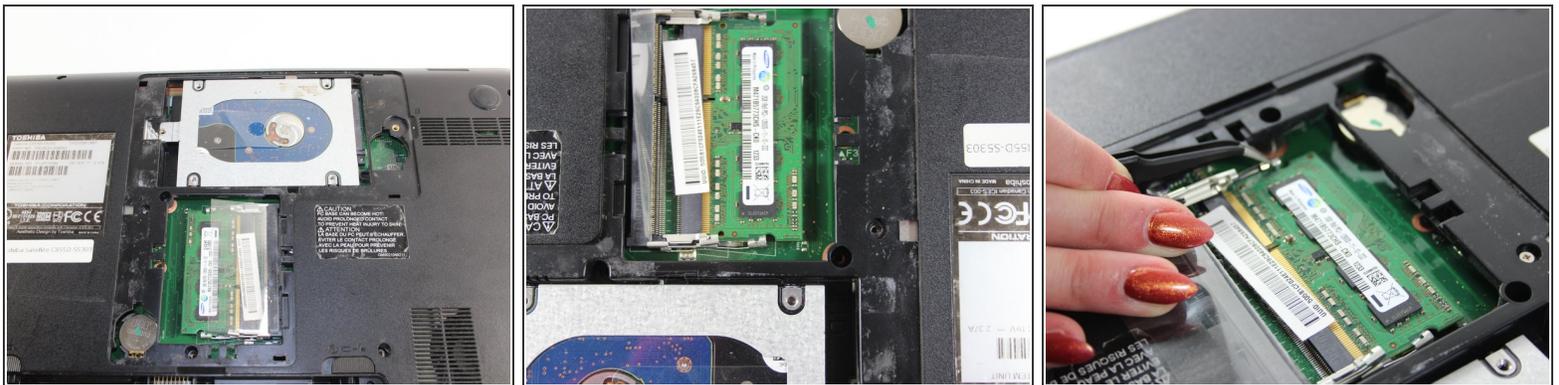

- Using the curved tweezers from the Precision Tweezers Set grab and pull the metal clips away from each side of the RAM.

Step 3

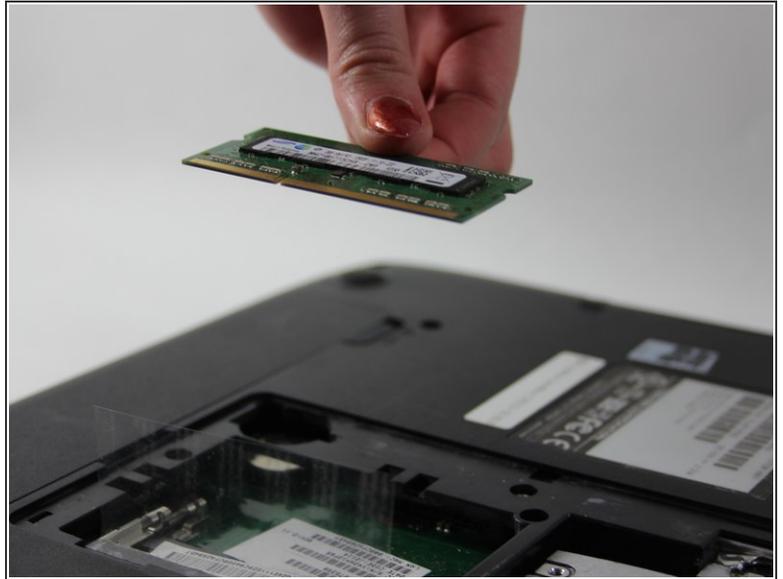

- Now the card is free to remove; pull out and up from the slot that it is in.

To reassemble your device, follow these instructions in reverse order.