

Asus MeMO Pad HD 8 ME180A SIM Card Reader Replacement

You will learn how to replace the SIM card...

Written By: Rebecca Ellerhorst



INTRODUCTION

You will learn how to replace the SIM card reader. Review this guide if you are having difficulties with the SIM card reader. In order to replace the SIM card reader, you have to remove the battery. Please use our Asus MeMO Pad HD 8 ME180A Battery Replacement Guide to do so prior to starting.

TOOLS:

iFixit Opening Tool (1)
Phillips #0 Screwdriver (1)
Heavy-Duty Spudger (1)
Anti-Static Wrist Strap (1)
Soldering Iron (1)
Desoldering Braid (1)


Step 1 — Battery





- Use a plastic opening tool to separate the back half from the front half.
- Pull the back panel away from the device.
- i The volume buttons can fall out of the case. Be careful not to lose them.

Step 2

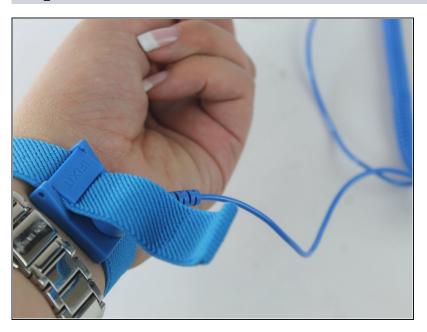

• Ensure that you are wearing your Anti-Static Wrist Strap.

Step 3








• Lift the white bar on the ZIF connector and pull the metal connector out.


Step 4

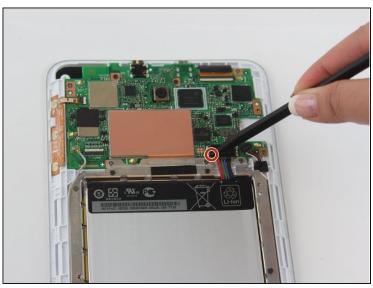



- Using your spudger, press down on the two spots shown in order to release the cables.
- Ensure that the touchscreen cables are fully disconnected.

Step 5

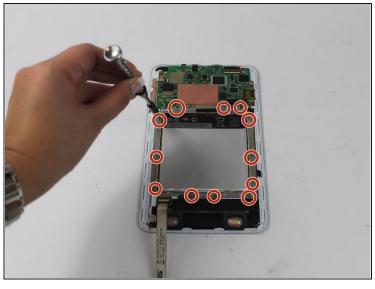




- Using a PH#0 screwdriver, remove the twelve silver 3.2 mm screws.
- Pull the battery out.

Step 6 — Motherboard



• Disconnect GPS Antenna cable.

Step 7

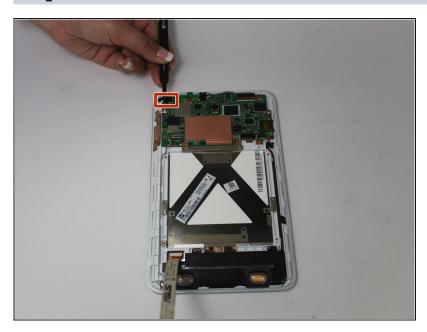

 Flip the latch and pull the ribbon cable to disconnect the ZIF connector.

Step 8



 Flip the latch and pull the ribbon cable to disconnect the ZIF connector.


Step 9





- Use a PH#0 screwdriver to unscrew the six 3.0 mm black screws.
- Lift the motherboard straight up to remove.

Step 10 — SIM Card Reader

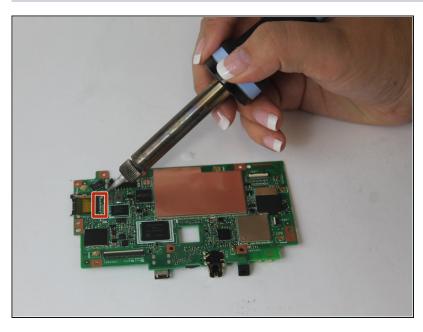

- Upon removal of the motherboard, desolder the pins that hold the SIM card reader in place.
- △ Soldering irons tend to get very hot. Be careful not to burn yourself.
- Check out iFixit's <u>Soldering</u>
 <u>Technique Guide</u> to brush up
 on your soldering skills.
- Using a pair of <u>tweezers</u>, if desired, pull the sim card straight out.

To reassemble your device, follow these instructions in reverse order.