

# PlayStation Move Trigger Button Replacement

In this guide you will have direction to how you can remove the trigger button


Written By: Abdulaziz Refaei





- Phillips #0 Screwdriver (1)
- Tweezers (1)
- iFixit Opening Tools (1)


#### Step 1 — Battery

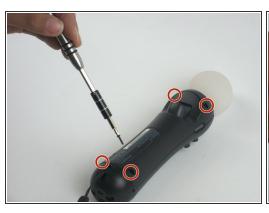







Using a Phillips #0 screwdriver, remove the four 10mm screws located on the back of the device.

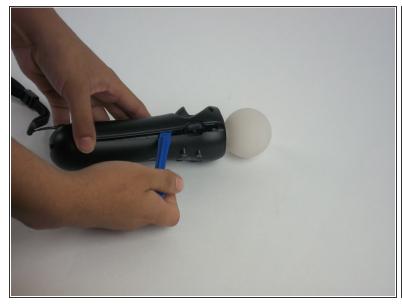



- Insert the plastic opening tool at the indent.
- Gently use a forward and backward motion to safely pop open the cover.
- Using your hands to further pull it apart.

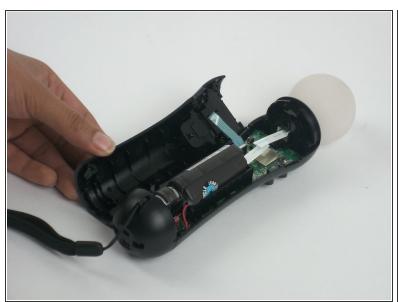

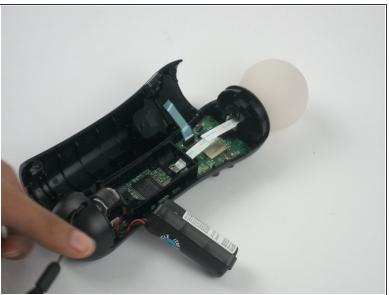


Guide ID: 74233 - Draft: 2020-11-13

Once the device is opened, lift the battery out of the black plastic holder.


Carefully pull the battery out and ensure that it's wires are still connected to the inside.






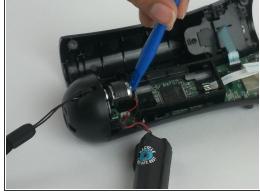


- Using a Phillips head screwdriver, remove the 9mm screw located to the right of the battery, which
  is connected to the inner plastic frame.
- Using the plastic opening tool carefully take out the grey cylindrical piece (vibrator) that is also attached to a wire.

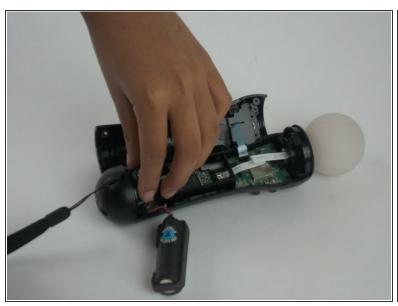

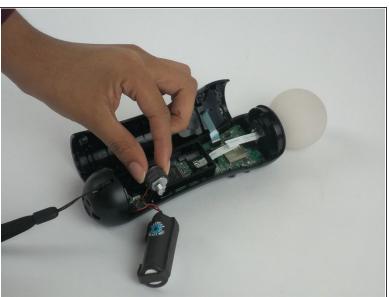

- Gently pull out the small grey cylindrical piece (vibrator).
- (i) Removing this piece makes it easier to access the wire connection of the battery and remove it.

# Step 6

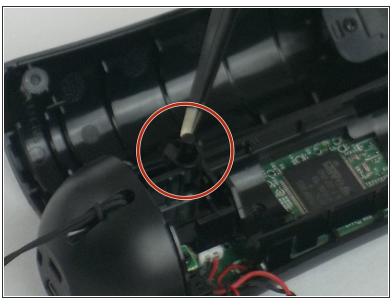



 Using tweezers, remove the small piece with a cylindrical top that is located to the left of the inner plastic frame.








- Using one hand to hold the device, and the other hand to squeeze the inner plastic frame.
- Remove by squeezing the inner plastic frame, lift and pull it towards you.
- Mhile removing the frame, be extremely careful because it could damage the frame or the motherboard.


## Step 8

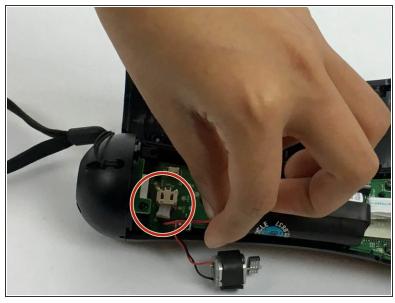




Gently pull on the white piece connecting the battery and the connector.

## **Step 9** — **Motherboard**

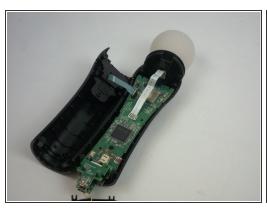


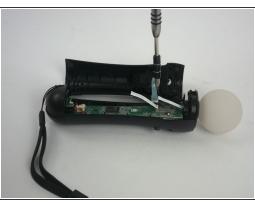




- Remove the five 1.2 mm screws from upper portion of the controller.
- (i) If you are replacing the trigger button, continue to step 13.


# Step 10

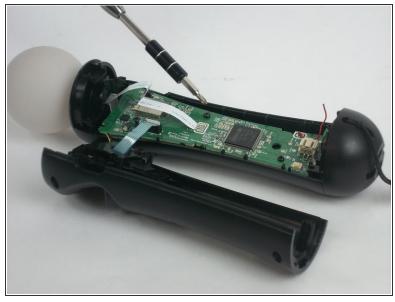




Remove the two 1.2mm Phillips #1 screws.

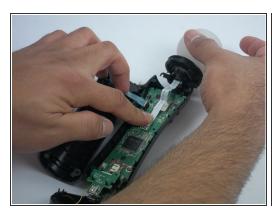

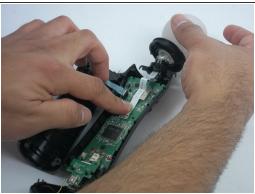




Cautiously remove the circular white piece at the top without removing the LED inside.

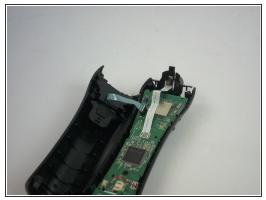






- Remove the blue strip that is connected to the trigger button from the motherboard.
- ⚠ Be careful to gently detach it from the motherboard. The strip may rip if too much strength is applied.

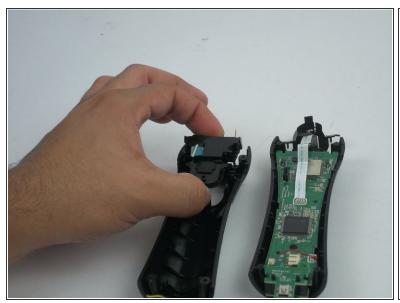




Remove the trigger button from the controller.

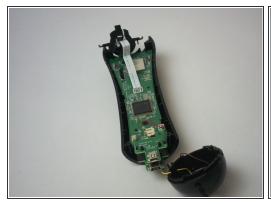



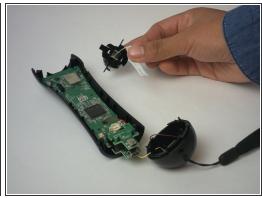

- Remove the LED light by removing the white strip.
- (i) If you are replacing the *LED light*, continue to <u>Step 17</u>.





Remove the motherboard from the plastic case.

To reassemble your device, follow these instructions in reverse order.