



# velocity micro tablet T301 Screen Display. Replacement

Steps to disassemble the screen of a velocity micro T301 tablet.

Written By: James Napoleon



---

## INTRODUCTION

In this guide you will help you to reach the screen display. It also will show you the tools that should be used in this replacement.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Metal Spudger](#) (1)
  - [Heavy-Duty Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Screen Display.




- Insert the plastic opening tool in the SD port. The edge point should be pointed towards the rear panel.

## Step 2



- Insert a small opening tool between the rear panel and the tablet.

### Step 3

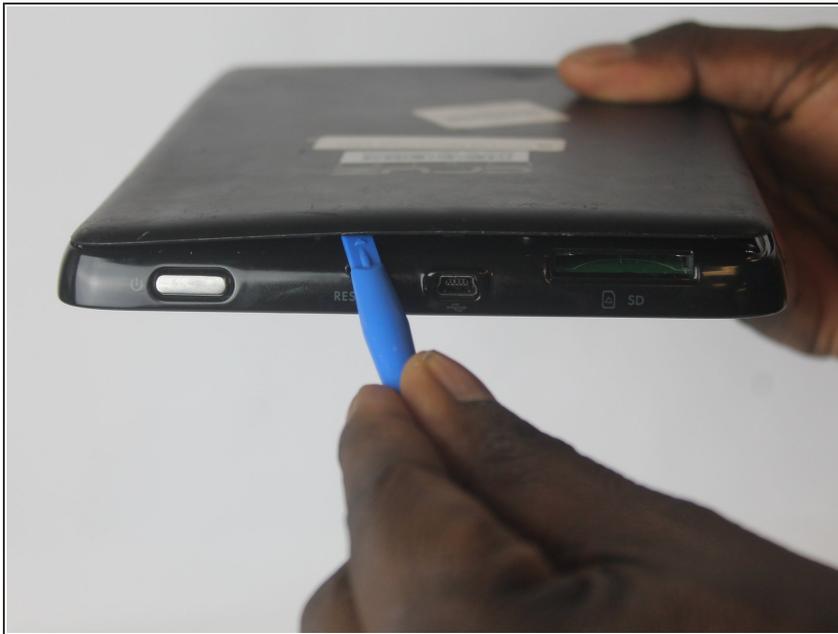


- The large opening tool is not needed any more.

### Step 4



- Move the small tool opener around the rear panel to free the 12 edges.

## Step 5

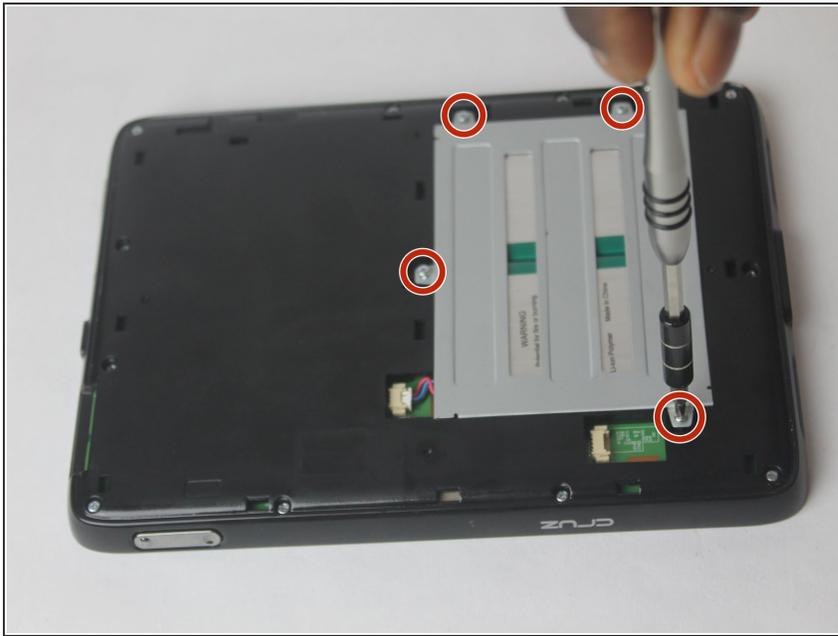

- Using PH0 Phillips Driver, remove the 4 Screws in the Metal part.

## Step 6



- Using a plastic Spudger remove the battery connector.

## Step 7



- Using PH0 Phillips Driver, remove the 12 Screws in the cover.

## Step 8




- Place a metal Spudger between the tablet and the back cover.

## Step 9




- Move the spudger around the tablet to release the clips attached to the tablet.

## Step 10

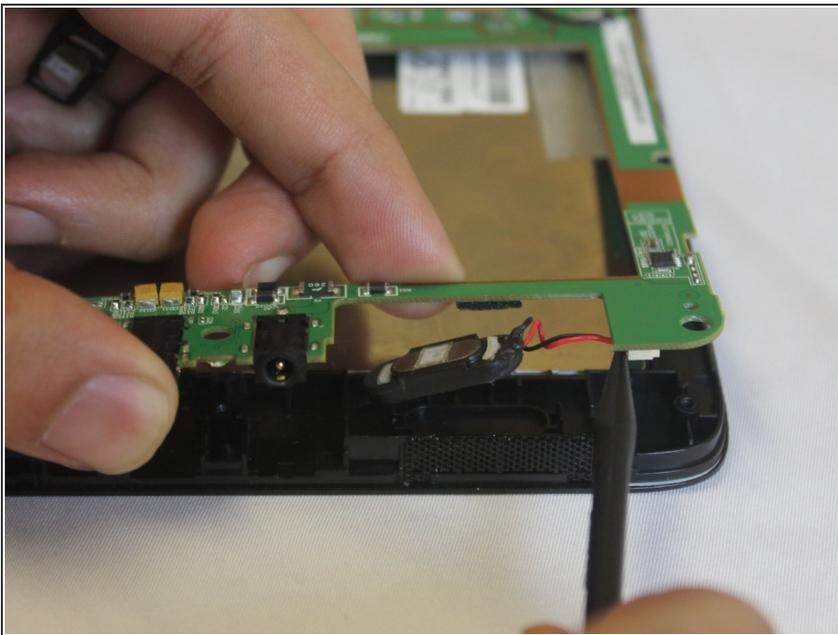


- Use a plastic spudger to release the connection between the speakers and the motherboard as shown in the picture.

## Step 11

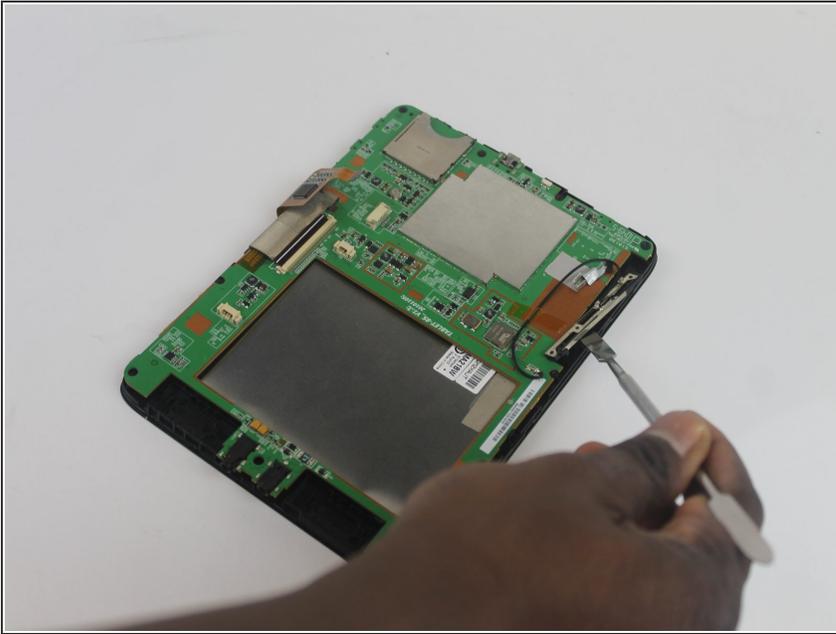


- Using a metal spudger to remove the top plug connector from the motherboard.

## Step 12

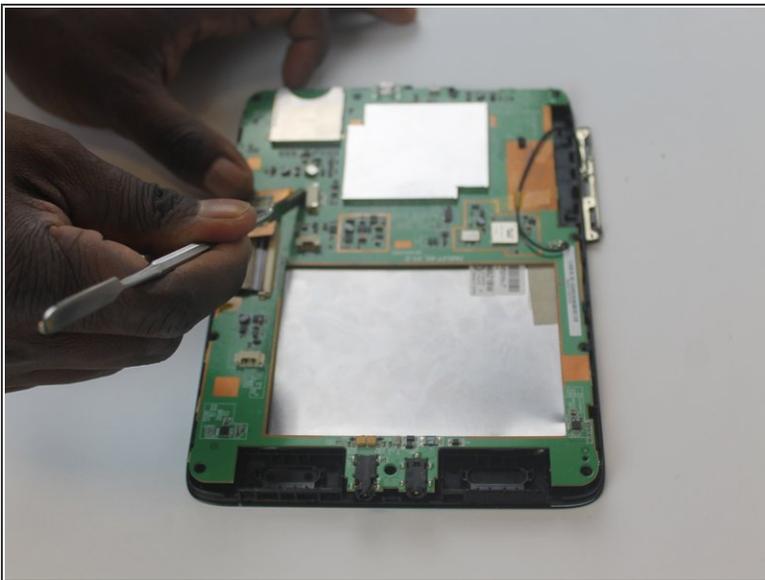

- Use a metal spudger to remove both screen cable connectors.

## Step 13

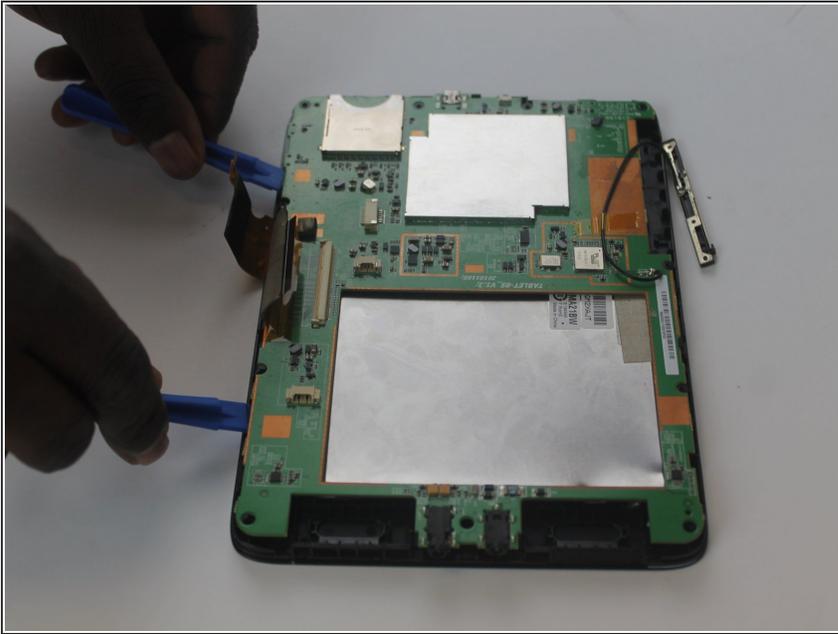

- use opening tools to remove the motherboard.

## Step 14



- Remove the motherboard cover to reach in the screen display.

To reassemble your device, follow these instructions in reverse order.