


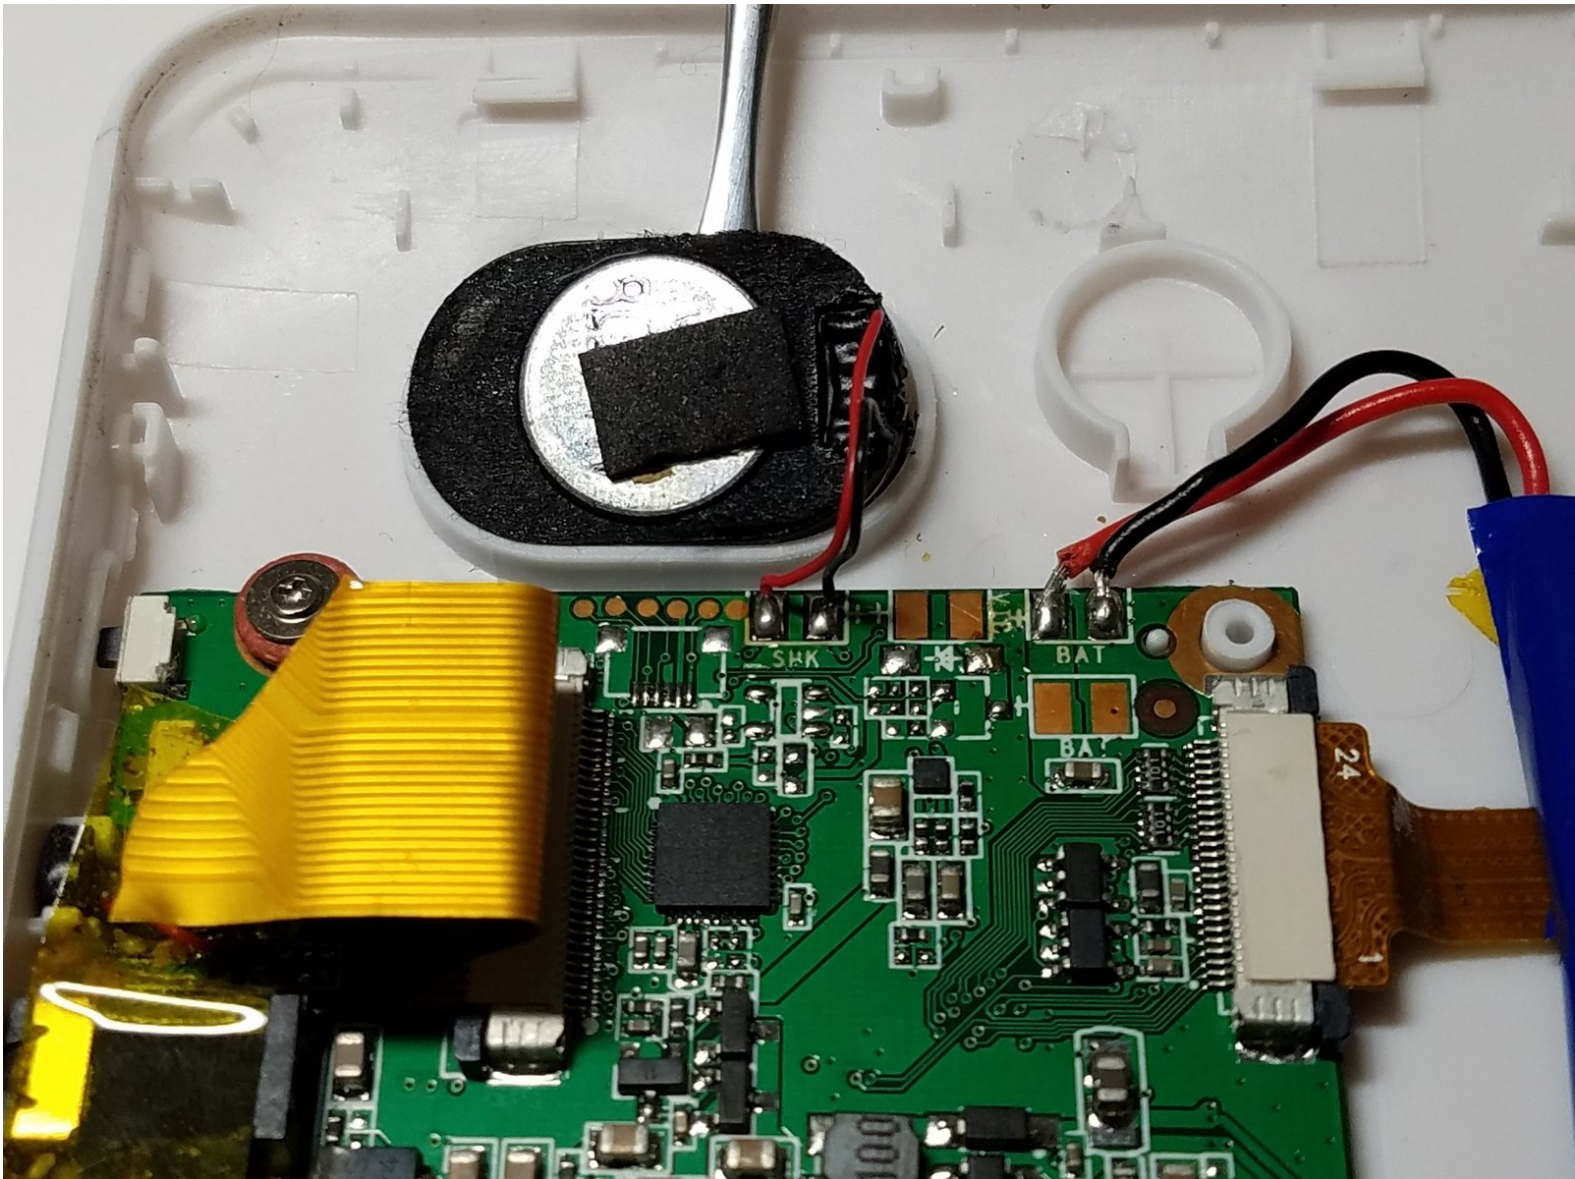

Uniden UTAB71 Speaker Replacement

Written By: Ryan Jewell



INTRODUCTION


This guide will explain how to replace the internal speaker of a UTAB71.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Precision Tweezers Set](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Speaker

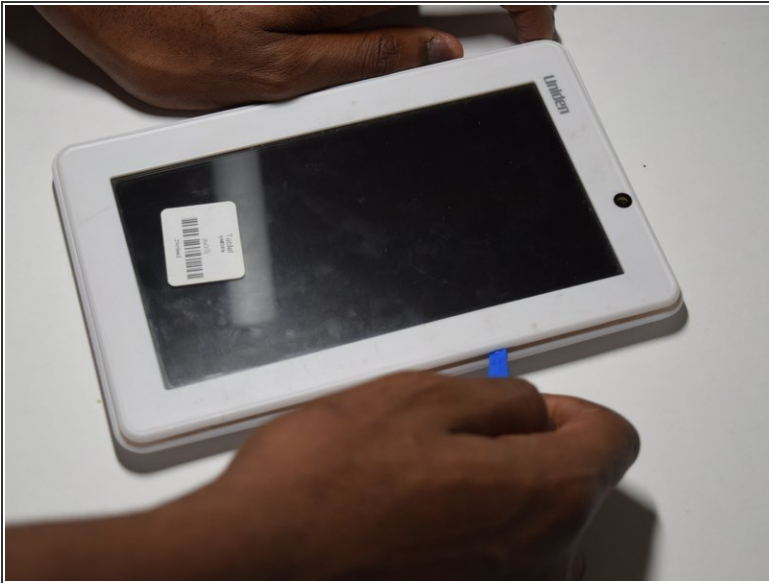

- Use a plastic pry tool to undo the clips that attach the two halves of the tablet.
- ⓘ Make sure to be gentle with the pry tool and work your way around the edges of the tablet slowly.
- ⚠ Make sure the tablet is powered off before prying open.
- ⚠ There are two power ribbons connecting the screen to the back of the tablet. Make sure not to put too much stress on them.

Step 2

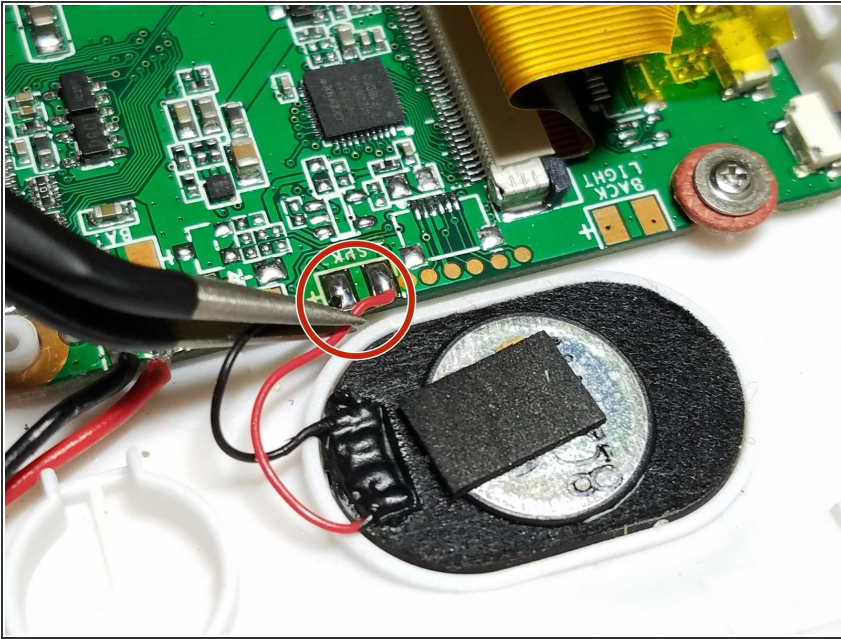

- Use a soldering tool to disconnect the speaker wires off the motherboard.
- ⓘ If you have no experience in soldering, please follow this [guide](#)

To reassemble your device, follow these instructions in reverse order.