




Uniden UTAB71 Camera Replacement

Written By: Ryan Jewell

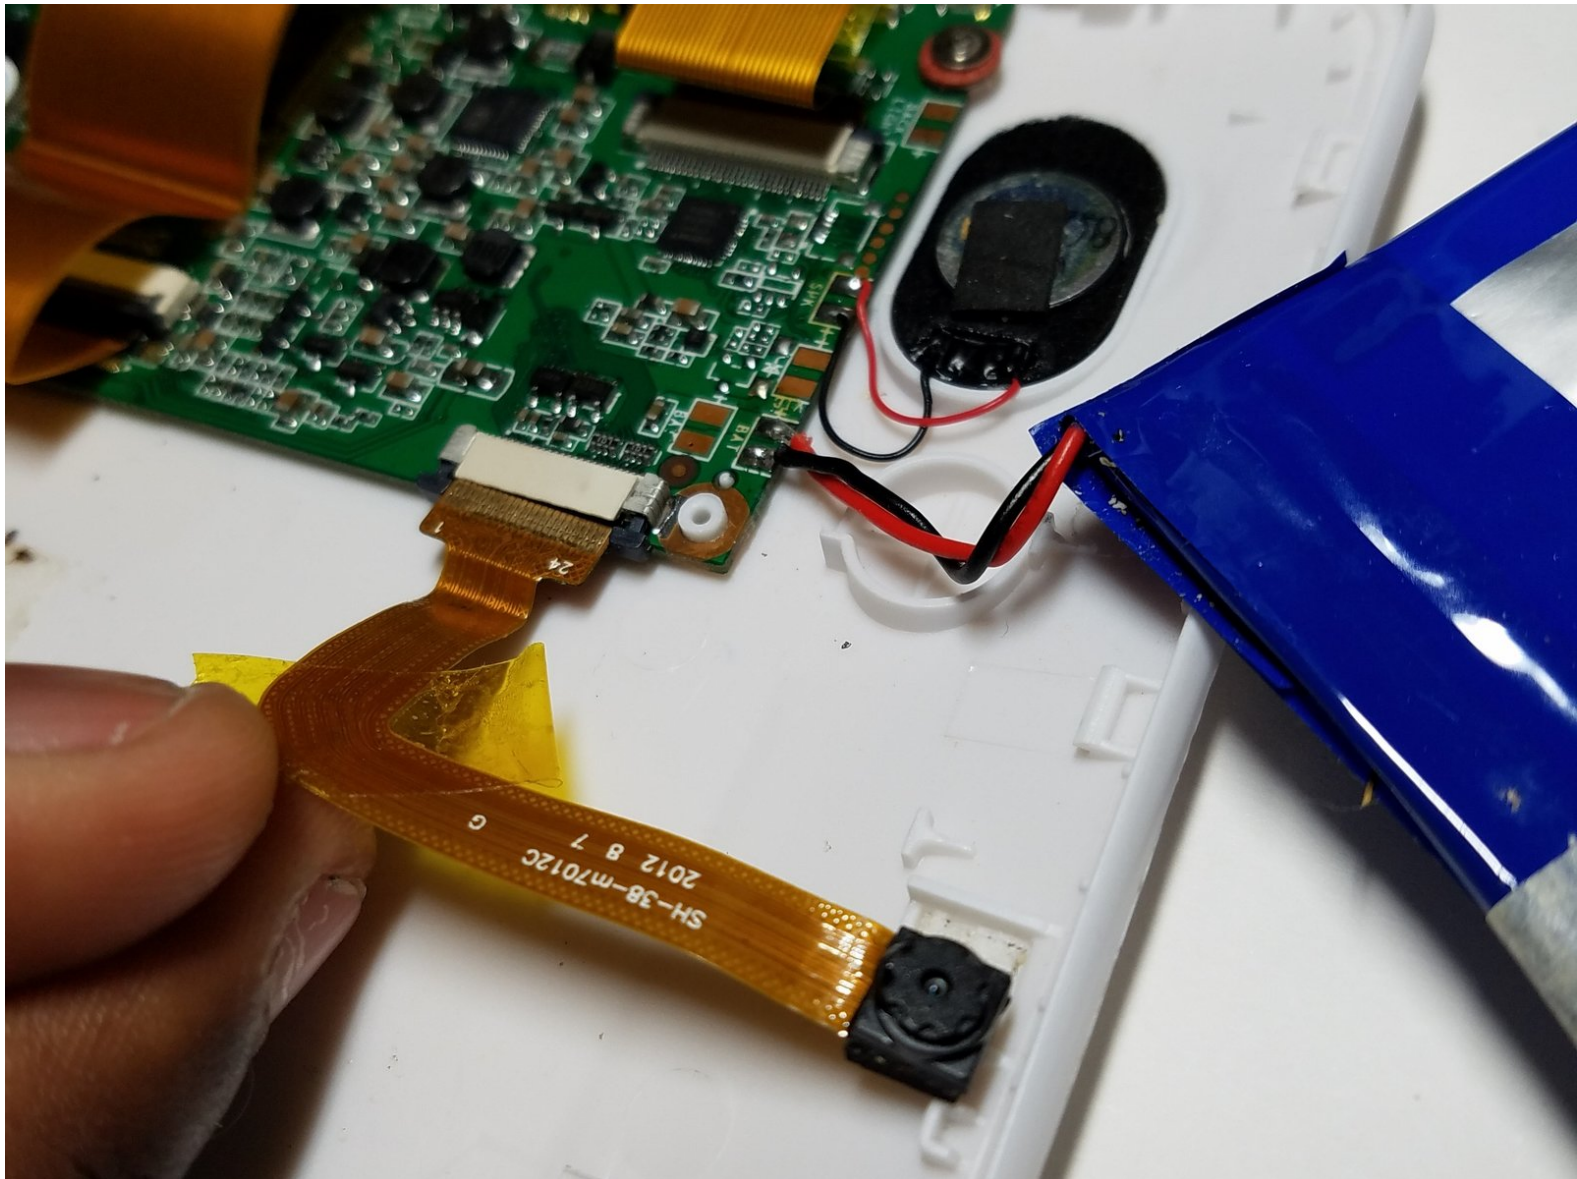

INTRODUCTION

This guide will explain how to replace the camera in this tablet. If there is any confusion about removing the battery, see the battery replacement guide.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Plastic Cards](#) (1)
 - [Solder](#) (1)
 - [Soldering Iron](#) (1)
 - [iOpener](#) (1)
-

Step 1 — Camera




- Use a plastic pry tool to separate the two halves of the tablet.
- ⓘ Make sure to be gentle with the pry tool and work your way around the edges of the tablet slowly.
- ⚠ Make sure the tablet is powered off before prying open.
- ⚠ There are two power ribbons connecting the screen to the back of the tablet. Make sure not to put too much stress on them.

Step 2

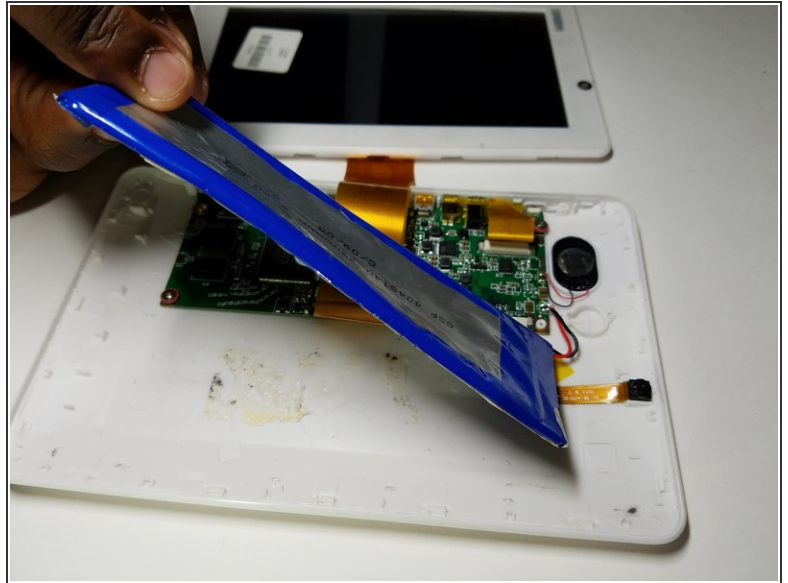


- Use a credit card to lift the battery off the back of the tablet.
- ⚠ Do not put any pressure on the motherboard or any other internal components.
- ⓘ The battery is glued onto the back of the tablet so make sure to apply as much pressure as needed

Step 3

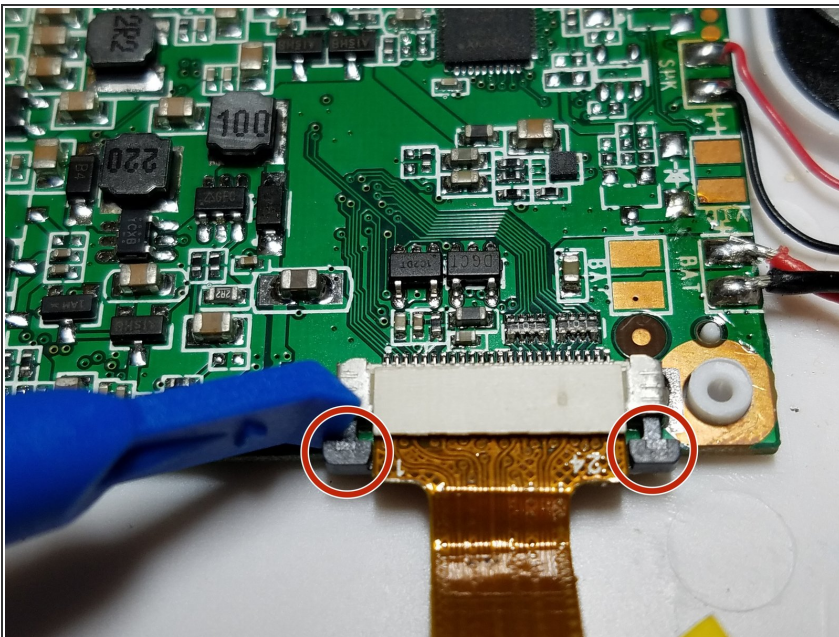

- Undo the clips off the power ribbon connecting the camera to the motherboard using the blue pry tool.

Step 4

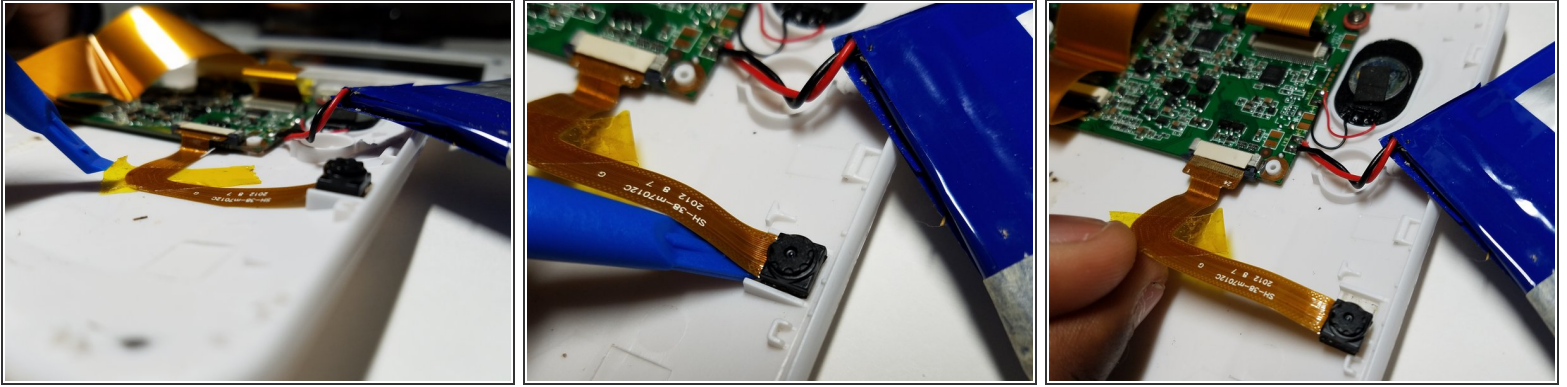

- Use the pry tool to remove the yellow tape from the power ribbon connected to the camera.
- Place the plastic pry tool under the camera component and lift it off the tablet.

To reassemble your device, follow these instructions in reverse order.