



Uniden UTAB71 Screen Replacement

Written By: Ryan Jewell



INTRODUCTION


This guide will explain how to replace the screen of a UTAB71.



TOOLS:


- [iFixit Opening Tools](#) (1)
-

Step 1 — Screen

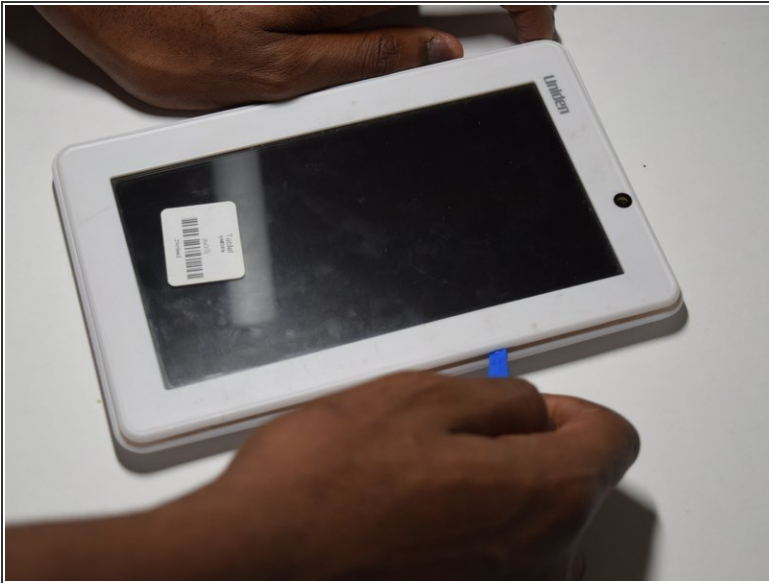


- Use a pry tool to undo the clips that attach the two halves of the tablet.
- ⓘ Make sure to be gentle with the pry tool and work your way around the edges of the tablet slowly.
- ⚠ Make sure the tablet is powered off before prying open.
- ⚠ There are two power ribbons connecting the screen to the back of the tablet. Make sure not to put too much stress on them.

Step 2

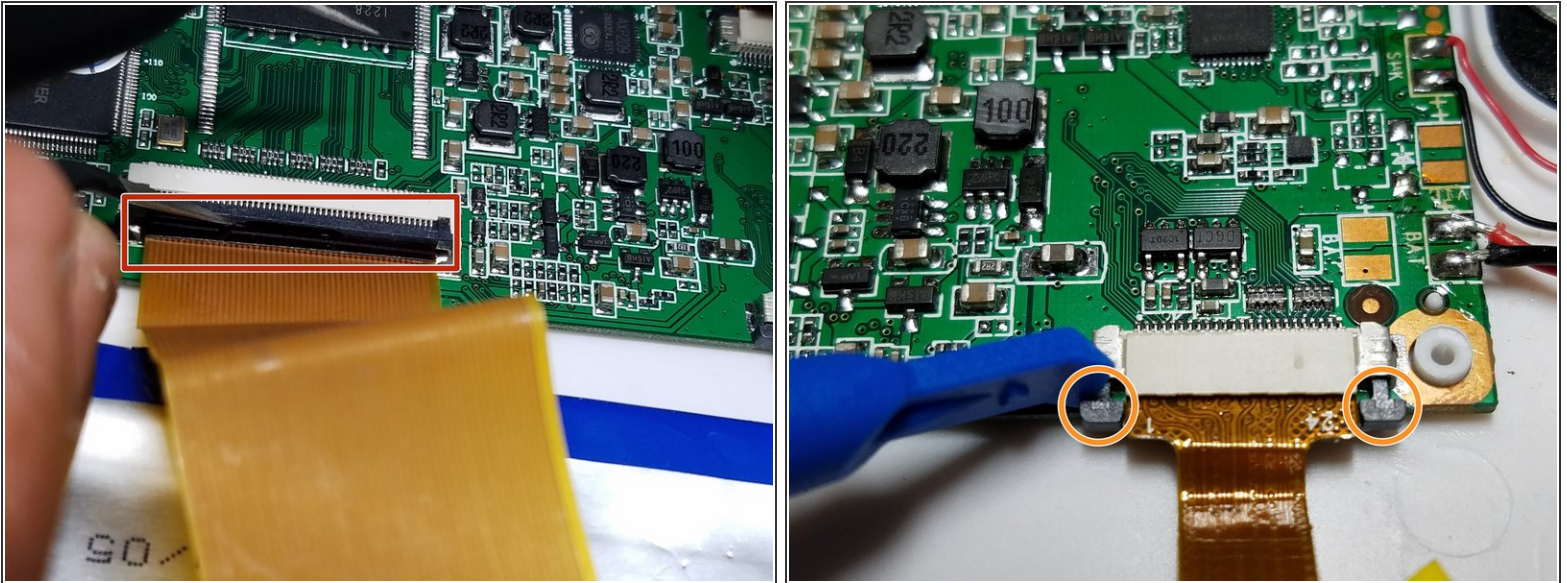

- Lift off the black clip connecting the first power ribbon to the motherboard
- Undo the clips off the second power ribbon connecting the screen to the motherboard.

Step 3

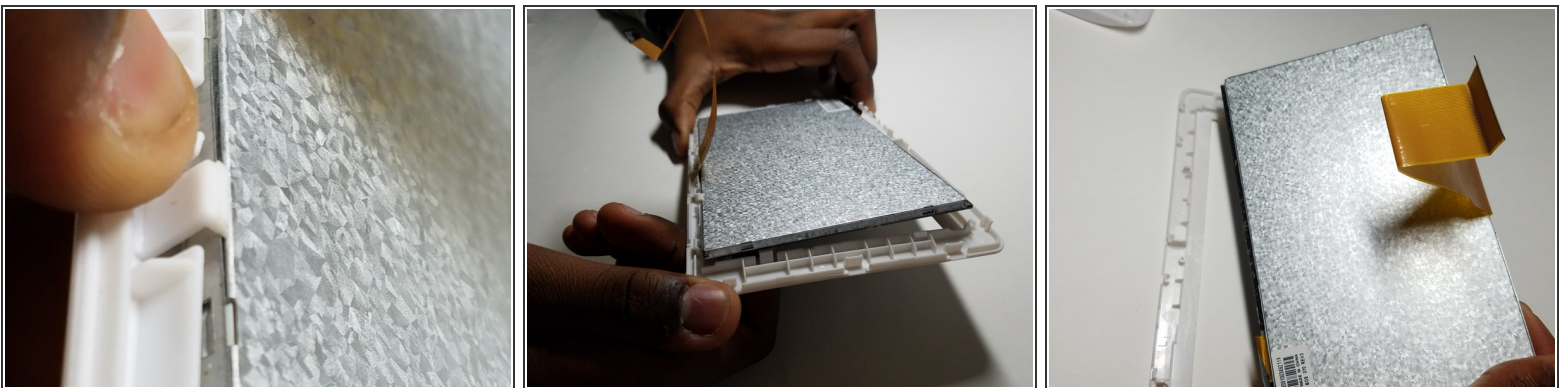

- Slowly remove the screen component off the tablet by clipping the screen from the tablet outline
- ⚠ Do not apply too much pressure on the tablet casing.

To reassemble your device, follow these instructions in reverse order.