




Garmin Dezl 770LMT Speaker Replacement

Written By: Francisco Rosado

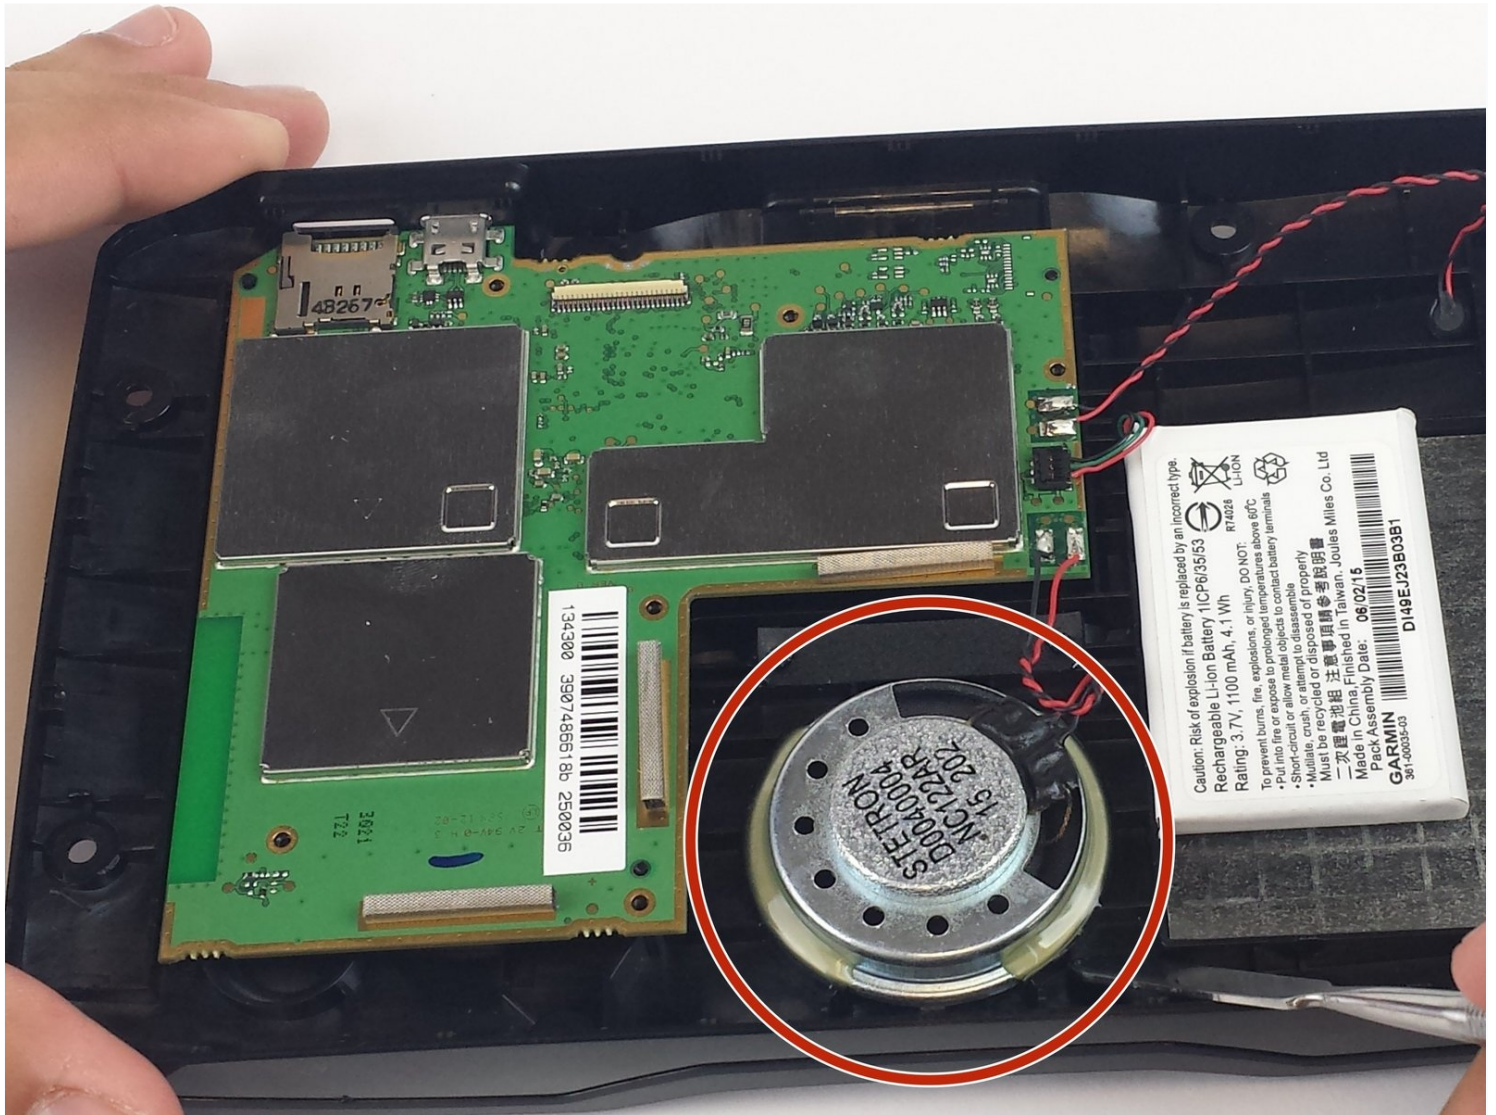

Caution: Risk of explosion if battery is replaced by an incorrect type.
Rechargeable Li-Ion Battery 11CP6/35/53
Rating: 3.7V, 1100 mAh, 4.1 Wh
To prevent burns, fire, explosions, or injury, DO NOT:
• Put into fire or expose to excessive heat.
• Short-circuit or attempt to disassemble.
• Mutilate, crush, or dispose of improperly.
Must be recycled or disposed of properly.
一次電池組 注意事項請參閱說明書
Made in China, Finished in Taiwan, Joules Miles Co. Ltd.
Pack Assembly Date: 06/02/15
GARMIN
361-00035-03
D148EJ23B03B1

TOOLS:

T6 Torx Screwdriver (1)

Metal Spudger (1)

Step 1 — Back Panel Removal



- Turn the device screen down and using the screwdriver remove all eight screws from the back plate.

Step 2



- Place a nylon spudger in the seam between the front and back panel and carefully lift around the edge of the device.


Step 3



- Use the spudger to pry apart the screen from all around the device.

⚠ Gently lift the screen so not to disconnect the ribbon attaching the screen to the motherboard.


Step 4 — Speaker

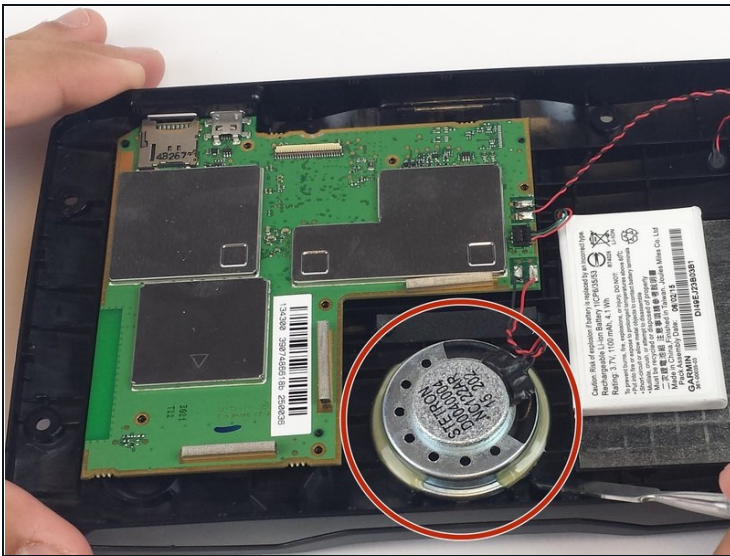

- Using the sharp side of the spudger, scrape away the adhesive surrounding the speaker.
- Slide the spudger beneath the speaker and pull it away from the case.

⚠ The regular black nylon spudger should be used whenever possible, especially around sensitive internal components.

Step 5

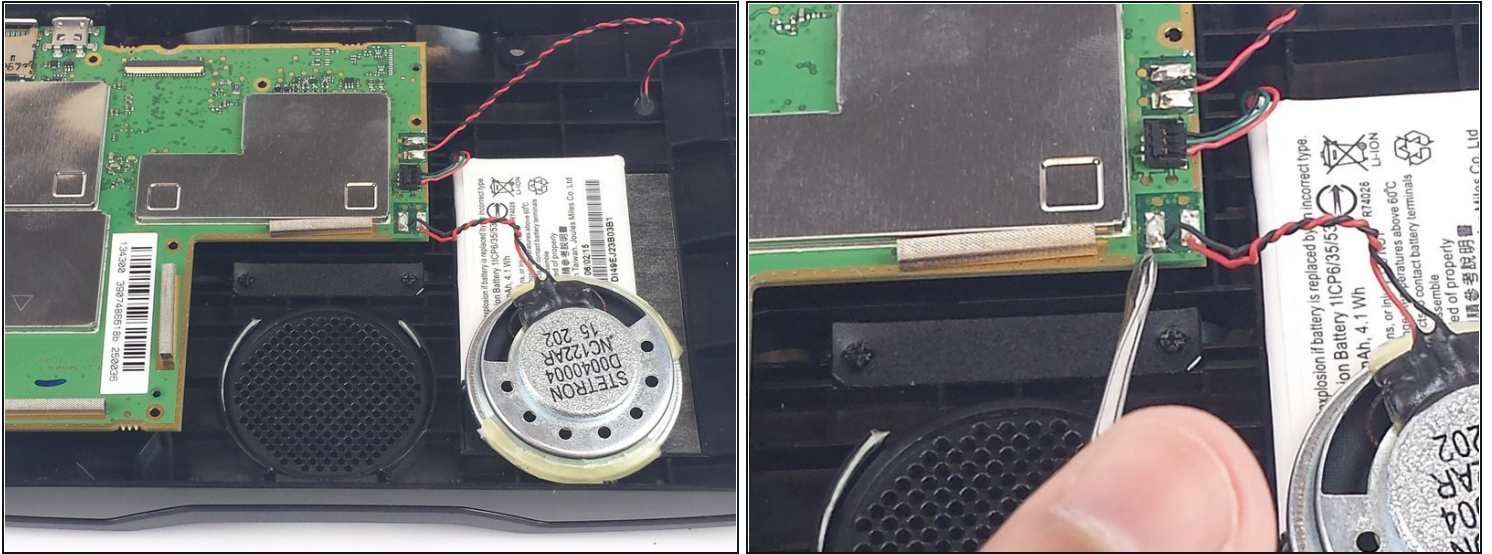

- Grasp the wire connecting the motherboard and pull the wires connecting it.

⚠ Remember to wear an [anti-static wrist strap](#) when handling the motherboard.

To reassemble your device, follow these instructions in reverse order.