




# Sony Vaio PCG-31311L Keyboard Replacement

This guide will show how to remove the keyboard from the device.

Written By: Tyler

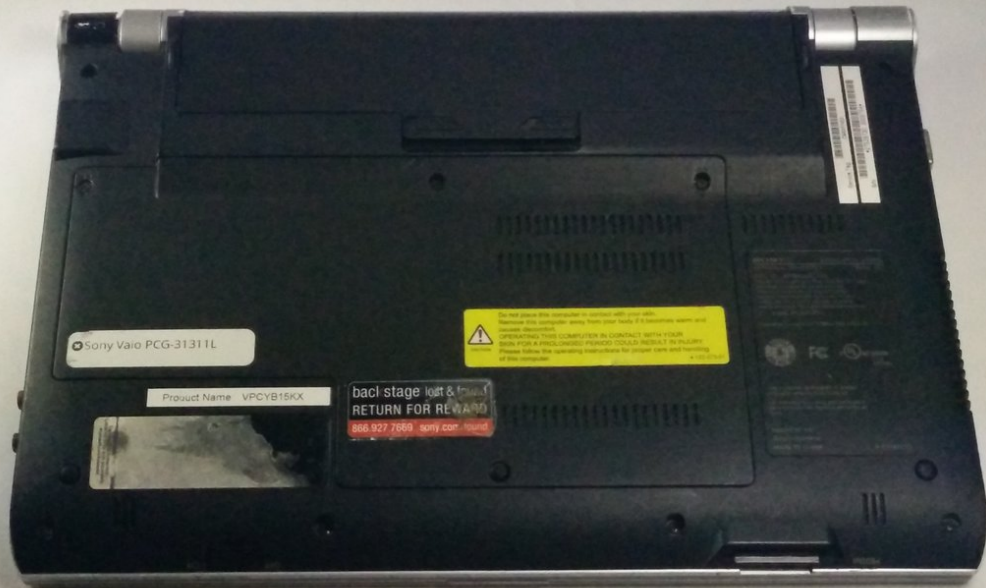




## TOOLS:

- [iFixit Opening Tools](#) (1)
-

## Step 1 — Keyboard

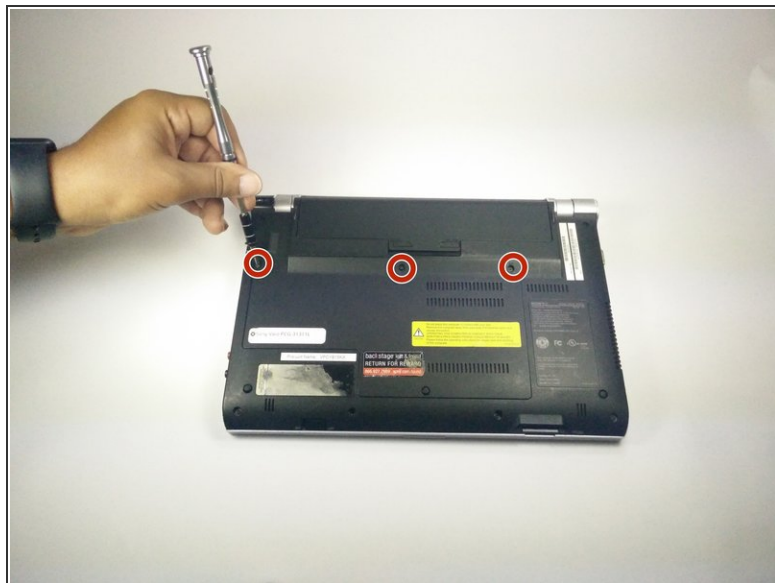


- Start with device closed, powered off, and upside down.
- Locate 3 screws on the bottom plate and unscrew
- ⓘ These screws do not detach from the bottom plate.

## Step 2





- Use a plastic opening tool to pry up on the plate and remove from device.

## Step 3

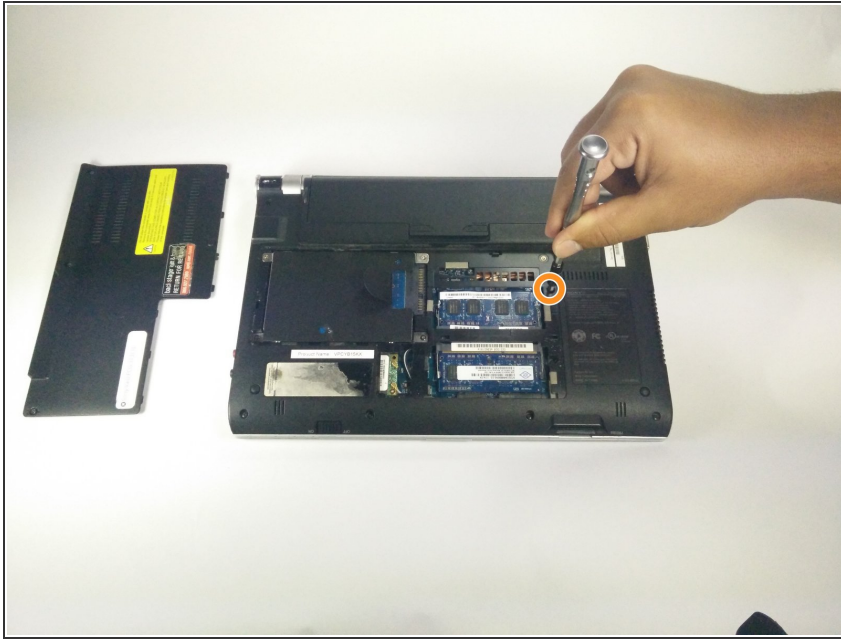

- Locate screw labeled "KB" and remove.


## Step 4

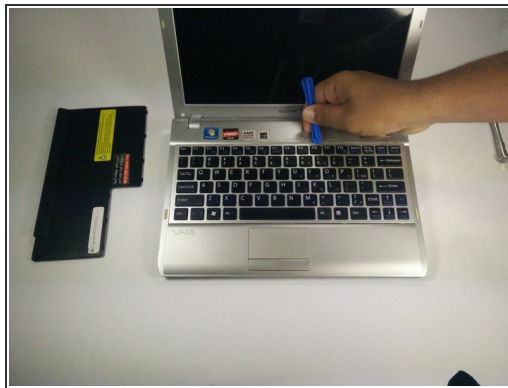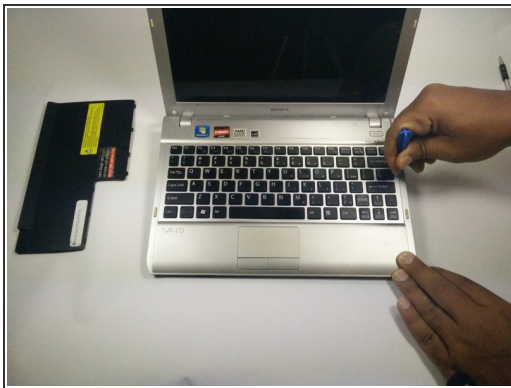

- Use a plastic opening tool tool to pry around the edge of the keyboard.



## Step 5

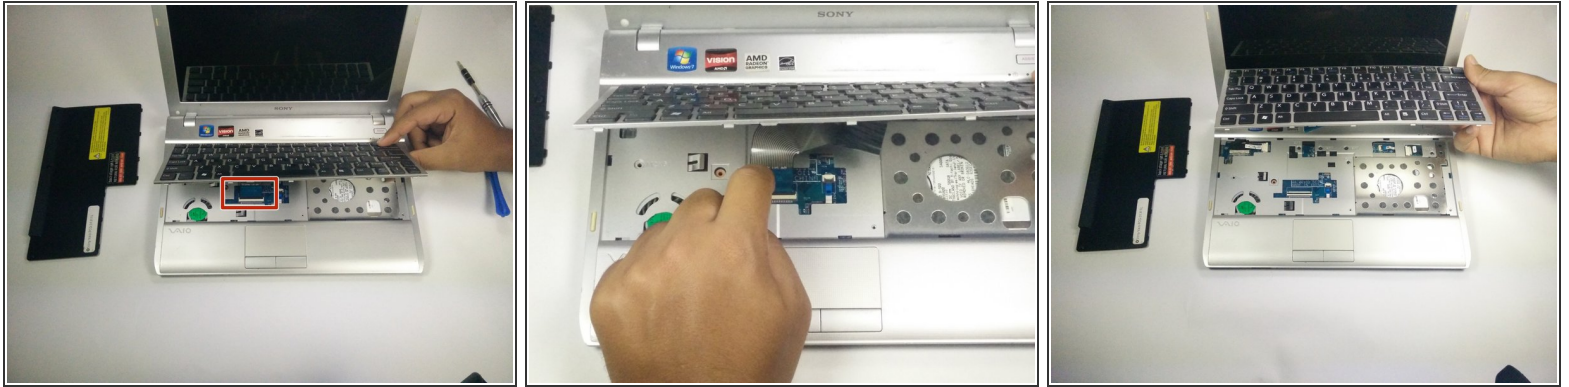

- Once detached, tilt the keyboard forward, exposing a blue ribbon cable.
- Place finger on black tab and pull back. Then, give a gentle tug on the ribbon cable and it will detach.
- Once the ribbon cable has been detached, lift the keyboard away from the device.

To reassemble your device, follow these instructions in reverse order.